User Guide —Multiple Color Fires

Magic Fires Here...



3D Water Vapor Fireplace








Japan: Ministry of Internal Affairs and Communications (MIC)



Korea: Korea Certification (KC) Europe: Conformite Europeenne (CE)

Art Fireplace Technology Limited.

PROFESSIONAL INTELLIGENT FIREPLACE LEADER Official Website: http://www.art-fire.com Phone:0086 13928878187 E-mail:info@art-fireplace.com Address:FLAT/RM 705,7/F,FA YUEN COMM BLDG NO.75,FA YUEN STREET,MONG KOK,KLN,HK www.art-fire.com

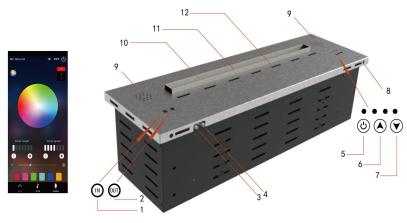

1.Water In Button 2.Water Out Button 3.Water In Tube 4.Water Out Tube 5.On/Off 6.Flame High 7.Flame Low 8.Air In Hole 9.Loudspeaker 10.Led Bulbs 11.Vapor Out Hole 12.Air In Hole

Multiple Color Vapor Fire With App

Multi-Color 3D Water Fires Functions:

- Easy Control: Button ON/OFF and Smartphone Control
- 24V Low Voltage
- Material in stainless and MDF
- Flame Height Adjustable
- Flame Speed: Adjustable
- Flame Multiple Colors
- Music Player
- LED Light
- Automatic Fill The Tank
- Automatic Drainage system
- Connect to water pipe system
- Green Energy Conservation
- Over-flow protection function
- Over-voltage protecting and power leakage protecting functions

3D Water Vapor Fire Model AFW80 with 81cm Long 3D Water Vapor Fire Model AFW100 with 101cm Long 3D Water Vapor Fire Model AFW120 with 121cm Long 3D Water Vapor Fire Model AFW150 with 151cm Long 3D Water Vapor Fire Model AFW180 with 181cm Long 3D Water Vapor Fire Model AFW200 with 201cm Long 3D Water Vapor Fire Model AFW230 with 231cm Long 3D Water Vapor Fire Model AFW230 with 231cm Long 3D Water Vapor Fire Model AFW280 with 281cm Long 3D Water Vapor Fire Model AFW280 with 281cm Long

Any Customized Sizes and Shape are Available.



Before any use, please read the User Guide.

This apparatus is manufactured to have intermittent functioning.

Use your device only in well ventilated areas.

Installing the fireplace horizontally (check it with a spirit level).

2.TECHNICAL CHARACTERISTICS OF THE DEVICES

Reference	Output	Consumption	Tank	Dimensions	Weight	Minimum	
Reference	(Watts)	(Litre/hour)	capacity	L x W x H	(Kgs)	volume *	
			(Liters)	(cm)		(m3)	
Single Color Models							
AFW80	80	0.17	2.1	81*25*22	23	90	
AFW100	100	0.20	2.7	101*25*22	27	120	
AFW120	120	0.25	3.5	121*25*22	36	150	
AFW150	150	0.30	4.7	151*25*22	45	180	
AFW180	180	0.35	5.9	181*25*22	54	210	
AFW200	210	0.40	6.5	201*25*22	65	250	
AFW230	240	0.50	7.5	231*25*22	75	300	
Multi-color Models							
AFW80	110	0.17	2.1	81*25*22	23	90	
AFW100	130	0.20	2.7	101*25*22	27	120	
AFW120	150	0.25	3.5	121*25*22	36	150	
AFW150	185	0.30	4.7	151*25*22	45	180	
AFW180	215	0.35	5.9	181*25*22	54	210	
AFW200	245	0.40	6.5	201*25*22	65	250	
AFW230	285	0.50	7.0	231*25*22	75	300	

*Minimum volume of room advised (m3)

Device equipped volts-100/240 V AC 50-60 Hz.

Device equipped with some spare parts.(Handles, Plastic Tube, Vapor Maker etc...)

3. PREPARATION OF THE DEVICE BEFORE USE


Remove the packaging of your device.

Keep the plastic tube, handles, power adaptor, etc


Verify that there is no objects in the device. Remove it if necessary.


Devices MUST BE mounted on the wall, fixed on the ground or built-in.

www.art-fire.com

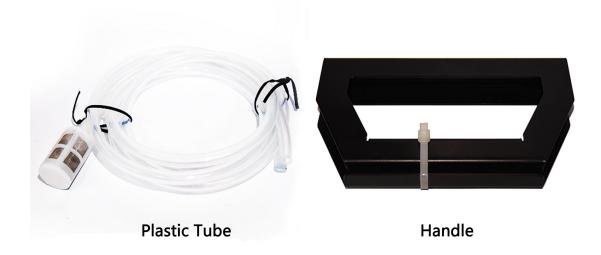


• Fireplaces installation

 

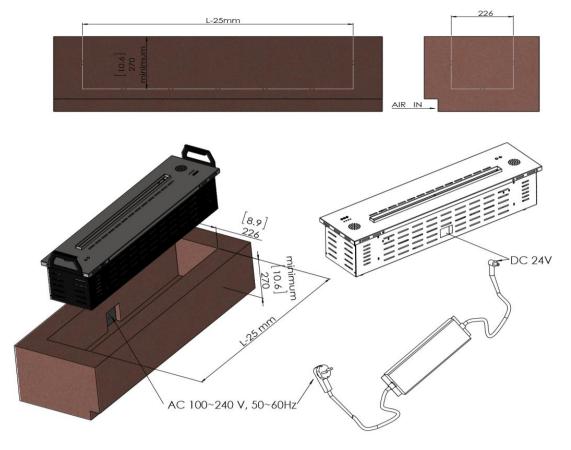

Art Fireplace Technology Limited

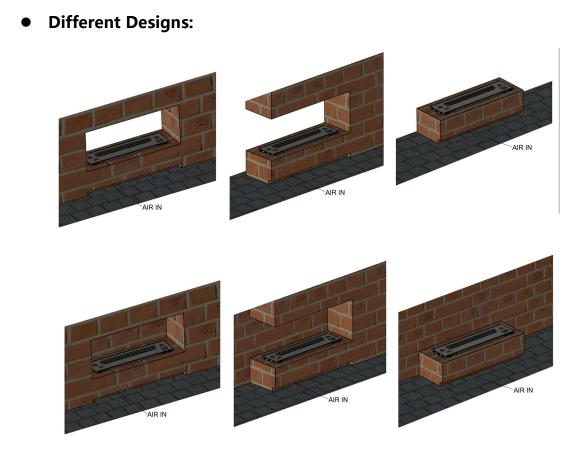

A mounting bar with holes is supplied with wall fireplaces

Use a spirit level to ensure that the bar is straight; fix it by using appropriate screws according to the type of chosen wall.

With the help of another person, hang the fireplace in position.


Burners Installation

Build-in the burners according to the flame level. Check that the fireplace has a right level by using a spirit level.

4. SPECIAL PRECAUTIONS FOR INSTALLATION

- Check that the fireplace has a right level by using a spirit level.
- Do not put objects on the device when functioning.
- Leave a free access to the control buttons.
- Do not use in a room with draught.
- RGB Range

Installation methods

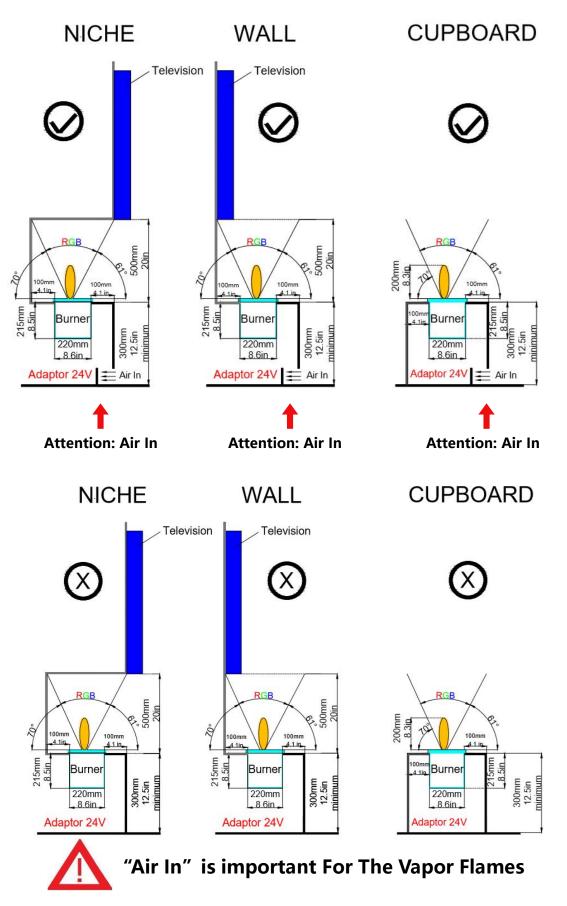

Art Fireplace Technology Limited

5.POWER SUPPLY CONNECTION


Before positioning, the device must be connected with the socket to the power supply.

Each unit is equipped with a power plug. EU Plug/UK Plug/US Plug/AU Plug etc... 100V-240V Power available.

6.FILLING OF THE TANK

About Filling the tank, We use "Water In" function.


Prepare a container with pure water inside, one side of the plastic tube connect to the external tube "IN" and another side in the pure water container, keep pressing the Button "IN" for 4 seconds, the left button "IN" will turns Blue and the pump will automatically pump water into the tank. And pump will stop automatically when water comes to the maximum level.

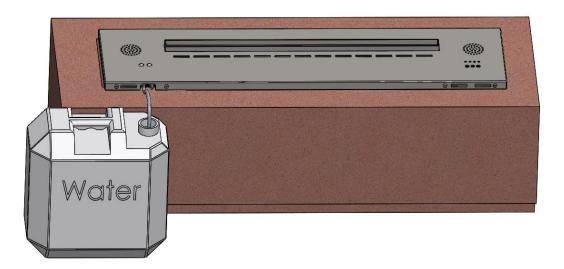

Notice:

- NEVER fill the burner directly. ALWAYS the water in filling nozzle of the burner.
- Use only pure water.
- Once the maximum level is reached: a BIP is emitted by the electronic gauge.
- The **"Water Out"** function is for pumping the water out from the tank.Keep pressing the **"OUT**" Button 4 seconds to start.
- If long time no use the fireplace, please drain out all the water.

7.INSTRUCTION OF USE

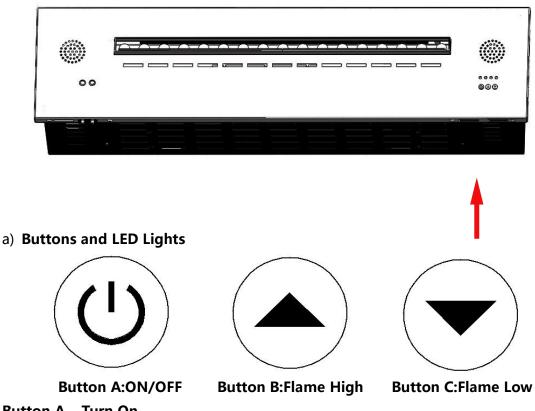

Button A-- Turn On

Turn On/Off the device only with the switch ON/OFF Button or the App.

Before turning on the burner, make sure there is enough water inside the burner.

Keep Pressing the Button A on the Unit For 4 SECONDS or press on the App, the Lights will automatically light on. After 1 second Water Flame will take place. Never directly fill up the burner.

Button A-- Turn Off

Shut down the device with the switch Button A on the unit or Press on the App, The burner will turn Off.


Button B-- Flame High

Button C-- Flame Low

8.FUNCTIONING MESSAGE

$\begin{array}{c} A B C D \\ \hline \odot \odot \odot \odot \\ \hline \end{array} \\ \begin{array}{c} \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\$						
Light	Light OFF	Light On				
Α	Device is not connected to	Device is connected to power				
	power supply.	supply.				
	Lack Of Water. Device can	Lowest water level in the				
В	not work.Please Add water	tank.				
	into the tank.	Device can work.				
	Less than Middle Water	Middle Water Level in the				
C	Level in the tank.	tank.				
	Device can keep working.	Device can work.				
	Less than Maximum Water	Maximum Water Level in the				
D	Level in the tank.	tank.				
	Device can keep working.	Device can keep work.				

9. CONNECT TO WATER PIPE

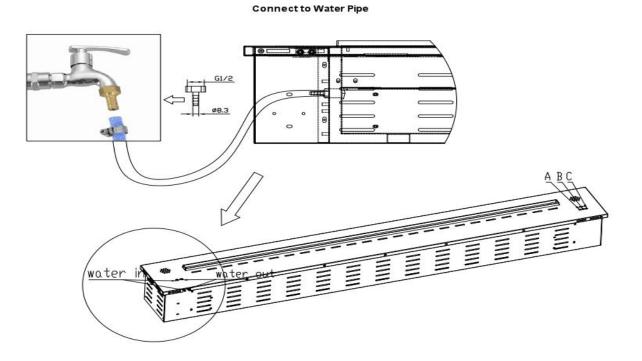

Art Fireplace Technology Limited

10. App Controller


Scan the QR code to download the App





3D FIRE--ios

3D FIRE--Googleplay

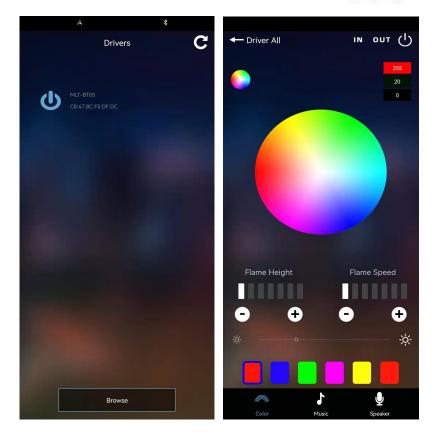

11. MAINTENANCE AND CLEANING

- Only use pure water.
- Clean the burners with a soft rag or cloth.
- Some components are determining the safety and the functioning of your device.
- Use Water Out to discharge the water out absolutely.
- If you want to take the device to another place, please confirm there is no water in the device.
- If you will not use it for more than 10days, please use Water Out to discharge the water out from the burner to keep the tank inside clean.

Their replacement may modify the performances of your device. Only original components must be used during the operations of maintenance, or reparations. This maintenance must only be operated by specialists.

Failure to observe this operating manual and its operating instructions as well as unauthorized tampering with the device releases us from any liability and also invalidates the warranty covering the devices and accessories.

12.COLORS OF THE PANEL AVAILABLE





www.art-fire.com



Thank you For Reading.

Art Fireplace Technology Limited.

PROFESSIONAL INTELLIGENT FIREPLACE LEADER Official Website: http://www.art-fire.com Phone:0086 13928878187 E-mail:info@art-fireplace.com Address:FLAT/RM 705,7/F,FA YUEN COMM BLDG NO.75,FA YUEN STREET,MONG KOK,KLN,HK