

LED SIGN MANUAL (How to connect one set antenna for Cloud)

Version 3.0

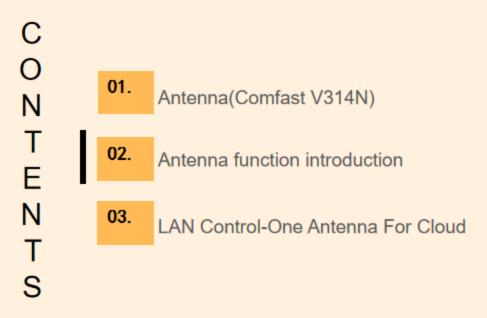

1.Antenna(Comfast V314N)




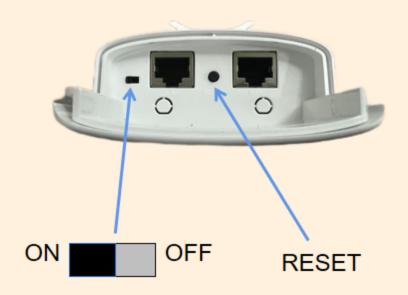



POE Power Adapter

2. Antenna function introduction

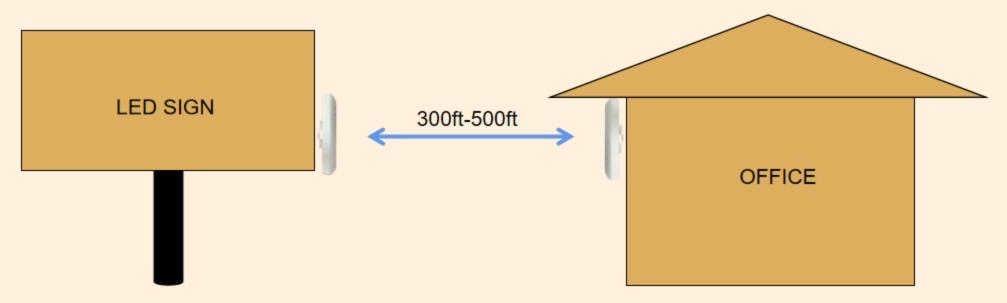

LAN control:


The antenna bridge has a theoretical transmission distance of 500ft and an actual transmission distance of 300ft.

Internet VNNOX control:

Supports setting the antenna to connect to the building Internet router. Then use Internet control for ultralong-distance control. No monthly SIM Card data charges required

Antenna Hanging On LED Sign Diagram

POE Power Adapter

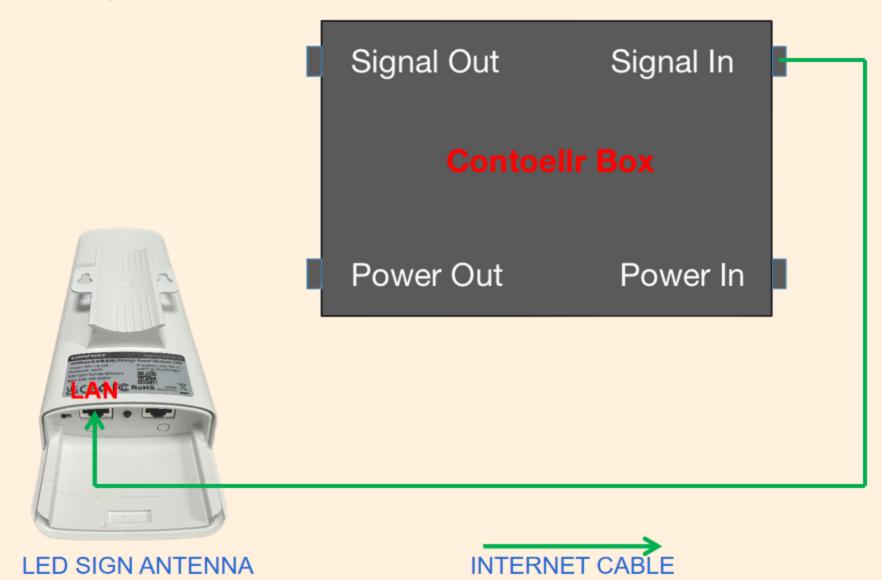


Antenna For LED Sign Configuration Setting


- 1, Connect all antenna cables to led sign and customer office
- 2, Connet antenna of led sign wifi, wifi name is COMFAST_XXXX (No password)



 
3, Open the browser and enter the URL (website): 192.168.10.1




4, You can choice English version interface, And enter password: admin

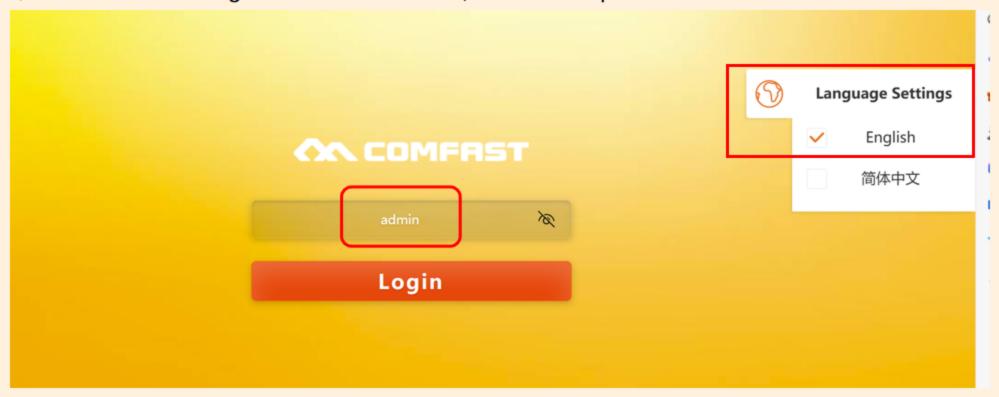

5, Click "Wizard"

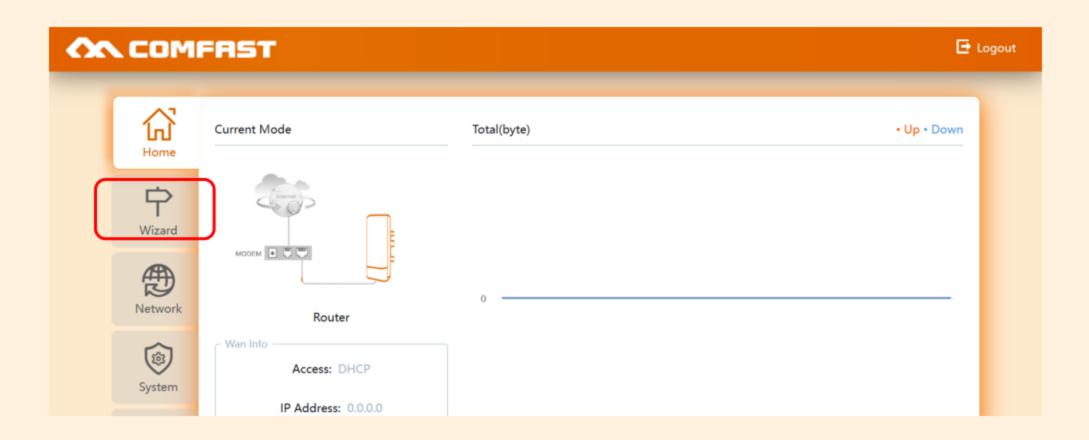


6, Click "Repeater"

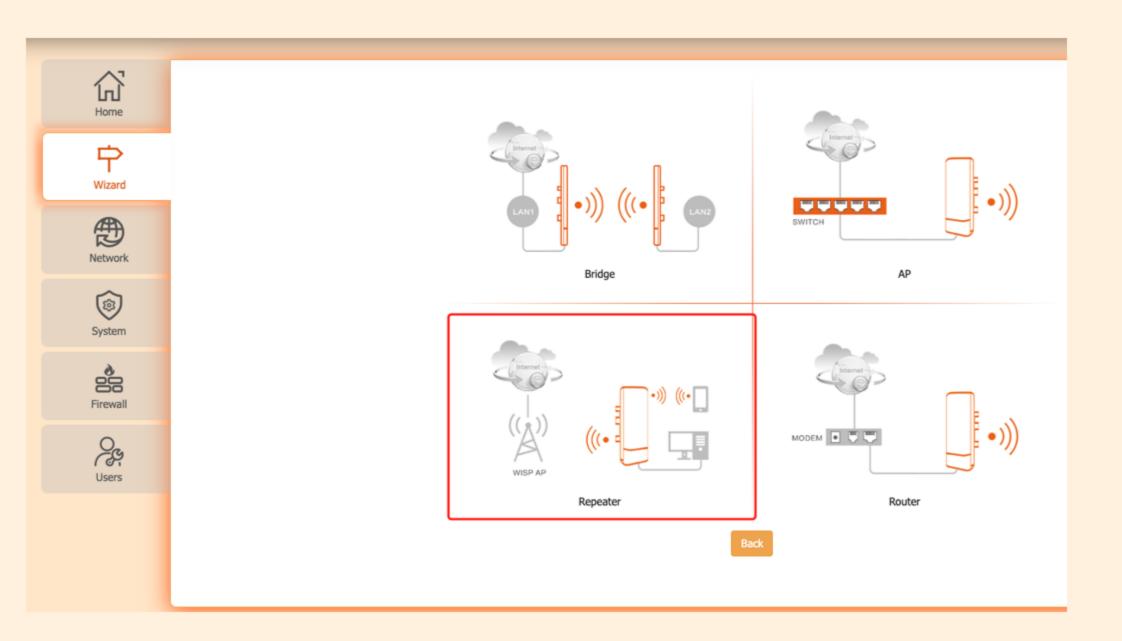


7, Click "Next"



8, Click "Scan"

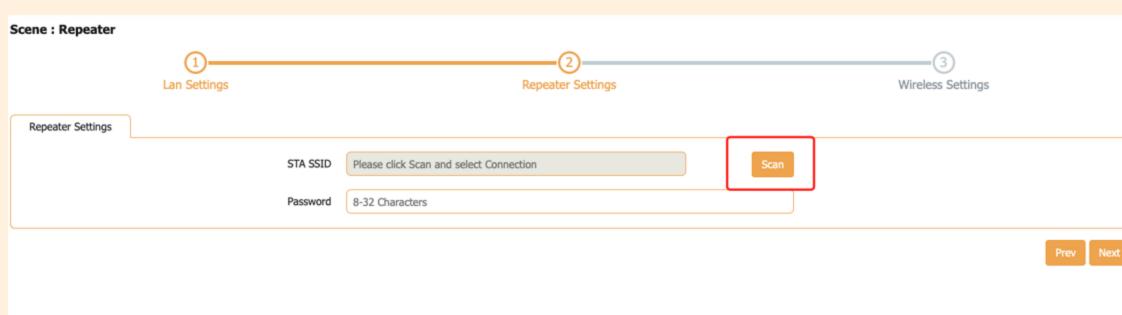


9, Choice customer WIFI and enter WIFI password. Then click "Next"

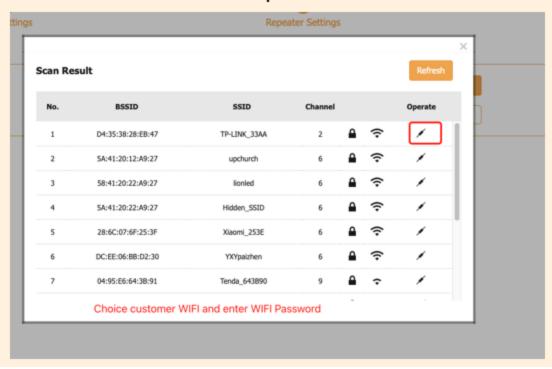



10, Creative wifi name and password. Then click "Finish"

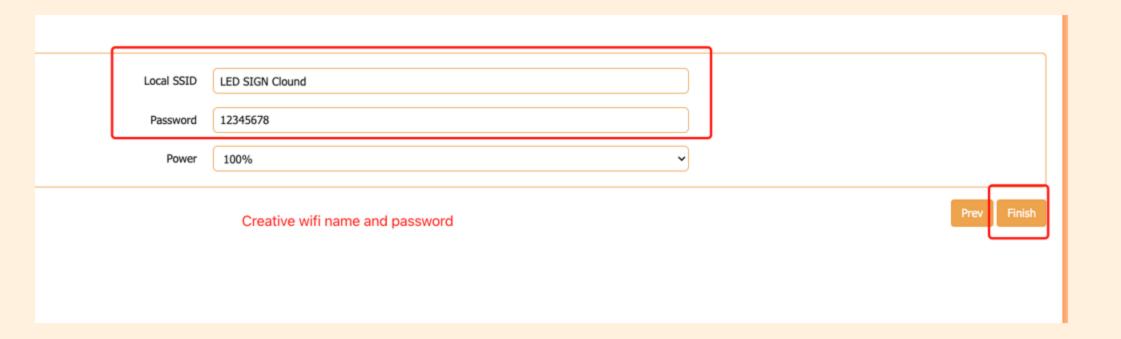

11,Last restart led sign , And follow led sign manual for cloud control

THANK YOU