



Features

- Good quality Aluminum with hollow design, die-casting technology, good heat dissipation.
- Patented thermal management allows -30°C to 50°C ambient operating temperature
- 5 years warranty period of up to 50,000 hours of service life
- Installation: round pole

Note: Save these instructions for future reference.


Application

Site, area, road and other lighting applications; ideal for large retailers, commercial to medical properties, and big box retailers. And suitable for roadways.

Specification

SKU	SL060	SL120
Power	60W	120W
Power Factor	>0.90	>0.90
Net Weight	9.5 kg	10.0 kg
Holder (mm)	Ø60mm	Ø60mm
Input Voltage	100~277 VAC; 50Hz/60Hz	
Working Temperature	-30°C ~ +50°C	
Working Humidity	15%~90% RH	
IP Rated	IP66	
Warranty	5 years	

Dimension(unit:mm)

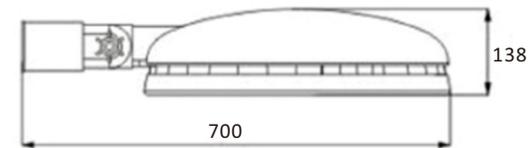

Maintenance Manual

1. Cut off power before maintenance, non-professionals do not open the lights!
2. Clean the glass of LED high bay light regular to keep good light transmission.
3. Clean the dusk on the surface and heat sink regular to keep good heat dissipation.
4. Do not use water or strong corrosive liquid to clean the lamp, dry cloth is better.
5. EU:Wiring instructions: the light body connected to the cable brown with "L", blue with "N", green/yellow with "G"; according to the color of the cable on behalf of a corresponding line!
US:Wiring instructions: the light body connected to the cable black with "L", white with "N", green with "G"; according to the color of the cable on behalf of a corresponding line!
as shown below:



! Notice

1. In case of fire, explosion, electronic shock, the install, inspect and maintenance must be operated by professional people.
2. Please make sure the power off before operation! Luminaries must be electronic grounding!
3. Please make the voltage supplied is available for the luminaries!
4. Please make the luminaries working under the limited working temperature!
5. In order to guarantee enough air convection, luminaries should not be installed in narrow space!


Warranty

1. All products use constant LED driver, LED chips, 5 years warranty. (under the condition that products are rightly kept, installed, used, and maintenance. Once the products fail because of improper used or installed or break the products operation manual, we are not responsible for this situation. We will repair or replace the broken products during the warranty. We will charge extra material and labor cost if over warranty.
2. Please read the instruction manual careful, all rights reserved.
3. All products are subject to change without notice.


Attention

The brack, pole ,screws on walls can bear more than three times weight of lamp itself.

Install Steps

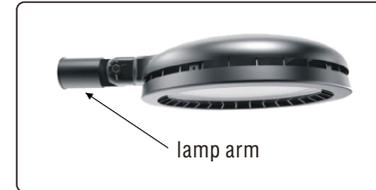

- 1 Remove the luminaire and mounting accessories and attach the lamp arm to the lamp body.

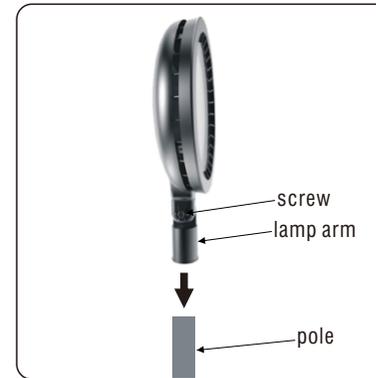

- 2 Connect the wires according to the wiring diagram on the left, then attach the lamp arm to the pole and lock the screws on the pole.



- 3 Adjust the illumination angle of the lamp body according to the lighting needs, and power on, and the installation is successful!