

Reminder

1. Please read this installation and maintenance manual before installation! Save these instructions for future reference!
2. Installation: Pole | Wall mounted

Warranty

1. The warranty period of this product is 5 years. If the product has quality problems during the warranty period, please contact us or our authorized dealer. We will repair or replace new products for you for free!
2. If the product is man-made damage or irresistible external environment damage such as natural disasters is not covered by the product warranty! If you need product repair or replacement service, please contact us or our authorized dealer, and we will charge the appropriate fee for the repaired or replaced product!
3. Products and services are subject to change without notice!


Application

Site, area, road and other lighting applications; ideal for large retailers, commercial to medical properties, and big box retailers. And suitable for roadways.

Specification

Model No.	SL050SZ
Power	50W
Net Weight	1.3 kg
Power Factor	PF>0.90
Spigot Size	Pole \varnothing45mm
Input Voltage	100-277 VAC; 50Hz/60Hz
Working Temperature	-30°C to +50°C
Working Humidity	15% to 90% RH
IP Rating	IP65
Warranty	5 years

Dimension (unit:mm)

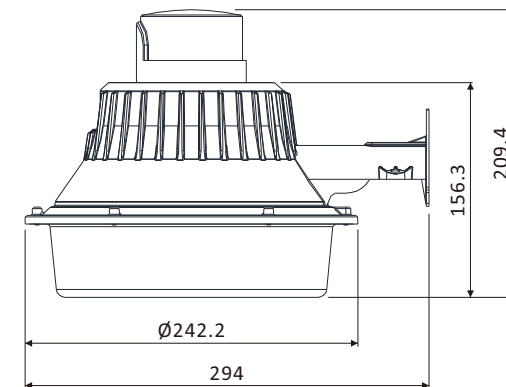

Maintenance Manual

Wiring with North American wiring and European wiring, as shown below:

European/Australian standard:




North American standard:



Warning


1. All installations of the lamps must comply with the national electrical codes and be carried out in compliance with local laws and regulations.
2. Before installing lamps and maintenance, you must cut off the power supply! During the installation of the lamp, it must be installed and operated by qualified personnel with relevant certificates! The object where the lamp is installed must be able to bear no less than 3 times the weight of the lamp!
3. Never modify the circuit and structure of the lamp, the lamp must be effectively grounded during installation!
4. Due to the high intensity of light generated when the lamp is turned on, do not direct the eyes when the lamp is turned on during close operation and maintenance!
5. The installer is responsible for verifying and recommending the installation structure of the luminaire, including poles, cross arms, walkway brackets and other installation structures, to ensure that the weight of the luminaire is supported, to bear the wind load, and to meet all other applicable codes and regulations.
6. Do not hang any objects with wires or control wires! The wires or control wires on the lamps cannot bear the weight.
7. Store the lamp in a clean and dry place, avoiding dust, moisture and direct sunlight.
8. When cleaning the lamp, please use a dry cotton cloth to wipe the optical lens or luminous surface of the lamp, and brush the other parts. Do not use any abrasives, such as car wax, brass cleaner or other polishing agents or chemicals!

Light Arm and Lamp Body Details (unit:mm)

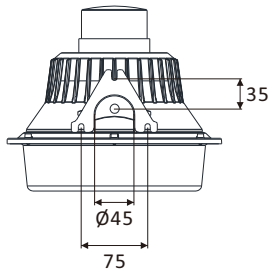

Install Step

Wall Mounted: Install directly on the wall and install on the wall with light poles!

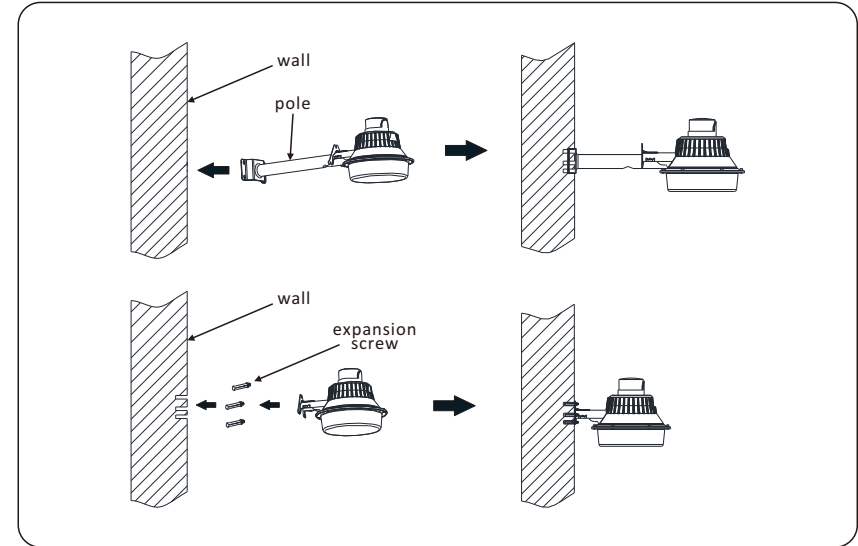

Precautions: Read the product installation guide carefully and connect the wires according to the wiring diagram on the previous page. The wall on which the lamp is installed must be able to bear no less than 3 times the weight of the lamp itself, and the lamp should not be installed in an unstable environment.

Pole Mounted: Arc light pole installation & vertical light pole installation.

