



Reminder

1. Please read this installation and maintenance manual before installation! Save these instructions for future reference!
2. Installation: Bracket.

Warranty

1. The warranty period of this product is 5 years. If the product has quality problems during the warranty period, please contact us or our authorized dealer. We will repair or replace new products for you for free!
2. If the product is man-made damage or irresistible external environment damage such as natural disasters is not covered by the product warranty! If you need product repair or replacement service, please contact us or our authorized dealer, and we will charge the appropriate fee for the repaired or replaced product!
3. Products and services are subject to change without notice!


Application

Warehouse; Industrial production workshop; Pavilion; Stadium; The train station; Shopping malls; Exhibition halls; Gas stations and other indoor lighting.

Specification

Model No.	GK2201-100	GK2201-150	GK2201-200	GK2201-240
Power	100W	150W	200W	240W
Net Weight	2.0 kg	2.9 kg	3.0 kg	3.2 kg
Power Factor	PF>0.95			
IP Rating	IP65			
Input Voltage	120 to 277 VAC; 50Hz 60Hz			
Working Temperature	-30°C to +40°C			
Working Humidity	15% to 90% RH			
Warranty	5 years			

Dimension(unit:mm)

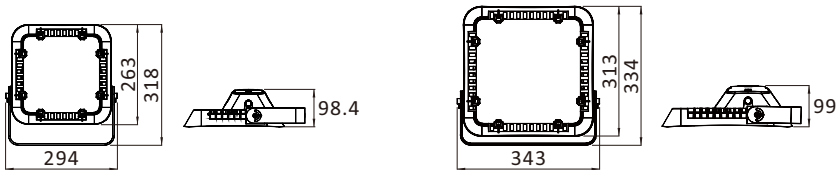

GK2201-100

GK2201-150|GK2201-200|GK2201-240

Wiring Diagram

Regular:

AC/N	blue	AC/N	white
AC/L	brown	AC/L	black
⊕FG	green/yellow	⊕FG	green


Dimmable:

DIM+	purple	DIM+	purple
DIM-	pink	DIM-	gray

Warning


1. All installations of the light must comply with the national electrical codes and be carried out in compliance with local laws and regulations.
2. Before installing light and maintenance, you must cut off the power supply! During the installation of the light, it must be installed and operated by qualified personnel with relevant certificates! The object where the light is installed must be able to bear no less than 4 times the weight of the light!
3. Never modify the circuit and structure of the light, the light must be effectively grounded during installation!
4. Due to the high intensity of light generated when the light is turned on, do not direct the eyes when the light is turned on during close operation and maintenance!
5. The installer is responsible for verifying and recommending the installation structure of the luminaire, including poles, cross arms, walkway brackets and other installation structures, to ensure that the weight of the luminaire is supported, to bear the wind load, and to meet all other applicable codes and regulations.
6. Do not hang any objects with wires or control wires! The wires or control wires on the light cannot bear the weight.
7. Store the light in a clean and dry place, avoiding dust, moisture and direct sunlight.
8. When cleaning the light, please use a dry cotton cloth to wipe the optical lens or luminous surface of the light, and brush the other parts. Do not use any abrasives, such as car wax, brass cleaner or other polishing agents or chemicals!

Bracket Description(unit:mm)

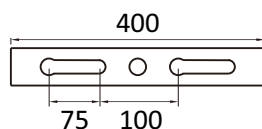


GK2201-150|GK2201-200|GK2201-240


Install Step

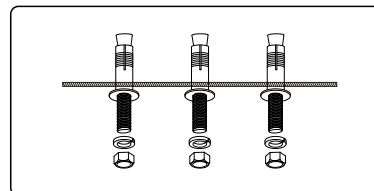


- 1 According to the size of the lamp holder hole size on the mounted object, make a hole and securely install the expansion screw on the object.

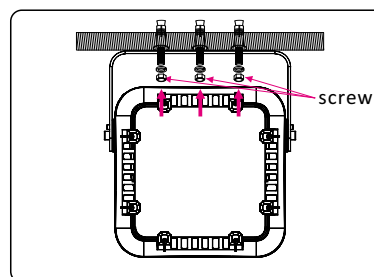

- 2 Install the bracket of the fixture in the screw of the solid part. As shown on the left.

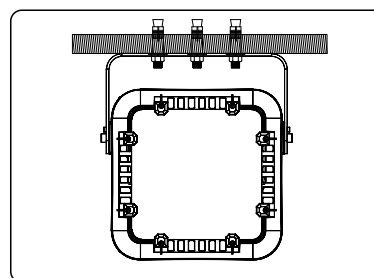

- 3 Tighten the nut on the screw to mount the fixture on a solid object.

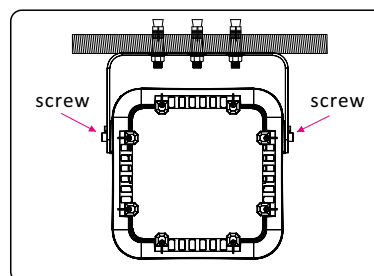

- 4 Connect the cables according to the wiring diagram on the left page and energize the lamps. Then adjust the screws on both sides of the lamp bracket according to the lighting angle.