

# User Guide

## —Single Color Fires

**Magic Fires Here...**



Multiple Information LCD Screen / Remote Control and Manual Buttons Control /  
Waterproof LED /  
Flame Height Adjustable / Flame Speed Adjustable / Connect To Water Pipe



U.S.: Federal  
Communications  
Commission (FCC)



Canada: Industry  
Canada (IC)



Japan: Ministry of Internal  
Affairs and  
Communications (MIC)



Korea: Korea  
Certification (KC)



Europe: Conformance  
Européenne (CE)

Jenny Art Fireplace  
WhatsApp



**Art Fireplace Technology Limited.**

**PROFESSIONAL INTELLIGENT FIREPLACE LEADER**


**Official Website: <https://www.art-fire.com>**

**Phone: 0086 13928878187 E-mail: [info@art-fireplace.com](mailto:info@art-fireplace.com)**

**Address: FLAT/RM 705,7/F,FA YUEN COMM BLDG NO.75,FA YUEN  
STREET,MONG KOK,KLN,HK**

**YouTube <https://www.youtube.com/@artfireplace>**

**Art Fireplace Technology Limited**

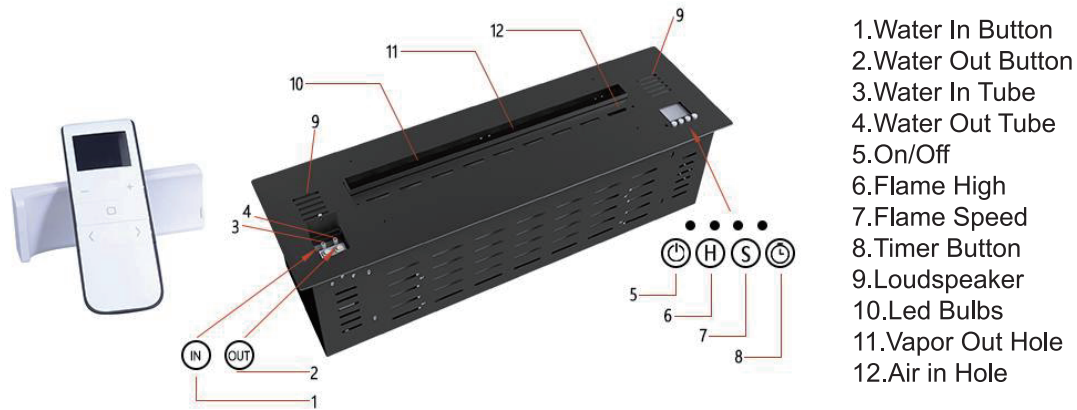

Single Color 3D Water Fireplace With Remote Controller

## Single Color 3D Water Fireplace Functions:

- Easy Control: Button ON/OFF and Remote Control
- 24V Low Voltage
- Material in stainless and MDF
- Flame Height Adjustable
- Flame Speed: Adjustable
- Flame Orange Color Only
- Waterproof LED Light
- Automatic Fill The Tank
- Automatic Drainage system
- Connect to water pipe system
- Green Energy Conservation
- Over-flow protection function
- Over-voltage protecting and power leakage protecting functions

**3D Water Vapor Fire Model AFW80 with 82cm Long**

**3D Water Vapor Fire Model AFW100 with 102cm Long**

**3D Water Vapor Fire Model AFW120 with 122cm Long**

**3D Water Vapor Fire Model AFW150 with 152cm Long**

**3D Water Vapor Fire Model AFW180 with 182cm Long**

**3D Water Vapor Fire Model AFW200 with 202cm Long**

**3D Water Vapor Fire Model AFW230 with 232cm Long**

**3D Water Vapor Fire Model AFW250 with 252cm Long**

**Square / Round Vapor Fires etc...**

**Any Customized Sizes and Shape are Available.**

## 1. WARNING!

Before any use, please read the User Guide.

This apparatus is manufactured to have intermittent functioning.

Use your device only in well ventilated areas.

Installing the fireplace horizontally (check it with a spirit level).

## 2. TECHNICAL CHARACTERISTICS OF THE DEVICES

Reference	Output (Watts)	Consumption (Litre/hour)	Tank capacity (Liters)	Dimensions L x W x H (cm)	Weight (Kgs)	Minimum volume * (m3)
Single Color Models						
AFW80	80	0.17	2.1	82*25*22	23	90
AFW100	100	0.20	2.7	102*25*22	27	120
AFW120	120	0.25	3.5	122*25*22	36	150
AFW150	150	0.30	4.7	152*25*22	45	180
AFW180	180	0.35	5.9	182*25*22	54	210
AFW200	210	0.40	6.5	202*25*22	65	250
AFW230	240	0.50	7.5	232*25*22	75	300
Multi-color Models						
AFW80	110	0.17	2.1	82*25*22	23	90
AFW100	130	0.20	2.7	102*25*22	27	120
AFW120	150	0.25	3.5	122*25*22	36	150
AFW150	185	0.30	4.7	152*25*22	45	180
AFW180	215	0.35	5.9	182*25*22	54	210
AFW200	245	0.40	6.5	202*25*22	65	250
AFW230	285	0.50	7.0	232*25*22	75	300

\*Minimum volume of room advised (m3)

Device equipped volts-100/240 V AC 50-60 Hz.

Device equipped with some spare parts.(Handles, Plastic Tube, Vapor Maker etc...)

## 3. PREPARATION OF THE DEVICE BEFORE USE

Remove the packaging of your device.

Keep the plastic tube, handles, power adaptor, etc

Verify that there is no objects in the device. Remove it if necessary.

Devices MUST BE mounted on the wall, fixed on the ground or built-in.



Plastic Tube




Handle




Remote control

- **Fireplaces installation**

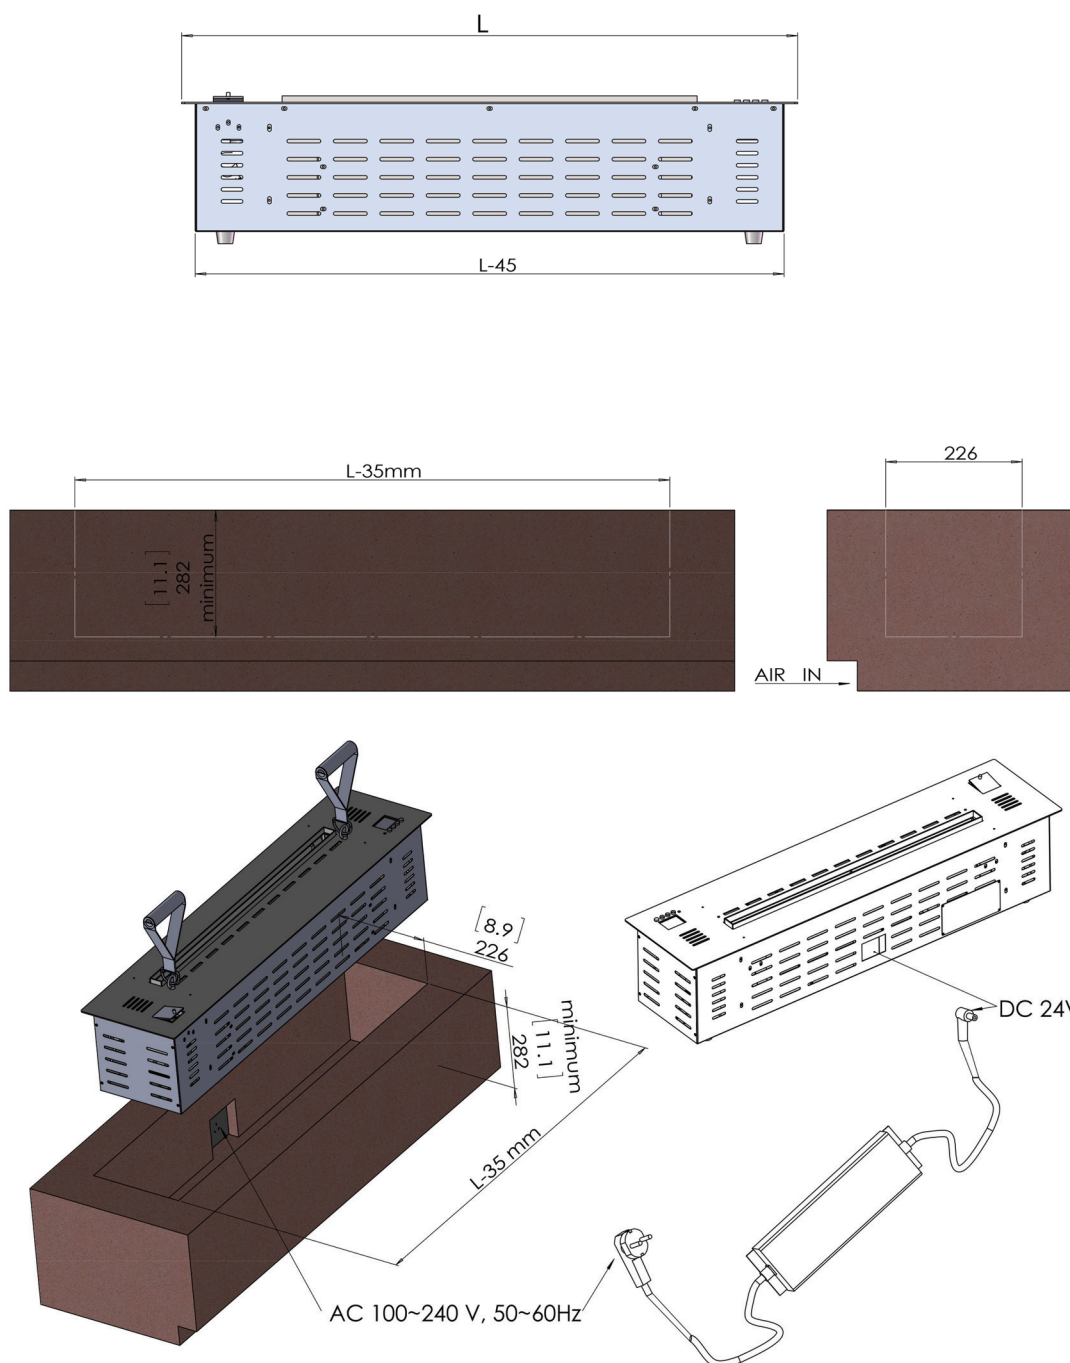



- **Different Designs:**

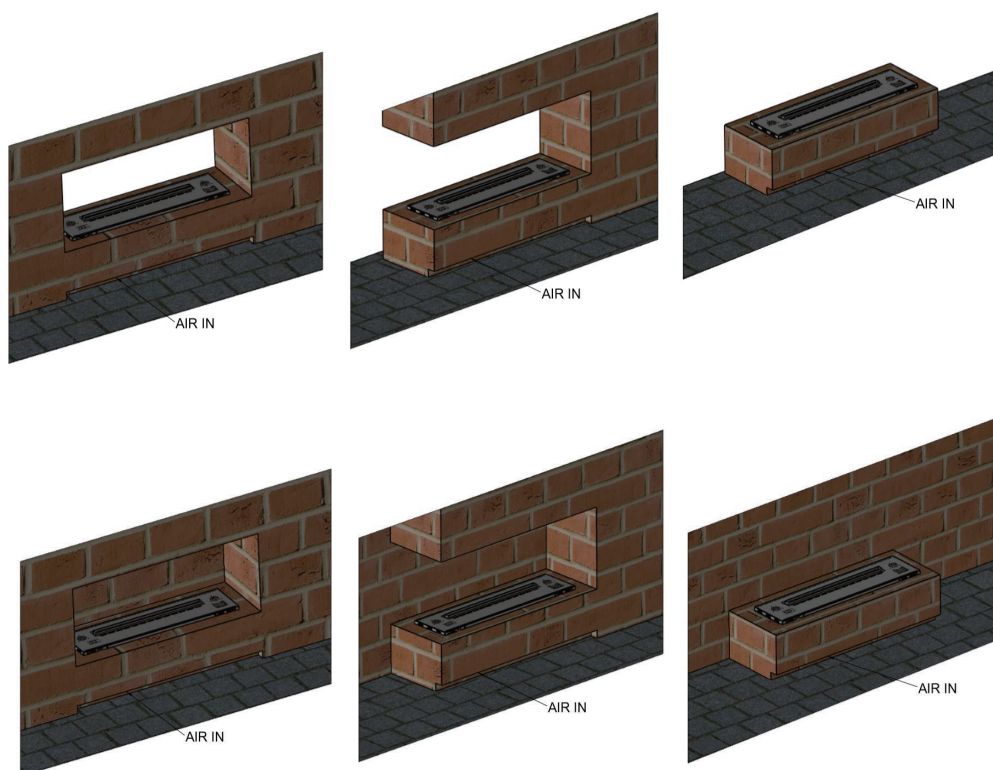

A mounting bar with holes is supplied with wall fireplaces

Use a spirit level to ensure that the bar is straight; fix it by using appropriate screws according to the type of chosen wall.

With the help of another person, hang the fireplace in position.

- **Burners Installation**



Build-in the burners according to the flame level.

Check that the fireplace has a right level by using a spirit level.

## 4. SPECIAL PRECAUTIONS FOR INSTALLATION

- Check that the fireplace has a right level by using a spirit level.
- Do not put objects on the device when functioning.
- Leave a free access to the control buttons.
- Do not use in a room with draught.
- Orange Range

## Installation methods

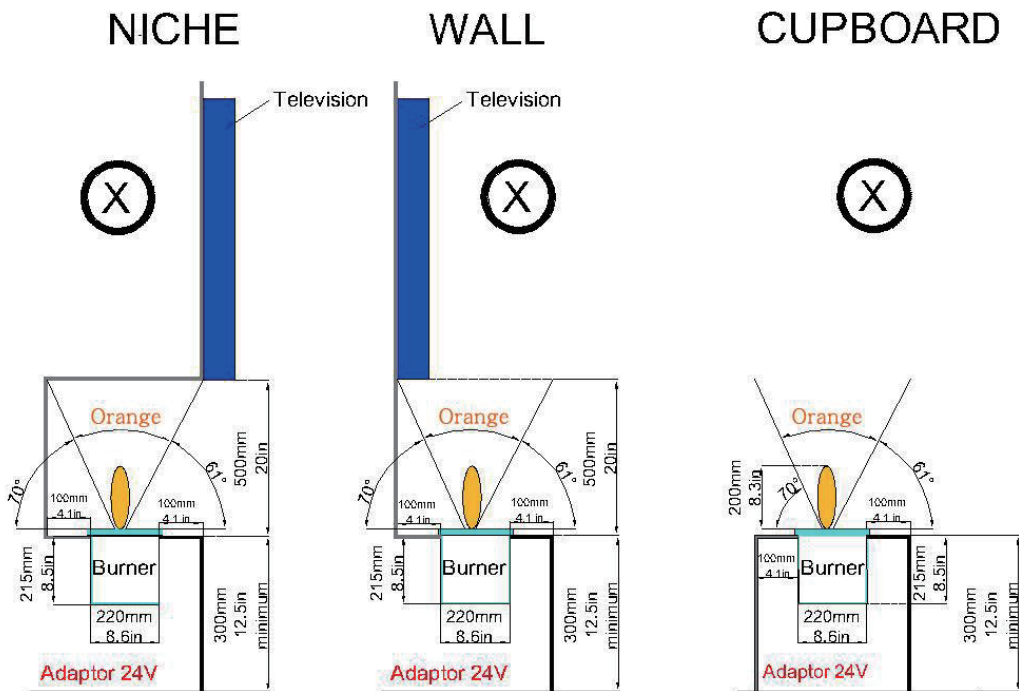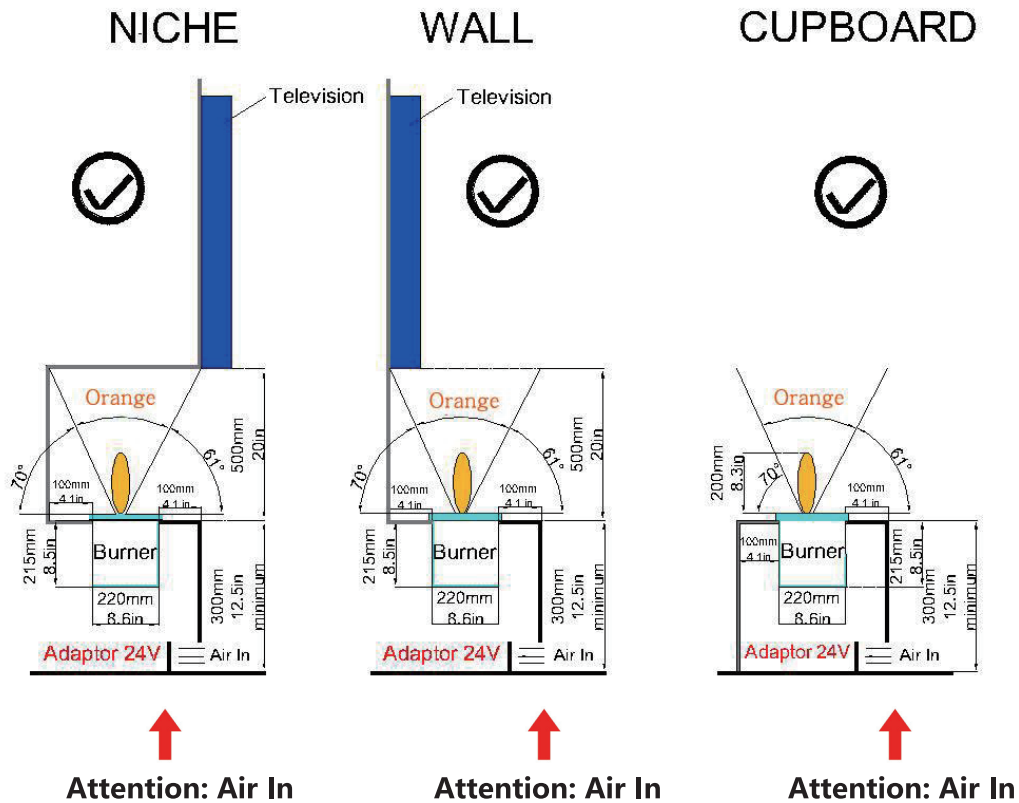

**"Air In" is important For The Vapor Flames**

## 5. POWER SUPPLY CONNECTION

Before positioning, the device must be connected with the socket to the power supply.

Each unit is equipped with a power plug.


EU Plug/UK Plug/US Plug/AU Plug etc...

100V-240V Power available.

## 6. FILLING OF THE TANK

About Filling the tank, We use “Water In” function.


Prepare a container with pure water inside, one side of the plastic tube connect to the external tube “IN” and another side in the pure water container, keep pressing the Button “IN” for 3 seconds, the left button “IN” will turn Blue and the pump will automatically pump water into the tank. And pump will stop automatically when water comes to the maximum level.

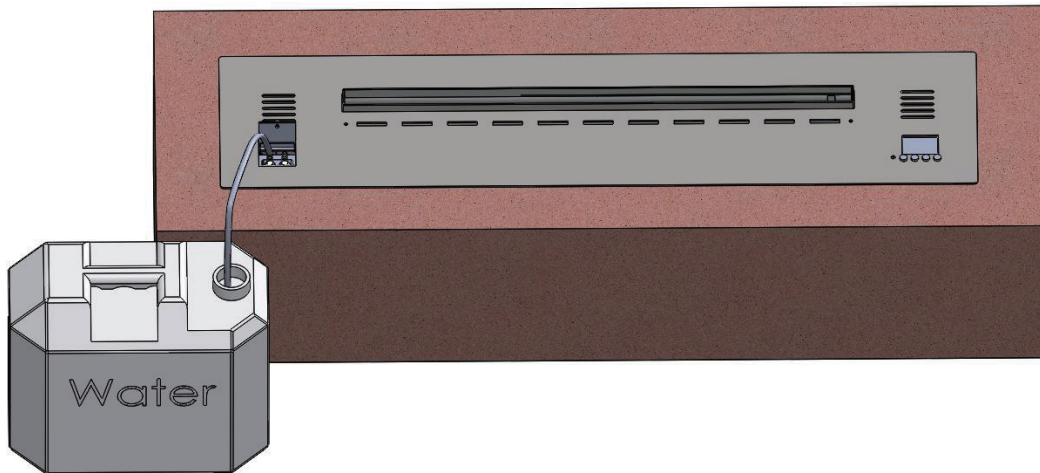


### Notice:

- NEVER fill the burner directly. ALWAYS the water in filling nozzle of the burner.
- Use only pure water.
- Once the maximum level is reached: a BIP is emitted by the electronic gauge.
- The “**Water Out**” function is for pumping the water out from the tank. Keep pressing the “**OUT**” Button 3 seconds to start.
- If long time no use the fireplace, please drain out all the water.


## 7.INSTRUCTION OF USE

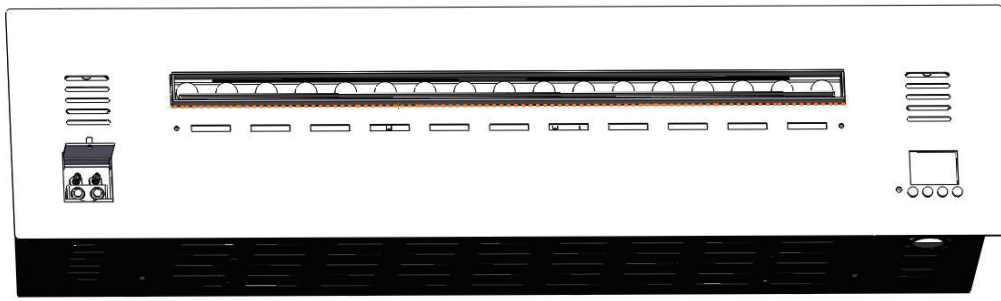


### a) Buttons

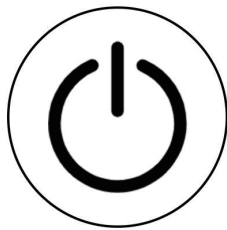


Button A:ON/OFF

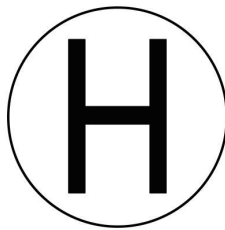

Button B:Flame High

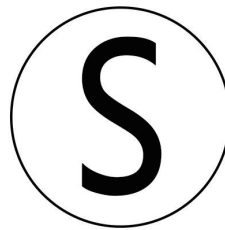

Button C:Flame Low

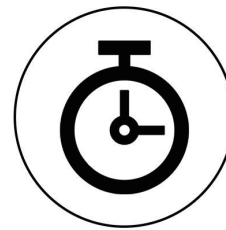

Button D:Timer

#### **Button A-- Turn On**

Turn On/Off the device only with the switch ON/OFF Button or the Remote Controller.

Before turning on the burner,make sure there is enough water inside the burner.

**Keep Pressing the Button A on the Unit For 3 SECONDS** or press on the remote controller, the Lights will automatically light on. After 1 second Water Flame will take place.


#### **Button A-- Turn Off**

Shut down the device with the switch Button A on the unit or Press on the Remote Controller, The burner will turn Off.





#### **Button B-- 7 Level Flame Height Adjustable**
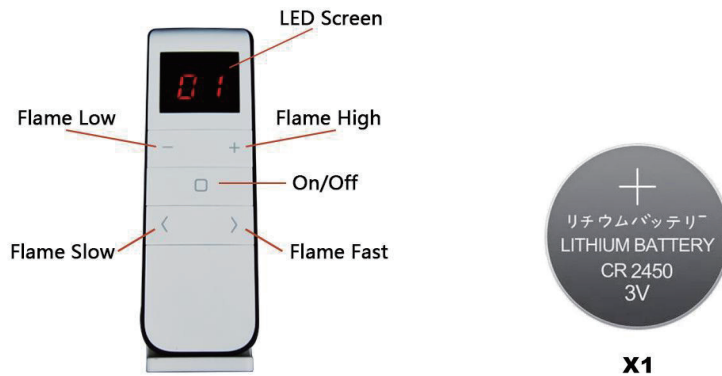
#### **Button C-- 7 Level Flame Speed Adjustable**


#### **Button D-- Timer Mode**



## 8.FUNCTIONING MESSAGE

LED Light Message		
Light	Light OFF	Light On
Power LED	Device is not connected to power supply.	Device is connected to power supply.
		Keep pressing it 3 seconds to turn on the fireplace
		Press it to adjust flame heights
		Press it to adjust flame speeds
		Press it to set working time
Lack Of Water Error	Lack Of Water.Please Add Water Into the tank.	Keep Pressing "IN" button 3 Seconds to Start Injection
Water Leak Error	Water Tank Is LEAK.Please Drain Water Out.	Keep Pressing "OUT" button 3 Seconds to DRAIN Water out and contact your supplier

## 9. CONNECT TO WATER PIPE

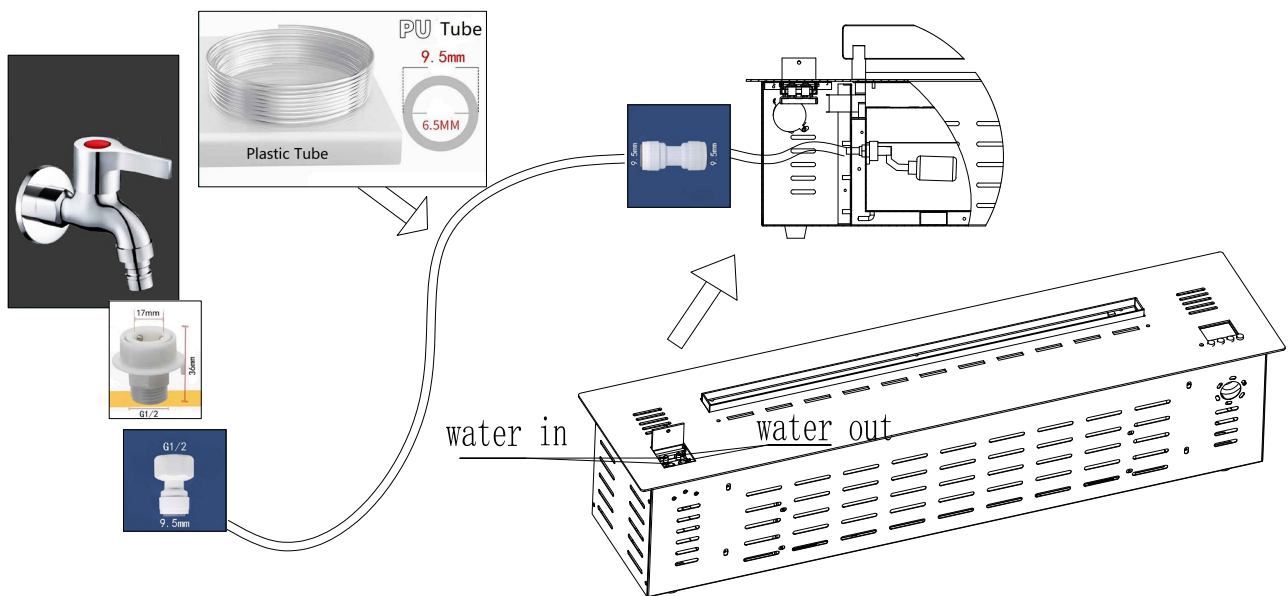

## 11. MAINTENANCE AND CLEANING

- Only use pure water.
- Clean the burners with a soft rag or cloth.
- Some components are determining the safety and the functioning of your device.
- Use Water Out to discharge the water out absolutely.
- If you want to take the device to another place, please confirm there is no water in the device.
- If you will not use it for more than 10days, please use Water Out to discharge the water out from the burner to keep the tank inside clean.

Their replacement may modify the performances of your device. Only original components must be used during the operations of maintenance, or reparations. This maintenance must only be operated by specialists.

Failure to observe this operating manual and its operating instructions as well as unauthorized tampering with the device releases us from any liability and also invalidates the warranty covering the devices and accessories.



## 12.COLORS OF THE PANEL AVAILABLE

Mirror Black





Brush Black



Stainless Steel



Brushed Gold

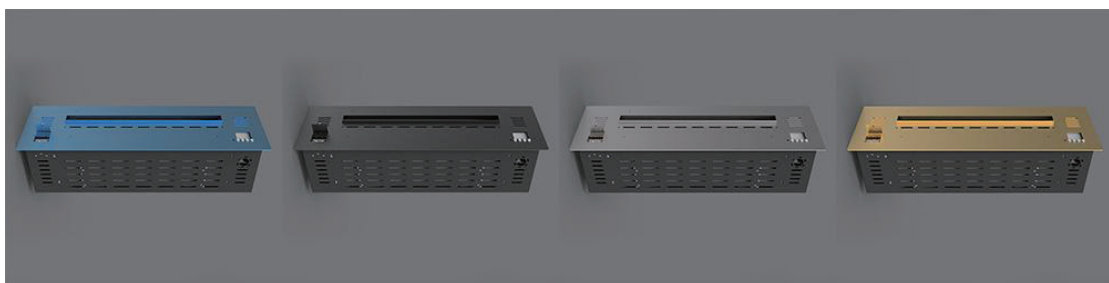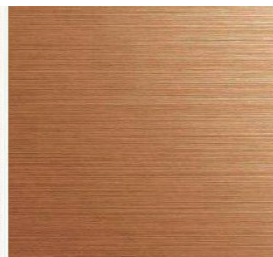



**Thank you For Reading.**

## **Art Fireplace Technology Limited.**

**PROFESSIONAL INTELLIGENT FIREPLACE LEADER**

**Official Website: <https://www.art-fire.com>**

**Phone: 0086 13928878187 E-mail: [info@art-fireplace.com](mailto:info@art-fireplace.com)**

**Address: FLAT/RM 705,7/F,FA YUEN COMM BLDG NO.75,FA YUEN STREET,MONG KOK,KLN,HK**

**YouTube <https://www.youtube.com/@artfireplace>**

**Art Fireplace Technology Limited**