


OFF-grid Single Phase Hybrid Inverter

SSA-HL1K2-P1EU

User Manual

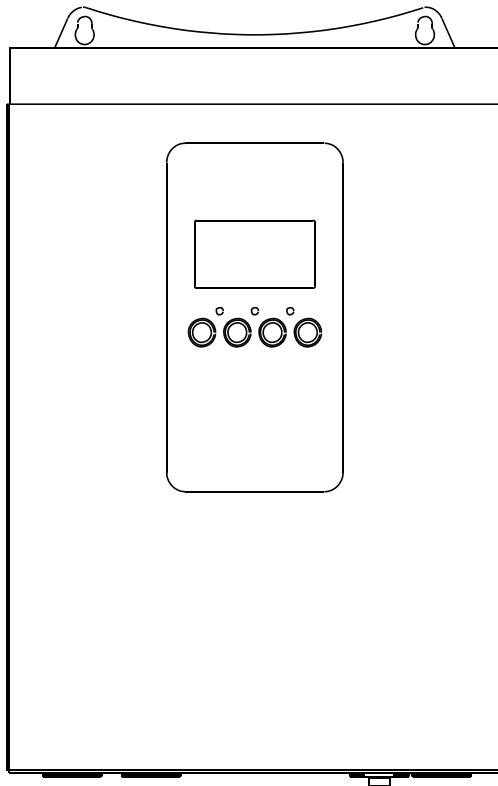

Please read this manual before use and follow its guidance.
Keep this manual for future reference.

Version 1.0

Table Of Contents

1. Information on this Manual	3
1.1 Validity	3
1.2 Scope	3
1.3 Target Group	3
1.4 Label Description	3
1.5 Safety Instructions	4
2. Introduction	5
2.1 Features	6
2.2 Product Overview	6
3. Installation	7
3.1 Unpacking and Inspection	7
3.2 Mounting Unit	9
3.3 External Protective Grounding Connection	11
3.4 AC Input / Output Connection	12
3.5 PV Connection	15
3.6 Battery Connection	17
3.7 Final Assembly	20
4. Operation	20
4.1 Power ON/OFF	20
4.2 Operation and Display Panel	20
4.3 Display Information	32
5. Fault Reference Code	36
6. Alarm Reference Code	39
7. Battery Equalization	42
8. Specifications	44
8.1 Line Specifications	44
8.2 Battery Specifications	46
8.3 Charger Specifications	46
8.4 Output Specifications	47
8.5 Switch Time Specifications	48
8.6 Efficiency Specifications	49
9. Trouble Shooting	49

1. Information on this Manual

1.1 Validity

This manual is valid for the following devices:

- 1200W inverter

1.2 Scope

This manual describes the assembly, installation, operation and troubleshooting of this unit.

Please read this manual carefully before installations and operations.

1.3 Target Group

This document is intended for qualified persons and end users. Tasks that do not require any particular qualification can also be performed by end users. Qualified persons must have the following skills:

- Knowledge of how an inverter works and is operated
- Training in how to deal with the dangers and risks associated with installing and using electrical devices and installations
- Training in the installation and commissioning of electrical devices and installations
- Knowledge of the applicable standards and directives
- Knowledge of the compliance with this document and all safety information

1.4 Label Description

In order to ensure the user's personal safety when using this product, the inverter and manual provides relevant identification information and uses appropriate symbols to alert the user, who should carefully read the following list of symbols used in this manual.

Labels on Inverter

	CAUTION Do not disconnect under load!
	Danger: High Voltage! Danger: Electrical Hazard!
	Start maintaining the INVERTER at least 5 minutes after the INVERTER disconnected from all external power supplies.
	Read instructions carefully before performing any operation on the INVERTER.
	Grounding: The system must be firmly grounded for operator safety.

Labels in the documentation

 WARNING!	A high level of potential danger, which, if not avoided, could result in death or serious injury to personnel.
 CAUTION!	A moderate or low level of potential danger, which, if not avoided, could result in moderate or minor injuries to personnel. In some bad situation, it could result in death or serious injury to personnel.

1.5 Safety Instructions




WARNING!

This chapter contains important safety and operating instructions.
Read and keep this manual for future reference.

01. Please be clear which kind of battery system you want, lithium battery system or lead-acid battery system, if you choose the wrong system, energy storage system can't work normally.
02. Before using the unit, read all instructions and cautionary marking on the unit, the batteries and all appropriate sections of this manual. The company has the right not to quality assurance, if not according to the instructions of this manual for installation and cause equipment damage.
03. All the operation and connection please professional electrical or mechanical engineer.
04. All the electrical installation must comply with the local electrical safety standards.
05. When install PV modules in the daytime, installer should cover the PV modules by opaque materials, otherwise it will be dangerous as high terminal voltage of modules in the sunshine.
06. CAUTION - To reduce risk of injury, charge only deep-cycle lead-acid type rechargeable batteries and lithium batteries. Other types of batteries may burst, causing personal injury and damage.
07. Do not disassemble the unit. Take it to a qualified service center when service or repair is required. Incorrect re-assembly may result in a risk of electric shock or fire.
08. To reduce risk of electric shock, disconnect all wirings before attempting any maintenance or cleaning. Turning off the unit will not reduce this risk.
09. NEVER charge a frozen battery.
10. For optimum operation of this inverter, please follow required spec to select appropriate cable size. It's very important to correctly operate this inverter.

11. Be very cautious when working with metal tools on or around batteries. A potential risk exists to drop a tool to spark or short circuit batteries or other electrical parts and could cause an explosion.
12. Please strictly follow installation procedure when you want to disconnect AC or DC terminals. Please refer to INSTALLATION section of this manual for the details.
13. GROUNDING INSTRUCTIONS -This inverter should be connected to a permanent grounded wiring system. Be sure to comply with local requirements and regulation to install this inverter.
14. NEVER cause AC output and DC input short circuited. Do NOT connect to the mains when DC input short circuits.
15. Make sure the inverter is completely assembled, before the operation.

2. Introduction

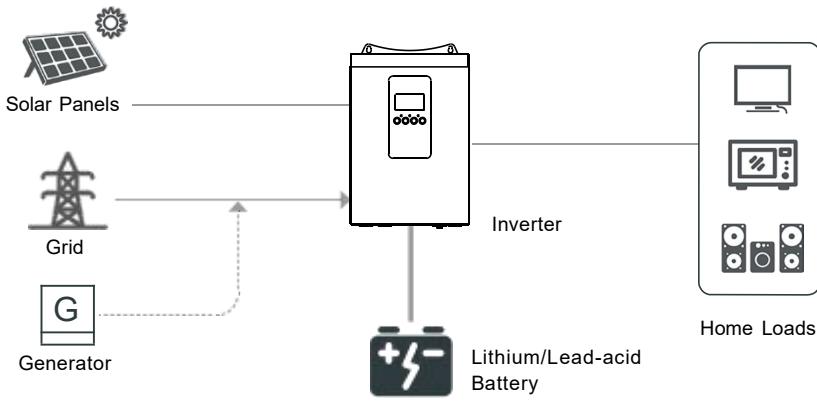

Solar Energy Storage System

This is a multifunctional solar inverter, integrated with a MPPT solar charge controller, a high frequency pure sine wave inverter and a UPS function module in one machine, which is perfect for off grid backup power and self-consumption applications.


The whole system also need other devices to achieve complete running such as PV modules, generator, or utility grid. Please consult with your system integrator for other possible system architectures depending on your requirements.

2.1 Features


- Rated power 1.2KW, power factor 1
- MPPT ranges 20V~100V, 125Voc
- High frequency inverter with small size and light weight
- Pure sine wave AC output
- Solar and utility grid can power loads at the same time
- With RS485 for BMS communication
- Configurable AGM FLD LIB battery types via LCD setting

2.2 Product Overview


Front view

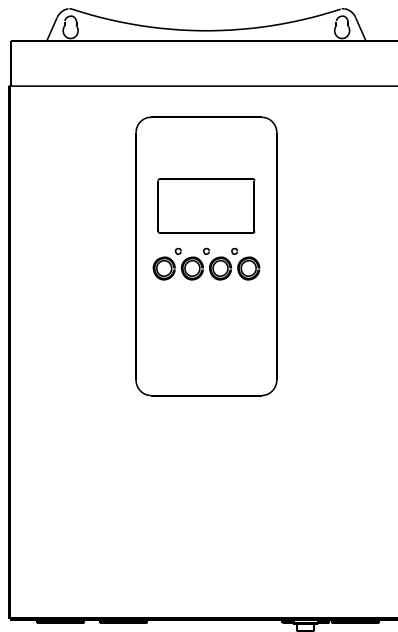

LCD Screen

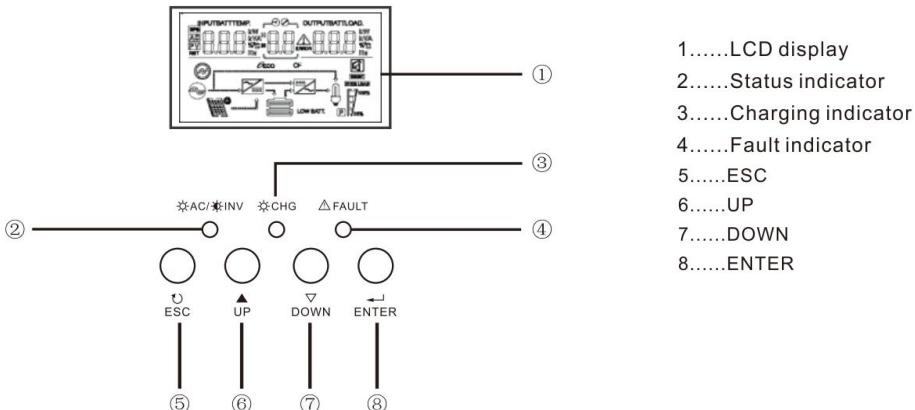

Bottom image

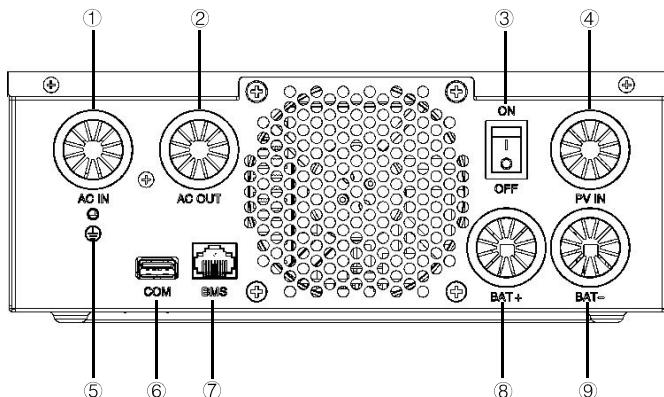

- | Label | Component |
|-------|-------------------------------|
| ① | AC Input |
| ② | AC Output |
| ③ | Power On/Off Switch |
| ④ | PV Input |
| ⑤ | Grounding |
| ⑥ | Upgrading port USB TypeA |
| ⑦ | BMS Communication Port(RS485) |
| ⑧ | Battery positive terminal |
| ⑨ | Battery negative terminal |

3. Installation

3.1 Unpacking and Inspection

3.1.1 Open-box Inspection

Products have been strictly tested before leaving the factory. Please sign for them after inspection.

If the product is damaged, please contact the local distributor. Please open the box to check whether the outer packaging is intact or damaged, whether the internal equipment is damage


3.1.2 Installation Tools

Installation Tools	Multi-meter	Protective gloves	Insulated anti-smashing shoes
			
	Safety glasses	ESD wrist strap	Hammer drill
			
	Electric screwdriver	Cross screwdriver	Rubber mallet
			
	Spirit level	Wire cutter / stripper	Terminal crimping tool
			

3.1.3 Packing List

No.	Item	Quantity	Description	Remarks
1	Inverter	1		
2	User manual	1	English	

3.2 Mounting Unit

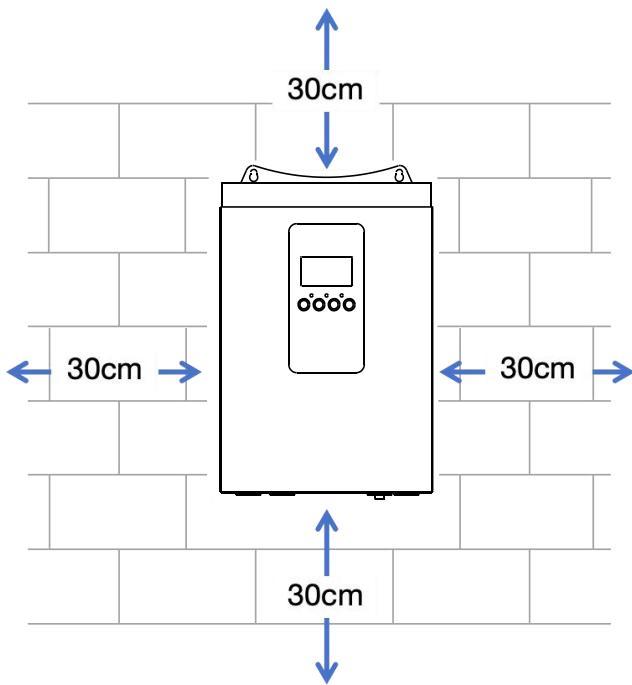

Consider the following points before selecting where to install:

- Do not mount the inverter on flammable construction materials.
- Mount on a solid surface.
- Install this inverter at eye level in order to allow the LCD display to be read at all times.
- The ambient temperature should be between -15°C and 60°C to ensure optimal operation.
- The recommended installation position is to be adhered to the wall vertically.
- Be sure to keep other objects and surfaces as shown in the diagram above to guarantee sufficient heat dissipation and to have enough space for removing wires.




WARNING!

Inverter is suitable for mounting on concrete or other non-combustible surface only.


Follow the installation steps:

1. Use $\varnothing 8$ drilling bit drill holes on the mounting surface. The distance between 2 holes is 164mm. Then insert the expansion screw(M6). M6 expansion screw is suggested.

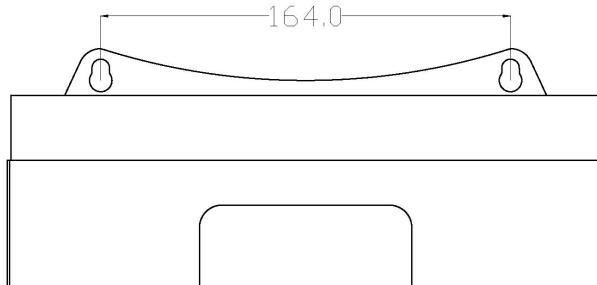

2. Pick up the inverter vertically and align the screw at the top of the inverter with the screw already installed on the wall. Hang the inverter on the mounting surface by the screws.

Before connecting all wiring, please take off bottom cover by removing two screws as shown below:

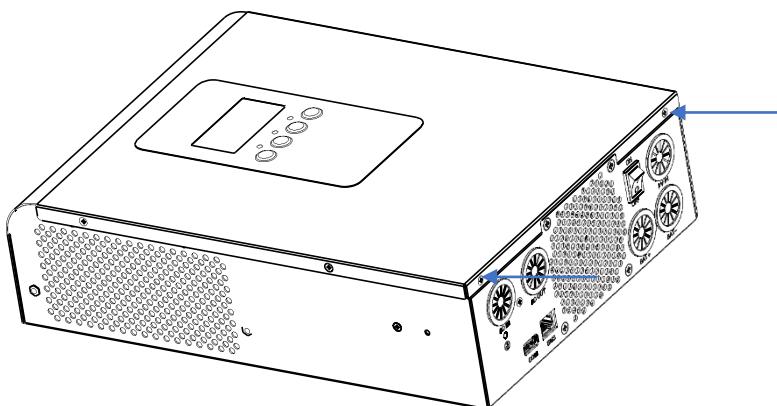

3.3 External Protective Grounding Connection



DANGER

Ensure a reliable connection of the grounding wire to prevent electrical shock hazards.



WARNING

 
- The external grounding protection point provides a reliable grounding. Do not use
- inappropriate grounding conductors as it may result in product damage or personal injury.
- If unsure about the grounding connection, please consult a professional for proper guidance.

The external grounding cable is to be prepared by customer. The grounding cable must be yellow-green color. OT terminals with insulating jacket is in the packing.


1. Remove insulation sleeve a proper length from the head of cables.



2. Use OT terminal crimping tool make cable and terminal crimped tightly.



3. Connect the ground cable with M4 screw.

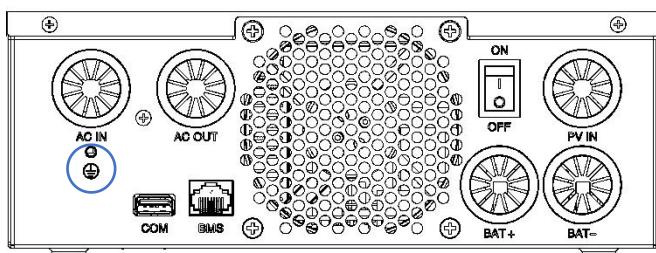

3.4 AC Input / Output Connection



CAUTION!

Before connecting to AC input power source, please install a separate AC breaker between inverter and AC input power source. This will ensure the inverter can be securely disconnected during maintenance and fully protected from over current of AC input. The recommended spec of AC breaker is 16A for 1.2KW inverter.



CAUTION!

There are two terminal blocks with "AC IN", "AC OUT" markings. Please do NOT mis-connect input and output connectors.



CAUTION!

Be sure to connect AC cables with correct polarity. If L and N wires are connected reversely, it may cause utility short-circuited when these inverters are worked in parallel operation



WARNING!

All wiring must be performed by a qualified personnel.



WARNING!

It's very important for system safety and efficient operation to use appropriate cable for AC input connection. To reduce risk of injury, please use the proper recommended cable size as below.

Suggestion for AC input wires

Model	Gauge	Cable (mm ²)
1.2 KW Inverter	16 AWG	1.31



WARNING!

It's very important for system safety and efficient operation to use appropriate cable for AC dual output connection. To reduce risk of injury, please use the proper recommended cable size as below.

Suggestion for AC output wires

Model	Gauge	Cable (mm ²)
1.2 KW Inverter	16 AWG	1.31




WARNING!

Make sure AC power is disconnected before attempting to connect AC power to the unit.

All operations during the electrical connection process, as well as the specifications of cables and components used, must comply with local laws and regulations. The cable color mentioned below is for typical reference.

Please follow below steps to implement AC input / output connection:

1. Before making AC connection, be sure to open AC circuit breaker first.
2. Remove insulation sleeve 9mm from the head of cables, shorten the conductor part to 7 mm. Insert the cable into the tubular terminal. Then use terminal crimping tool make the terminal and cable connected tightly.

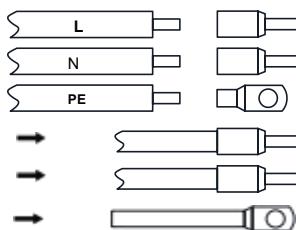


3. Insert AC input/output cables according to polarities indicated on terminal block and tighten the terminal screws. Be sure to connect PE protective cable first.

PE → Protecting Earth (yellow-green)

L → LINE (brown or black)

N → Neutral (blue)

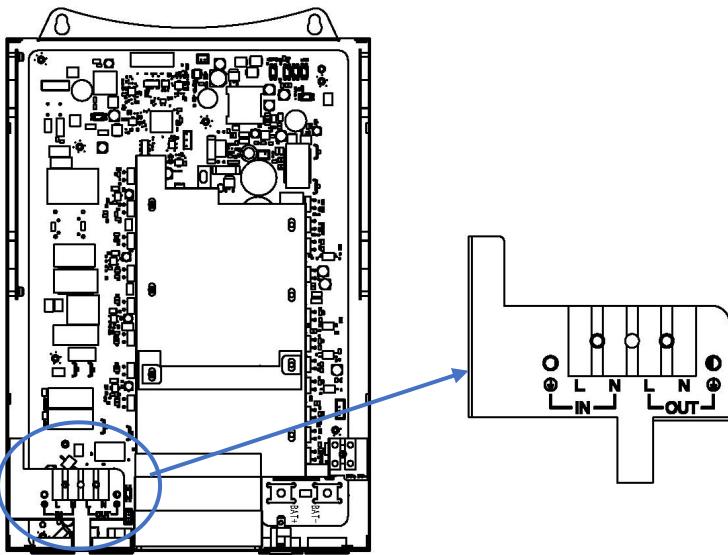

4. Make sure the cables are securely connected.



CAUTION!

Appliances such as air conditioner are required at least 2~3 minutes to restart because it's required to have enough time to balance refrigerant gas inside of circuits. If a power shortage occurs and recovers in a short time, it will cause damage to your connected appliances. To prevent this kind of damage, please check with manufacturer of air conditioner that if it's equipped with time-delay function before installation. Otherwise, this off grid solar inverter will trig overload fault and cut off output to protect your appliance but sometimes it still causes internal damage to the air condition.

3.5 PV Connection

**CAUTION!**

Before connecting to PV modules, please install a separate DC circuit breaker between inverter and PV modules.

The recommended spec of DC breaker is 16A with a maximum operating voltage greater than 125VDC for 1.2KW inverter.

**WARNING!**

Do not ground the positive or negative terminals of the PV modules, as this can severely damage the inverter.

**WARNING!**

Exposure to sunlight can generate lethal high voltages in photovoltaic strings, so strictly adhere to the safety precautions listed in the photovoltaic string and related documents.

**WARNING!**

Make sure to connect the PV terminals to the corresponding ports on the inverter, as reversing the polarity can damage the inverter.

**WARNING!**

All wiring must be performed by a qualified personnel.

**WARNING!**

It's very important for system safety and efficient operation to use appropriate cable for PV module connection. To reduce risk of injury, please use the proper recommended cable size as below. The cable color mentioned below is for typical reference.

Model	Gauge	Cable (mm ²)
1.2KW Inverter	14 AWG	2.075

PV Module Selection:

When selecting proper PV modules, please be sure to consider below parameters:

1. Open circuit Voltage (Voc) of PV modules not exceeds max. PV array open circuit voltage of inverter.
2. Open circuit Voltage (Voc) of PV modules should be higher than start-up voltage.

INVERTER MODEL	1.2KW
Max. PV Array Open Circuit Voltage	125Vdc
Start-up Voltage	20Vdc
PV Array MPPT Voltage Range	15-100Vdc

After considering above the parameters, the recommended module configurations are listed as below table:

Solar Panel Spec reference	Q'ty of panels in serial	Total input power
550W Vmp:49.80V Imp:13.06V Voc:42.16V Isc:13.06	2	1100W
410W Vmp:31.43V Imp:13.05V Voc:37.50V Isc:13.06	3	1230W




WARNING!


Please do not connect any DC switches or AC/DC circuit breakers before completing the electrical connections.

Please follow below steps to implement PV module connection:

1. Before making PV connection, be sure to open DC circuit breaker first.
2. Remove insulation sleeve 9mm from the head of cables, shorten the conductor part to 7 mm. Insert the cable into the tubular terminal. Then use terminal crimping tool make the terminal and cable connected tightly

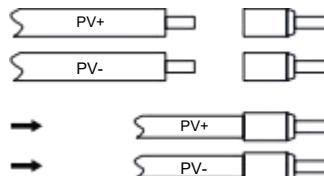

3. Use multi-meter check to ensure the polarities are correct.
4. Insert PV cables according to polarities indicated on terminal block and tighten the terminal screws.
+ → PV+ (red)
- → PV- (black)

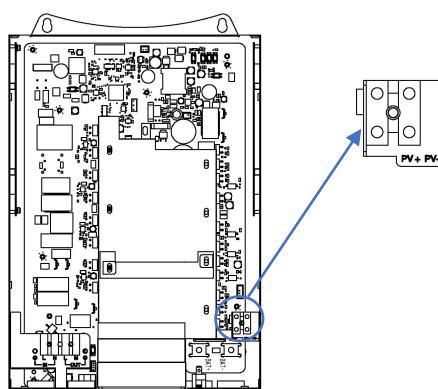

5. Make sure the cables are securely connected.

3.6 Battery Connection

3.6.1 Lead-acid Battery Connection

User can choose proper capacity lead acid battery with a nominal voltage at 12V. Also, you need to choose battery type as 'AGM or FLD(flooded)'



CAUTION!

For safety operation and regulation compliance, it's requested to install a separate DC over-current protector or disconnect device between battery and inverter. It may not be requested to have a disconnect device in some applications, however, it's still requested to have over-current protection installed. The recommended size of protector or disconnect is 150A.



WARNING!

All wiring must be performed by a qualified person.



WARNING!

It's very important for system safety and efficient operation to use appropriate cable for battery connection. To reduce risk of injury, please use the proper recommended cable and terminal size as below. The cable color mentioned below is for typical reference.



WARNING!

Make sure AC power is disconnected before attempting to connect AC power to the unit.

All operations during the electrical connection process, as well as the specifications of cables and components used, must comply with local laws and regulations. The cable color mentioned below is for typical reference.


Recommended battery cable and terminal size:

Model	Gauge	Cable (mm ²)
1.2KW Inverter	2 AWG	21


Note: For lead acid battery, the recommended charge current is 0.3C (C>battery capacity)

Please follow below steps to implement battery connection:

 1. Unscrew the pre-fixed screws on battery poles. Prepare 2 DT terminals (It should fit for AWG2 cables).
2. Remove insulation sleeve 12mm from the head of cables, shorten the conductor part to 10 mm. Insert the cable into the DT terminal. Then use terminal crimping tool make the terminal and cable connected tightly.



- Pass the battery cable through the battery installation hole on bottom shell, and tighten the terminal screws. Make sure polarity at both the battery and the inverter/charge is correctly connected and DT terminals are tightly screwed to the battery terminals.

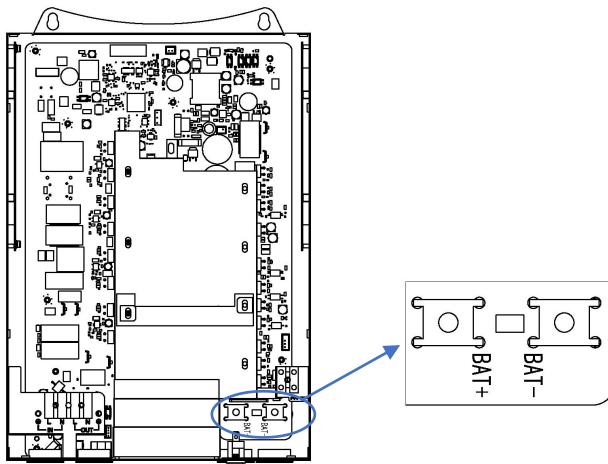

- Connect all battery packs as units requires. It's suggested to connect at least 200Ah capacity battery.



WARNING! Shock Hazard

Installation must be performed with care due to high battery voltage in series.



CAUTION!

Do not place anything between the flat part of the inverter terminal and the DT terminal. Otherwise, overheating may occur.



CAUTION!

Do not apply anti-oxidant substance on the terminals before terminals are connected tightly.



CAUTION!

Before making the final DC connection or closing DC breaker/disconnector, be sure positive (+) must be connected to positive (+) and negative (-) must be connected to negative (-).


3.6.2 Lithium Battery Connection

If choosing lithium battery for inverter, Please check the compatibility of the protocol first.

There're two connectors on the lithium battery, RJ45 port of BMS and power cable.

Please follow below steps to implement lithium battery connection:

1. Follow section 3.5.1 to implement the power cable connection.
2. Connect RJ45 terminal of battery communication cable to BMS communication port of inverter. The communication protocol should be RS485.

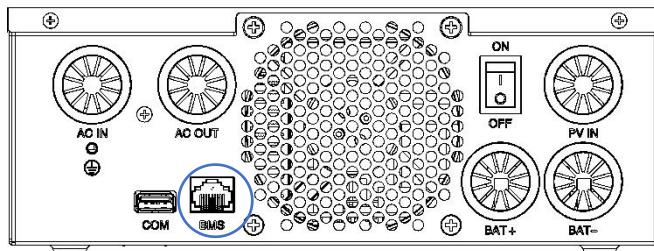

3. Insert the other end of RJ45 (battery communication cable) to battery communication port of lithium battery.

Note: If choosing lithium battery, make sure to connect the BMS communication cable between the battery and the inverter. You need to choose battery type as "lithium battery" during inverter setting.

Lithium battery communication and setting:

In order to communicate with battery BMS, you should set the battery type to "Llib" in Section 4.2.1 Program 17.

Make sure the lithium battery BMS port connects to the inverter is Pin to Pin, the inverter BMS port pin assignment shown as below:

Pin number	BMS port
1	RS485B
2	RS485A
3	-
4	-
5	-
6	-
7	-
8	-


3.7 Final Assembly

After connecting all wiring, please put bottom cover back by screwing two screws mentioned in Section 3.2.

4. Operation


4.1 Power ON/OFF

Once the unit has been properly installed and the batteries are connected well, simply press ON/OFF switch (located on the button of the case) to turn on the unit.

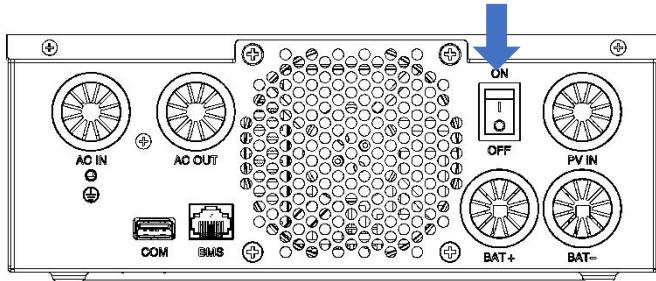


4.2 Operation and Display Panel

The operation and display panel, shown in below chart, is on the front panel of the inverter. It includes four indicators, three function keys and a LCD display, indicating the operating status and input/output power information.

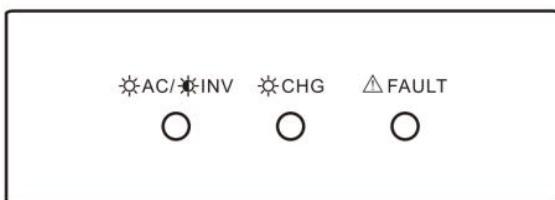

LED Indicator		Messages	
 AC/ INV	Green	Solid On	Output is powered by utility in Line mode.
		Flashing	Output is powered by battery or PV in battery
 CHG	Yellow	Solid On	Battery is fully charged.
		Flashing	Battery is charging.
 FAULT	Red	Solid On	Fault occurs in the inverter.
		Flashing	Warning condition occurs in the inverter.

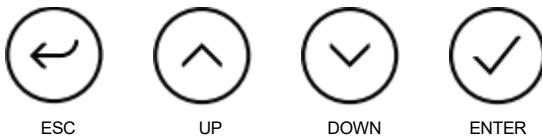

Function Buttons

Button	Description
ESC	To exit setting mode
UP	To go to previous selection
DOWN	To go to next selection
ENTER	To confirm the selection in setting mode or enter setting mode

4.2.1 LCD Setting

After pressing and holding ENTER button for 2 seconds, the unit will enter setting mode. Press "UP" or "DOWN" button to select setting programs. Then press "ENTER" button to confirm the selection or ESC button to exit.

Program	Description	Setting Option								
01	Output voltage	OPU 01 230 230V (default) Adjustable/settable value: 208V, 220V, 230V, 240V								
02	Output frequency	OPF 02 50 50Hz(default) Adjustable/settable frequency: 50Hz, 60Hz								
03	Output source priority	<table border="1"> <tr> <td>Solar first</td> <td>OPP 03 PCB</td> </tr> <tr> <td colspan="2"> Solar energy provides power to the loads as first priority. If solar energy is sufficient, battery will be charged with solar energy. If solar energy is not sufficient to power all connected loads, Grid will supply power to the loads at the same time. The extra power will charge the battery. If solar energy and grid are not sufficient, battery will supply power to the loads at same time. If solar, grid and battery power is not sufficient to power loads, inverter will go to standby and charge battery. </td> </tr> <tr> <td>Grid first (default)</td> <td>OPP 03 GPa</td> </tr> <tr> <td colspan="2"> Grid provides power to the loads as first priority. Solar power will charge the battery. If solar is not sufficient to charge battery, grid will charge the battery at the same time. If grid is not sufficient to power all connected loads, solar energy will supply power to the loads at the same time. If solar energy and grid are not sufficient, battery will supply power to the loads at same time. If solar, grid and battery power is not sufficient to power loads, inverter will go to standby and charge battery. </td> </tr> </table>	Solar first	OPP 03 PCB	Solar energy provides power to the loads as first priority. If solar energy is sufficient, battery will be charged with solar energy. If solar energy is not sufficient to power all connected loads, Grid will supply power to the loads at the same time. The extra power will charge the battery. If solar energy and grid are not sufficient, battery will supply power to the loads at same time. If solar, grid and battery power is not sufficient to power loads, inverter will go to standby and charge battery.		Grid first (default)	OPP 03 GPa	Grid provides power to the loads as first priority. Solar power will charge the battery. If solar is not sufficient to charge battery, grid will charge the battery at the same time. If grid is not sufficient to power all connected loads, solar energy will supply power to the loads at the same time. If solar energy and grid are not sufficient, battery will supply power to the loads at same time. If solar, grid and battery power is not sufficient to power loads, inverter will go to standby and charge battery.	
Solar first	OPP 03 PCB									
Solar energy provides power to the loads as first priority. If solar energy is sufficient, battery will be charged with solar energy. If solar energy is not sufficient to power all connected loads, Grid will supply power to the loads at the same time. The extra power will charge the battery. If solar energy and grid are not sufficient, battery will supply power to the loads at same time. If solar, grid and battery power is not sufficient to power loads, inverter will go to standby and charge battery.										
Grid first (default)	OPP 03 GPa									
Grid provides power to the loads as first priority. Solar power will charge the battery. If solar is not sufficient to charge battery, grid will charge the battery at the same time. If grid is not sufficient to power all connected loads, solar energy will supply power to the loads at the same time. If solar energy and grid are not sufficient, battery will supply power to the loads at same time. If solar, grid and battery power is not sufficient to power loads, inverter will go to standby and charge battery.										

03	Output source priority	PBG priority	OPP 03 PBG
		Solar energy provides power to the loads as first priority. If solar energy is sufficient, battery will be charged with solar energy. If solar energy is not sufficient to power all connected loads, battery will supply power to the loads at the same time. If solar energy and battery are not sufficient, grid will supply power to the loads at same time. If solar, grid and battery power is not sufficient to power loads, inverter will go to standby and charge battery.	
04	Output mode	MKP priority	OPP 03 nBP
		Comprehensive priority When PV exists, the battery takes priority, and when PV does not exist, the grid takes priority.	
05	Charger source priority	APP: Appliance (default)	00d 04 APP
		Applied to household appliances	
		UPS	00d 04 UPS
06	Grid charging current	Applied to computer and other devices. Typical switching time is 10ms.	
		GEN	00d 04 GEN
		Applied to connect generator by using grid input port	
05	Charger source priority	PNG: PV and Grid (default)	CHP 05 PNG
		OPV: Only PV	CHP 05 OPV
		PV: PV first	CHP 05 PUF
06	Grid charging current	There are three options for charging priority. The default is PNG (PV and Grid). PV and Grid are charged at the same time;. The second is OPV (Only PV). Only PV charge. The third is PUF (PV First). When both PV and Grid power exist, only PV charging occurs.. When only PV exists, PV charging occurs. When only grid power exists, grid charging occurs.	
		HCC 06 30	
		40A(default) Setting range is [2, 60A]	

07	Maximum charging current		<i>nCC 07 60</i>
		Set total charging current for solar and grid chargers. The default is 40A. Available options: 2/10/20/30/40/50/60/70/80/90/100/110/120A	
08	Menu Default		<i>ndF 08 ON</i>
		During setting: Set to ON. If the current page is not on the first page and no operation with 1 minute, the system will return to display the first page. Set to OFF. If the current page is not on the first page and no operation with 1 minute, the system will stay on the current page.	
09	Auto restart when overload occurs	The default is ON.	<i>LHS 09 ON</i>
10	Auto restart when over temperature occurs	The default is ON.	<i>LHS 10 ON</i>
11	Main input cut warning		<i>nIP 11 ON</i>
		Enable/Disable Mains or PV loss alarm. The default setting is ON. If the main input detected lost, the buzzer will sound for 3 seconds. when set to OFF, after the main input is lost, the buzzer will not sound.	
12	Energy-saving mode		<i>PuS 12 OFF</i>
		The default setting is OFF. When set to ON, in battery mode, if the load is lower than 25W, the system will stop output for a period then resume. If the load is still lower than 25W, the system will do the loop stop then resume. If the load is higher than 35W, the system will resume continuous normal output.	
13	Overload transfer to bypass		<i>OLG 13 OFF</i>
		The default setting is OFF. When set to ON, in the case of PBG priority output, if there is an overload, the system will immediately transfer to bypass mode (utility power output, also known as bypass mode).	

		<i>buz 14 OFF</i>
14	Silent mode setting	Enable/disable buzzer sound. The default setting is OFF. When set to ON, in any situation such as alarms or faults, the buzzer will not sound. This setting can be applied to all modes .
15	Battery return to mains voltage point	<i>btr 15 11.5</i> When the battery is set to the AGM (Lead Acid Battery Type) or FLD (Flooded Battery Type) mode. The default setting is 11.5V, and it can be adjusted within a range of [11, 13V].
		<i>btr 15 11.9</i>
16	Switching back to battery mode voltage points	<i>btr 16 13.0</i> When the battery is set to AGM (Absorbent Glass Mat) or FLD (Flooded) mode,The default is 13V. It can be adjusted within a range of [12, 14.5V].
		<i>btr 16 13.6</i>
17	Battery type	AGM(default) <i>bat 17 AGM</i> Flooded <i>bat 17 FLD</i> Lithium <i>bat 17 LIB</i> User-Defined <i>bat 17 CUS</i> Lithium Iron <i>bat 17 FEL</i>

		bRL 18 11.0
18	Battery low voltage point	<p>It cannot be set when battery type is AGM or FLD. The default setting is 11V.</p> <p>Battery low voltage alarm setting.</p> <p>When the battery type is set to LIB, FEL or CUS, the default setting is 11V. The adjustable range for the voltage is [10.3, 12.5V].</p>
19	Battery shutdown voltage point	<p>bRU 19 10.5</p> <p>The battery low voltage shutdown point setting function cannot be adjusted when the battery is defined as AGM or FLD mode. The default setting is 10.5V.</p> <p>When the battery type is set to LIB, FEL or CUS , the battery shutdown point can be modified. The default setting is 10.5V, and the adjustable range is [10, 12V].</p>
20	Constant voltage mode voltage point setting	<p>bCV 20 14.1</p> <p>The battery low voltage shutdown point setting function cannot be adjusted when the battery is defined as AGM or FLD mode. The default setting is 14.1V,for FLD is 14.5V.</p> <p>When the battery type is set to LIB, FEL or CUS, the default constant voltage charging set point is 14.1V, and it can be adjusted within the range of [12, 15V]. It is important to ensure that the constant voltage set point voltage is higher than the float charge set point voltage.</p>
21	Floating charge mode voltage point setting	<p>bFL 21 13.5</p> <p>When the battery is defined in AGM or FLD mode, the voltage set point cannot be configured. The default setting for AGM/FLD mode is 13.5V When the battery type is LIB, FEL, the default setting is 13.8V.It can be set within the range of [12.5, 14.5V] for the floating charging voltage set point. When the battery type is CUS, the default setting is 13.8V.It can be set within the range of [12,15V]for the floating charging voltage set point.</p> <p>It is important to note that the constant voltage point voltage should always be set higher than the floating charge point voltage.</p>

22	Grid low voltage point setting	<p>LLU 22 154</p> <p>If output mode is APP/GEN, Grid low voltage point can be set within a range of 90V to 154V. The default setting is 154V.</p> <p>If output mode is UPS, Grid low voltage point can be set within a range of 170V to 200V. The default setting is 185V.</p>
23	Grid high voltage point setting	<p>LHU 23 264</p> <p>If output mode is APP/GEN, Grid high voltage point can be set within a range of 264V to 280V. The default setting is 264V.</p> <p>If output mode is UPS, Grid high voltage point is set as 264V.</p>
24	Automatic screen shutdown setting	<p>Ab 24 OFF</p> <p>The default value is OFF</p> <p>After turn on the function, the backlight will shutdown after 10 minutes of no button operation.</p>
25	Inverter soft start setting	<p>StE 25 OFF</p> <p>Default setting is OFF.</p> <p>If it set to ON, the inverter output gradually increases from 0 to the target voltage value. If OFF, the inverter output directly increases from 0 to the target voltage value.</p> <p>Setting Condition: It can be set in single-machine operation mode.</p>

		Std 26 OFF
26	Reset factory setting	<p>Restore all settings to factory default values.</p> <p>Before the setting, this interface is displayed as OFF. When set to ON, the system will restore to default settings. After the setting is completed, this interface will display OFF again.</p> <p>The setting can be applied immediately in mains and standby modes, but cannot be set in battery mode.</p>
29	Battery Disconnection Alarm	<p>Sba 29 OFF</p> <p>Enable/Disable battery disconnection alarm.</p> <p>Default setting is OFF. When set to OFF, there will be no battery disconnection, low battery voltage, or battery under voltage alarms when the battery is disconnected.</p>
30	Battery Equalization Mode	<p>Eqn 30 OFF</p> <p>Enable/Disable Battery equalization.</p> <p>Default setting is OFF. If it is set to ON, the controller will start to enter the equalization phase when the set equalization interval (battery equalization period) is reached during the float charging stage, or the equalization is activated immediately.</p>

		Eqv 3° 14.6
31	Equalization Voltage Point Setting	<p>The default setting is 14.6V, with a configurable range of [12, 15V].</p>
		EqL 3° 60
32	Equalization Charging Time Setting	<p>During the equalization stage, the controller will charge the battery as much as possible until the battery voltage rises to the battery equalization voltage. Then, it will adopt constant voltage regulation to maintain the battery voltage. The battery will remain in the equalization stage until the set battery equalization time is reached. The default setting is 60 minutes, with a configurable range of [5, 900], and an increment of 5 minutes for each setting.</p>
		EqD 3° 120
33	Equalization Delay Time Setting	<p>During the equalization stage, if the battery equalization time expires and the battery voltage has not risen to the battery equalization voltage point, the charging controller will extend the battery equalization time until the battery voltage reaches the battery equalization voltage. When the battery equalization delay setting is completed and the battery voltage is still below the battery equalization voltage, the charging controller will stop equalization and return to the floating stage.</p> <p>The default setting is 120 minutes, with a configurable range of [5, 900], and an increment of 5 minutes for each setting.</p>


		E91 34 30d
34	Equalization Interval Time Setting	When the battery connection is detected during the float phase with the equalization mode turned on, the controller will start to enter the equalization phase when the set equalization interval (cell equalization period) is reached. The default setting is 30 days, the settable range is [1,90], and the increment of each setting is 1 day.
		E97 35 OFF
35	Enable Equalization Immediately	The default setting is OFF, the function is not turned on; when it is set to ON, in the float charging stage when the equalization mode is turned on and the battery connection is detected. The balance charging is activated immediately, and the controller will start to enter the equalization stage.
		bns 44 OFF
44	BMS Communication Function	Enable/Disable lithium battery communicates with inverter. Default setting is OFF. Choose the corresponding option based on the battery pack type. If a communication abnormality occurs, alarm 56 is generated . Supported protocols: CVT 485 protocol, PYL 485 protocol, GRO 485 protocol, VOL 485 protocol, PAC 485 protocol.
		bni 45 RH0
55	BMS ID setting	Setting BMS ID number to communicate with. The default value is auto(AtO). The setting range is [1, 15]. When the item is set to auto(AtO), system will automatically poll the BMS ID from small to large. When system polls for the first ID with a correct response, it locks the ID and only asks the BMS with that ID.






		<p>65U 46 OFF</p>
46	Low SOC Shutdown	<p>Set the inverter to shutdown when the State of Charge (SOC) of the battery is low.</p> <p>Default setting is 20, with a configurable range of [5, 50]. When the lithium battery SOC reaches the set value in battery mode, the inverter shuts down and generates alarm 68. The alarm 68 is cleared when the SOC returns to the set value + 5%. In standby mode, the inverter can switch to battery mode only when the SOC reaches the set value + 10%. If it does not reach this threshold, alarm 69 is generated. Once the function is enabled, alarm 69 is triggered when the lithium battery SOC reaches the set value + 5%, and it is cleared when it returns to the set value + 10%.</p> <p>It can be set to OFF, in which case the inverter no longer performs shutdown, startup, or alarm operations based on the SOC condition.</p> <p>Once the function is enabled, if a communication abnormality occurs, the inverter no longer operates based on the SOC information and clears the related alarms.</p>
47	High SOC to Battery	<p>56b 47 OFF</p> <p>Set the SOC value for the inverter to switch to battery mode.</p> <p>Default setting is 90, with a configurable range of [10, 100]. In PBG priority mode, when the lithium battery SOC reaches the set value in normal grid mode, the inverter switches to battery mode. Once enabled, the inverter will only switch to battery mode when the SOC is above the set point and the battery voltage is higher than the voltage point to switchback to battery mode</p> <p>It can be set to OFF, in which case the inverter no longer switches from grid mode to battery mode based on the SOC condition.</p> <p>Once the function is enabled, if a communication abnormality occurs, the inverter no longer operates based on the SOC information and clears the related alarms.</p>

		STG 48 OFF
48	Low SOC to Grid	<p>Set the SOC value for the inverter to switch to grid mode. The default setting is 50, with a configurable range of [10, 90]. In PBG priority mode, when the lithium battery SOC reaches the set value in battery mode, the inverter switches to grid mode. Once enabled, the inverter will switch to grid mode when the SOC is below the set point or the battery voltage is lower than the voltage point to switchback to grid mode</p> <p>It can be set to OFF, in which case the inverter no longer switches from battery mode to grid mode based on the SOC condition. Once the function is enabled, if a communication abnormality occurs, the inverter no longer operates based on the SOC information and clears the related alarms.</p> <p>When this setting is higher than the STB point, STB and STG will no longer take effect after the next activation.</p>
61	Max.discharge current	<p>ndC 61 OFF</p> <p>The default value is OFF. The setting range is [10, 120A]. Every set step is 5A.</p> <p>When the battery current exceeds the set value in battery mode, an overload alarm 60 is triggered, and after 5 seconds, an overload fault 14 is reported. If the overload to bypass function is enabled in PBG mode, battery overcurrent will also trigger the overload to bypass logic.</p> <p>It can be set to OFF, and the inverter will no longer trigger overload faults or alarms based on battery current.</p>


4.3 Display Information

The LCD display information will be switched in turns by pressing “UP” or “DOWN” key. The selectable information is switched as below order: voltage, frequency, current, power, firmware version.

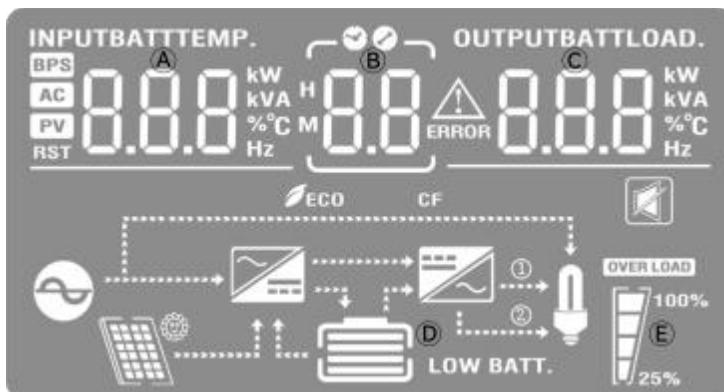


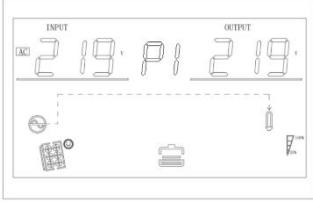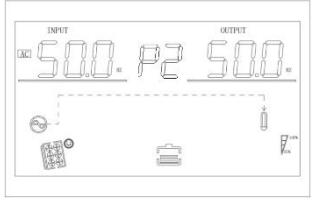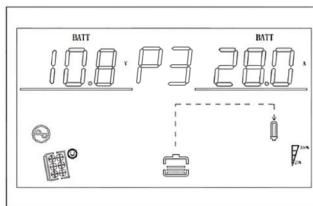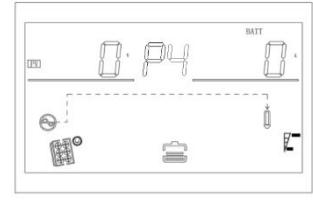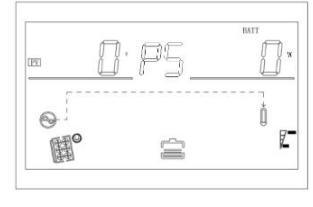Information	LCD display
Display the inverter input and output voltage	
Display the input and output frequency of the inverter	
Battery information, showing battery voltage and battery capacity and charging current	
PV information, PV voltage and PV charging amps	
PV information, PV voltage and PV charging wattage	


Output Information shows the output voltage and output power

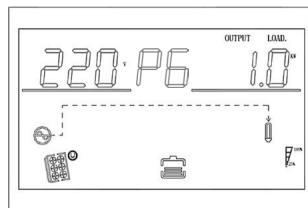


Output Information shows the output voltage and output power

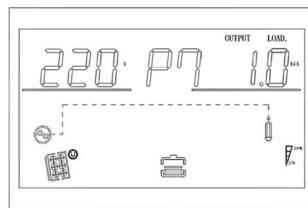


Output Information displays output voltage and load percentage

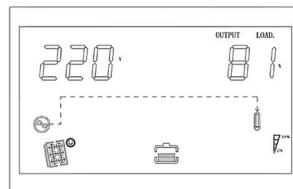

Display software version

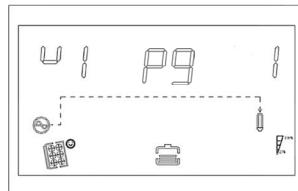


Display photovoltaic power generation

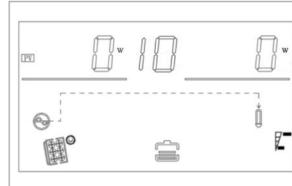


After enabling BMS, the following pages are available


Network status of lithium battery
When the upper right display shows SIG constant, the battery pack is operating as a single group; When it shows PAR constant, the battery pack is operating in multiple groups in series and parallel; When it flashes PAR, the battery pack is establishing a state of multiple groups in series and parallel

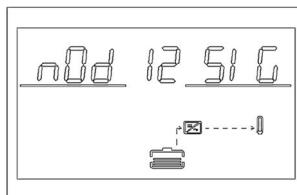


Lithium battery voltage and current information; The upper left displays BMS battery voltage information; The upper right displays BMS battery current information. When BMS communication fails, both the upper left and upper right displays will flash ERR

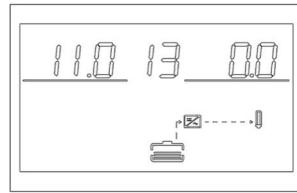


Lithium battery temperature and SOC; The upper left displays BMS temperature information; The upper right displays BMS SOC information. When BMS communication fails, both the upper left and upper right displays will flash ERR

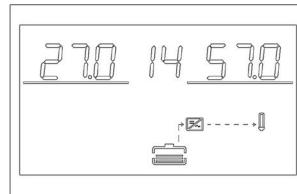


Lithium battery capacity; The upper left displays rated capacity; The upper right displays current capacity. When BMS communication fails, both the upper left and upper right displays will flash ERR

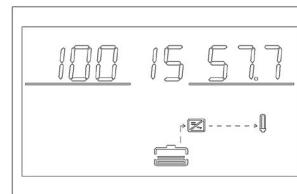

Lithium battery constant voltage point; The upper left displays the fixed letter CV; The upper right displays the BMS constant voltage charging point. When BMS communication fails, the upper right display will flash ERR

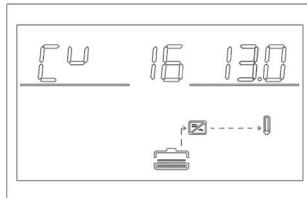

Lithium battery fault alarm information; The upper left displays BMS alarm information; The upper right displays BMS fault information. When BMS communication fails, both the upper left and upper right displays will flash ERR

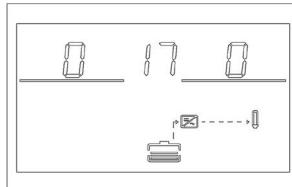

5. Fault Reference Code

Fault display:



Function description: If alarm occurs, Fault indicator flashes and buzzer sounds every one second for 1 minute, then stop. If fault occurs, the fault indicator is always on, the buzzer sounds 10 seconds then stops. System will try restart automatically. If the machine does not work after six times' restart, the machine and LCD display will always in the fault status. You need to completely power off (off the screen) or wait for 30 minutes to restart the machine. The fault LCD display is shown in the figure above. In fault mode fault icon is bright, in alarm state alarm icon is flashing, and contact the manufacturer to troubleshoot the abnormal situation according to the fault information.

Fault: The inverter enters fault mode, with a constant red LED light and LCD displaying a fault code.

Fault code sheet


Fault code	Meaning	Relevant action	Trigger conditions	Resume conditions	Fault / Alarm
1	Bus soft boost start failed	Turn fault mode	Bus voltage does not reach set value for more than 30 seconds.	Cannot restore.	Fault
2	Bus voltage high	Turn fault mode	The bus voltage is higher than protection point.	Cannot restore.	Fault
3	Bus voltage low	Turn fault mode	Bus voltage is below the under voltage protection point.	Cannot restore.	Fault
4	Battery over current	Turn fault mode	TZ interrupt triggered more than 2 times within 2ms.	Cannot restore.	Fault
5	Over temperature	Turn fault mode	The PFC temperature exceeds the protection threshold. Fan stuck for more than 5 minutes.	Tried to restart six times, if failed, cannot restore.	Fault
6	Battery high voltage	Turn fault mode	Battery voltage is higher than set value.	Restore after voltage is lower set value.	Fault
7	Bus soft start fault	Turn fault mode	Turn fault mode. The soft start process has exceeded but the bus voltage has not reached set value.	Cannot restore.	Fault

Fault code	Meaning	Relevant action	Trigger conditions	Resume conditions	Fault / Alarm
8	Bus short circuit	Turn fault mode	Inverter on or PFC on, bus voltage below threshold.	Cannot restore.	Fault
9	Inverter soft start fault	Turn fault mode	The bus voltage is higher than protection point, or the DC component is greater than 20V. or the inverter is not completed within 5 minutes.	Cannot restore.	Fault
10	INV over voltage	Turn fault mode	The inverter voltage is higher than the set value [276V].	Cannot restore.	Fault
11	INV under voltage	Turn fault mode	Battery mode and there is no short circuit in the inverter, the inverter voltage is lower than 160V.	Cannot restore.	Fault
12	INV short circuit	Turn fault mode	In battery mode or Standby mode, if the inverter voltage is lower, current is greater than set value.	Tried to restart six times, if failed, cannot restore.	Fault
13	Negative power protection	Turn fault mode	In battery mode, the load power is lower than set value(negative power, such as -1200W).	Cannot restore.	Fault
14	Over load	Turn fault mode	Overload exceeds limit (list in specification).	Tried to restart six times, if failed, cannot restore.	Fault
15	Model fault	Turn fault mode	Cannot match any model in model number detection.	Cannot restore. Check whether the control board is assembled incorrectly or whether the program is burned incorrectly.	Fault

Fault code	Meaning	Relevant action	Trigger conditions	Resume conditions	Fault / Alarm
16	No boot loader	Turn fault mode	No boot loader.	Cannot restore. Try to send command TIDA1911000000000000.	Fault
26	BMS fault	Turn fault mode	Error code in BMS message.	Turn off BMS communication function or BMS fault recovery.	Fault
28	NTC fault	Turn fault mode	NTC open circuit	Cannot restore	Fault

6. Alarm Reference Code

Alarm: the inverter does not enter the fault mode, LED red light flashing, LCD displays the Alarm code.

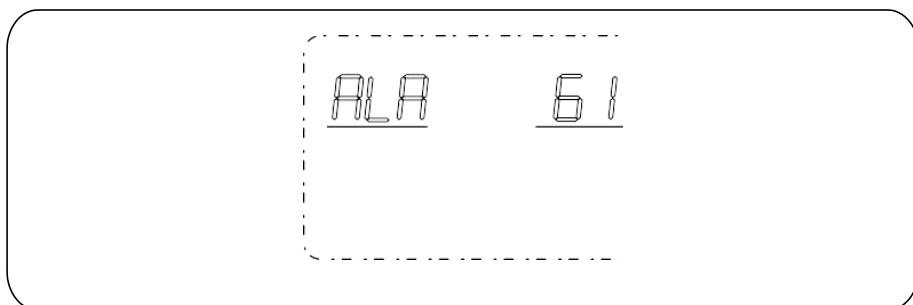

Alarm code sheet

Alarm code	Meaning	Relevant action	Trigger conditions	Resume conditions	Fault / Alarm
50	Battery open	Alarm, battery does not charge.	Battery voltage is below set point.	Restore after battery voltage recover.	Alarm
51	Battery low voltage shutdown	Alarm, battery low voltage shutdown or cannot power on.	Battery voltage is below set point.	Restore after battery voltage recover.	Alarm

Alarm code	Meaning	Relevant action	Trigger conditions	Resume conditions	Fault / Alarm
52	Battery low voltage	Alarm	Battery voltage is below set point.	Restore after battery voltage recover.	Alarm
53	Charger short circuit	Warning, battery does not charge.	The battery voltage is less than 5V and the charging current is greater than 4A.	Cannot restore.	Alarm
54	Low power discharge	Alarm	The battery voltage is greater than 26.4V and the discharge time exceeds the set low-power discharge time.	Restore after battery voltage recover.	Alarm
55	Battery over charge	Alarm, battery does not charge.	Battery voltage is higher than the set value.	Can restore.	Alarm
56	BMS disconnect	Alarm, lock standby mode.	No correct BMS communication response within 10 seconds.	Restore after communication recover.	Alarm
57	Over temperature	Alarm, battery does not charge.	The temperature of PFC or INV is above the set value.	Restore after temperature is under set value.	Alarm
58	Fan error	Alarm, if one fan fails and the other fan is running at full speed.	Fan speed is less than the set value.	Restore after fan recover.	Alarm

Alarm code	Meaning	Relevant action	Trigger conditions	Resume conditions	Fault / Alarm
59	EEPROM error	Alarm	Numerical calibration error.	Restore after calibration right.	Alarm
60	Overload	Alarm, battery does not charge.	When not in mains mode or the PV is normal and the output priority is not mains priority, the load exceeds 102% and the duration is 200-220 ms.	Restore after load back to normal	Alarm
61	Abnormal generator waveform	Alarm, continuously operating in battery mode.	Generator waveform detection result is abnormal.	Can restore.	Alarm
62	PV Energy Weak	Alarm, turn off PV output and charging.	When the battery is not connected, the bus voltage is lower than the set value.	Restore after 10mins.	Alarm
68	SOC Under	Alarm, turn standby mode.	Lithium battery SOC is lower than the set value.	Restore after turning off the low SOC shutdown function, or turning off the BMS communication function, or when the SOC returns to the set value + 5%.	Alarm

Alarm code	Meaning	Relevant action	Trigger conditions	Resume conditions	Fault / Alarm
69	SOC Low	Alarm, if it is in standby mode, it will remain in standby mode and not power on.	Lithium battery SOC is lower than the set value + 5% (mains mode or battery mode), lower than the set value + 10% (standby mode).	Restore after turning off the low SOC shutdown function, or turning off the BMS communication function, or when the SOC returns to the set value + 10%.	Alarm
71	Battery short circuit	Alarm	Battery short circuit is detected.	Cannot restore.	Alarm
72	Battery start up lock	Alarm	Battery voltage do not reach 11.5V/ piece(cell).	Can restore.	Alarm

7. Battery Equalization

Equalization function is added into charge controller. It reverses the buildup of negative chemical effects like stratification, a condition where acid concentration is greater at the bottom of the battery than at the top. Equalization also helps to remove sulfate crystals that might have built up on the plates. If left unchecked, this condition, called sulfation, will reduce the overall capacity of the battery. Therefore, it's recommended to equalize battery periodically.

Note: *Don't activate this mode when using lithium batteries.

- How to Apply Equalization Function


You must enable battery equalization function in monitoring LCD setting Program 30 first.

Then, you may apply this function in device by either one of following methods:

1. Set balance mode on Program 30.
2. Set balance voltage point on Program 31.
3. Set balance charging time on Program 32.
4. Set balance delay time on Program 33.
5. Set balance interval time on Program 34.
6. Set immediate balance mode activation on Program 35.


- When to Equalize

In float stage, when the setting equalization interval (battery equalization cycle) is arrived, or equalization is active immediately, the controller will start to enter Equalize stage.

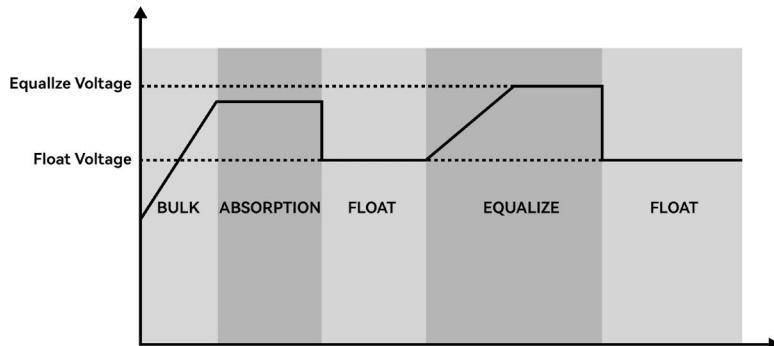


- Equalize charging time and timeout

In Equalize stage, the controller will supply power to charge battery as much as possible until battery voltage raises to battery equalization voltage. Then, constant-voltage regulation is applied to maintain battery voltage at the battery equalization voltage. The battery will remain in the Equalize stage until setting battery equalized time is arrived.

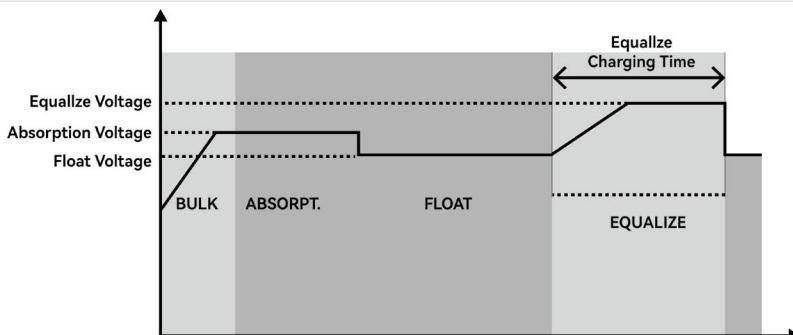

However, in Equalize stage, when battery equalized time is expired and battery voltage doesn't rise to battery equalization voltage point, the charge controller will extend the battery equalized time until battery voltage achieves battery equalization voltage. If battery voltage is still lower than battery equalization voltage when battery equalized timeout setting is over, the charge controller will stop equalization and return to float stage.

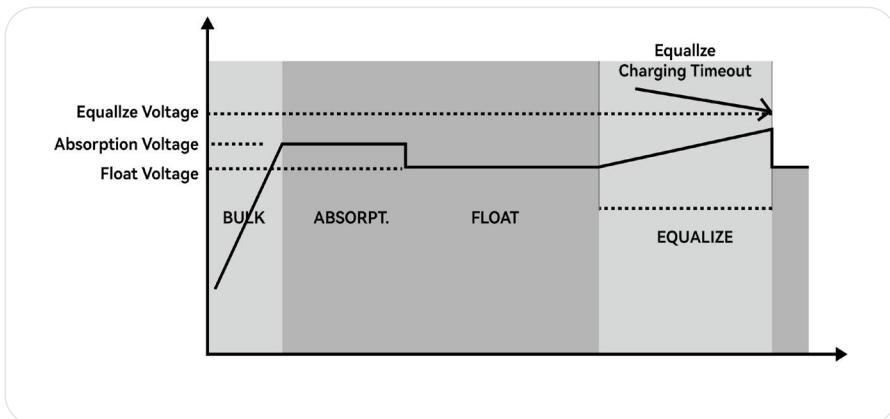

8. Specifications

8.1 Line Specifications

	Item	Value	Comments
Input voltage	Main topology	L + N + PE	
	Nominal voltage	208/220/230/240 Vac	
	Input voltage range	90~280Vac	Settable
	Input low loss	154Vac (default) Settable: 90-154	Appliance mode Generator mode
		185Vac (default) Settable: 170-200	UPS mode

	Item	Value	Comments
Input voltage	Input low comeback	Low loss voltage +9V	
	Input high loss	264Vac(default) Settable:264-280	Appliance mode Generator mode
		264Vac	UPS mode
	Input high comeback	High loss voltage -9V	
	Nominal frequency	50 / 60Hz	
	Frequency range	40 / 70Hz	
	Freq. low loss / Comeback	40/43.5Hz@50Hz(UPS mode) 40/40.5HZ@50HZ(APP/GEN mode)	
		50/53.5Hz@60Hz(UPS mode) 40/40.5HZ@60HZ(APP/GEN mode)	
	Freq. High loss / Comeback	60/56.5Hz@50Hz(UPS mode) 70/69.5Hz@50Hz(APP/GEN mode)	
		70/66.5Hz@60Hz(UPS mode) 70/69.5Hz@60Hz(APP/GEN mode)	
	Max current (RMS)	10A	>10A, 60s; >12A, 10s; >14A, 3s; >16A, 200ms;

Note: When the specification of the external circuit breaker is greater than 16A, the maximum input current is 16A.

When the external circuit breaker specification is less than 16A, the maximum input current depends on the external circuit breaker specification.

8.2 Battery Specifications

	Item	Value	Comments
Battery information	Battery pieces	1pcs	12V/PCS
	Auto restart function	Yes	
	Battery test function	No	
	Battery type	VRLA/LI	
	Nominal battery voltage	12V	@25°C
	Battery management	Yes	
Battery protection	Battery over voltage	15V	
	Battery under voltage	10.5V	Settable:10~11
	Battery low voltage alarm	10.8V	Settable:10.3~11.3
	Over current protection	Fuse	Fast acting


8.3 Charger Specifications

	Item	Value	Comments
Charger (line mode)	Charging voltage	FV MODE: 13.5V Settable: 12~14.9V CV MODE: 14.1V Settable: 12~15V	
	Temperature compensation	No	
	Charging current	2~60A	Settable
	Default charging current	30A	
	Charging mode	Two/Three/Auto Settable	Three states: CC/CV/Float Two states: CC/Float
	Charge voltage accuracy	±5%	Calibrated by RS232
Charger(PV)	PV charging method	MPPT	
	PV maximum input power	1000W	
	PV maximum input current	14A	
	Efficiency	99.5%max	
	PV voltage accuracy	±2%	
	MPPT voltage	20-100Vdc	
	Default charging current	60A	
	Recommended PV configuration voltage	MPPT Voltage: 60- 85V Open Circuit Voltage: 70-105V	
	Max PV voltage	125Vdc	
	Min PV voltage	15Vdc	
	PV start-up voltage	20Vdc	If PV voltage is below 20V, inverter needs to be connected to the battery for use. While PV voltage is above 60V.
	Max PV charge current	60A	
	Max (AC+Solar) charge current	120A	

8.4 Output Specifications

	Item	Value	Comments
Output power rating	Output topology	L+N+PE	
	Output power	1.2KW	When setting the Output voltage to 208V, the Output Power rating will be reduced to 90%; Please refer to the Battery Voltage Derating Curve ①and Max Output Power Rating ② for more details.
Output voltage	Nominal voltage	208/220/230/240 VAC	Default 230V, manual set by RS232 or LCD
	Waveform	Sinusoidal	
	Voltage regulation	±5%	
	DC offset	±200mV (Bat mode)	Empty load and linear load mode
Output frequency	Nominal frequency	50 / 60Hz	50/60Hz auto selection (default on)manual set by RS232, default 50 Hz
	Line mode	50Hz: (43.5 - 56.5)Hz (UPS mode) (40 - 70)Hz (APP/GEN mode) 60Hz: (53.5 - 66.5)Hz (UPS mode) (40 - 70)Hz (APP/GEN mode)	
	Battery mode	50 / 60Hz	
	Frequency regulation	±0.1Hz	
Output overload battery mode	102%<Load ≤120%	10 minute minimum, then alarm and turn off output (operation environment temperature -10 - 40°C)	
	120%< Load ≤150%	1 minute minimum, then alarm and turn off output	
	150%<Load ≤200%	10 seconds minimum, then alarm and turn off output	
Output short circuit protection	Battery mode	Current limitation	
	Line mode	Breaker (16A)	

① Battery Voltage Derating Curve

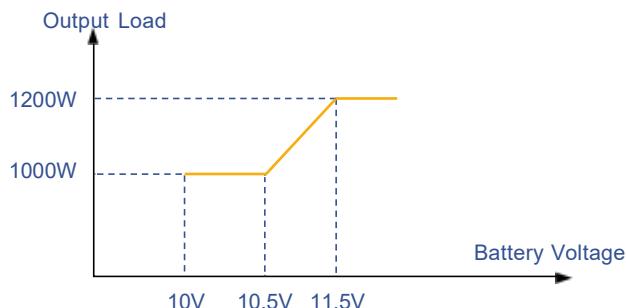

② Max Output Power rating

Max Output Power rating			
Battery	PV	AC Input	Max Output Power
L	N	N	Follow the battery voltage derating curve as shown in ①.
N	L	N	No Output
N	N	L	Input Voltage * Input Max current 10A
L	L	N	Follow the battery voltage derating curve as shown in ① to achieve 1.2kW are as follows: Battery Voltage \geq 11.8V;
N	L	L	Input Voltage * Input Max current 10A
L	N	L	Input Voltage * Input Max current 10A
L	L	L	Input Voltage * Input Max current 10A

Note: The "L" in the diagram represents the meaning of being accessed or connected, while the "N" signifies the meaning of not being accessed or not being connected.

8.5 Switch Time Specifications

	Items	Value	Comments
Switch time	Line Mode To Battery Mode	10ms(typical)	UPS mode
		10ms(typical)	Appliance mode
		60ms(typical)	Generator mode

8.6 Efficiency Specifications

	Item	Value	Comments
Efficiency	Line Mode	>99%@1.2KVA	Full R load, without battery connect.
	Battery Mode	>90%@1.2KVA	Full R load.
	Standby power	<30W	Empty load mode, battery disconnected.

9. Trouble Shooting

Problem	Fault Event	Trigger conditions	What to do
LED screen display fault code 5	Overtemperature	Fan lock exceeds 10 seconds.	Please check if the fan is not connected or if there are loose wiring issues. If the fan is not connected for more than 10 seconds, the machine will report fault code 5.
LED screen display fault code 12	Inverter short circuit	In battery mode or standby mode, if the inverter voltage is lower than 80V and the inverter current is greater than 5A, it should respond within 80-100ms.	1. Check if there is a short circuit at the output terminals (such as a screw piercing through the locking terminal causing a LN short circuit). 2. Verify if the inverter voltage and inverter current meet the triggering conditions.
LED screen display fault code 15	Model malfunction	The model number detection does not match any model number.	Check if the control board is assembled incorrectly or if the program is burned incorrectly.
LED screen display fault code 16	No boot program	The third digit of the communication is not 1.	Send command: TIDA1911000000000000

Problem	Fault Event	Trigger conditions	What to do
LED screen display fault code 58	Fan malfunction	Any of the fans rotating less than 10 times within 5 seconds.	<p>1. Check if the fan is not connected properly or if there are any loose connections.</p> <p>2. If the fan is properly connected:</p> <ol style="list-style-type: none"> Check if there is any issue with the fan detection circuit, usually caused by excessive soldering underneath the control board socket. Check if the fan itself is damaged.
Unable to start	Battery	Due to the need for a voltage of $\geq 11.5V/N$ to start the machine in battery mode, common reasons for failure to start include improper calibration or insufficient battery voltage.	<p>1. Check if the battery voltage sampling is functioning properly and if the battery voltage has been calibrated.</p> <p>2. Use a multimeter to measure the voltage at the battery terminals (using a DC power supply or a real battery) to see if it reaches the minimum voltage of 11.5V per cell for startup. Note: It is crucial to configure the battery voltage according to the machine model.</p> <p>3. Check whether BSU configuration in page 46 is accessible. Connecting the wrong battery voltage can cause capacitor explosion.</p>

Problem	Fault Event	Trigger conditions	What to do
	Utility power		<p>1. Check for any short circuits at the mains terminal (such as a screw piercing through and causing a short circuit between the live and neutral terminals).</p> <p>2. Check if there are any wiring errors, such as mistakenly connecting the mains input to the output terminals.</p>
	PV		<p>Check if the PV input voltage is too close to the critical threshold.</p>
PV not charging			<p>Connecting the wrong battery voltage can result in damage to the auxiliary power supply on the PV side, causing a loss of power and inability to communicate with the main control.</p>

