

# Inflatable Wipeout Manual

Item No.:XW-35

Popular Game Inflatable Wipeout 2200W

POWER: 2200W

VOLTAGE: AC100-240V

CYCLE: 50HZ-60HZ

AMPS WITH BACK PRESSURE: 10A

## Operation (How to play)

1. Use the key to start the control. Switch the Emergency Stop to put the machine into standby.
2. Flick the switch **Spin On/Off** up.  
Play the music. Keep pushing the button start of the music player in 1-2 seconds to start music player.

**(There are 2 modes to play the Inflatable Wipeout. Manual or Auto)**

### A) Play the mode Auto

- A1. Flick the switch **Manual/Auto** down, now it's in the mode Auto.  
(**Stop/Start** is only working under the mode Auto).
- A2. Push the button **Start** to start the Inflatable Wipeout. The Inflatable Wipeout will move automatically in three difficulty levels (Greenhorn, Cowboy, and Ambush).  
Firstly the Inflatable Wipeout will keep moving in 60 seconds under difficulty Greenhorn automatically after you push the button start.  
After 60 seconds, the Inflatable Wipeout will move faster under difficulty Cowboy and Ambush in every 60 seconds. Auto model runs 3 minutes before it stops.
- A3. Turn off the machine.  
Push the button **Emergency Stop** or **Stop** to stop the machine. Turn off the control by key.

(During the mode Auto, other manual control is not working, expect for the **Stop** and **Emergency Stop**. Unless you flick the mode switch up to be Manual, if you want to play it under mode Manual.)

### B) Play the mode Manual

- B1. Flick the switch **Manual/Auto** up, now it's in the mode Manual.  
(Now it's ok to play the Inflatable Wipeout manually.)

B2. Slide the rotary switch Spin Speed to set the spin speed. (Suggest firstly set the speed from slow to high gradually.)

B3. Control the handle stick to control the Inflatable Wipeout's movement.

Push the bottom Emergency Stop to stop the game.

(During the mode Manual, the operator totally control the Inflatable Wipeout's movement, and no time limit.)

B4. Turn off the machine

Push the button **Emergency Stop** to stop the machine. Turn off the control by key.

PS. This is a simple version of manual for control part. Other information is updating...