

INSTRUCTION MANUAL

1/10 Scale 4WD RC Nitro & Electric Powered Car

DT5 N1/N2



RH1008 - N1 (Single Speed)

RH1009 - N2 (Two Speed)

DT5 EBD/EBL



RH1018 - EBD (Brushed)

RH1019 - EBL (Brushless)

V18.12

1/10 Scale 4WD RC Nitro Powered Car

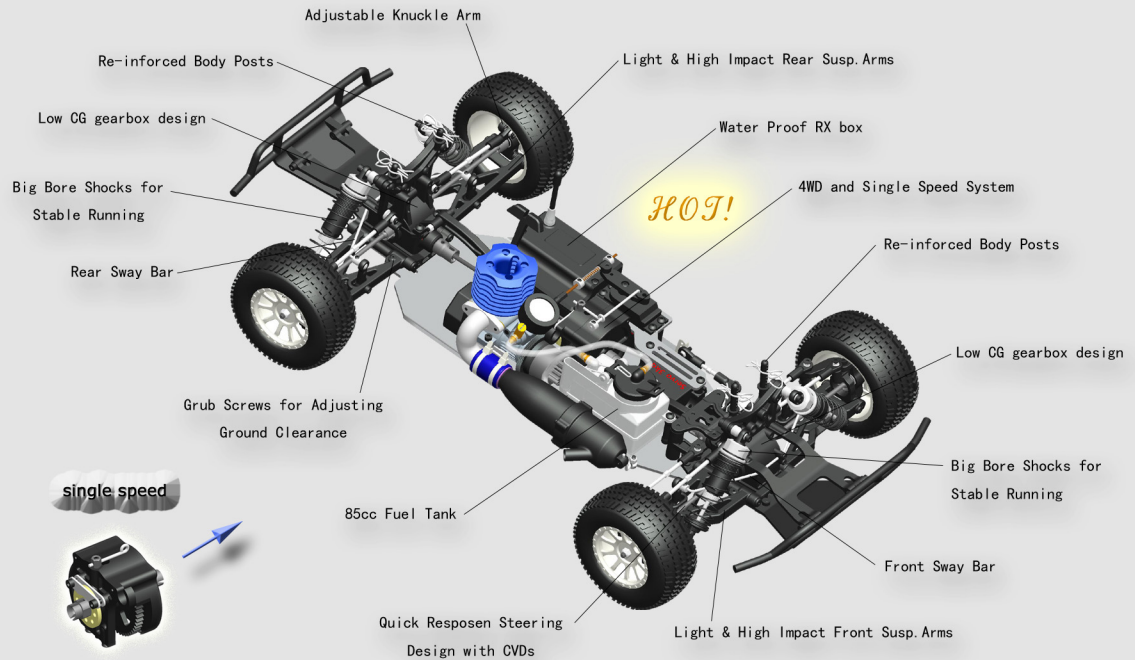
RH1008 DT5 N1 (Single Speed)

RH1001 Specs. :

- 1、Length: 530 mm (N1)
- 2、Width: 290 mm (N1)
- 3、Height: 180 mm (N1)
- 4、Wheelbase: 325 mm
- 5、Gear Ratio: 8.3:1
- 6、Tyre: $\phi 95 \times 40$ mm (N1)
- 7、Weight: 1950 g (N1)

Standard Equipments:

- 1、Steering Servo: 3kg/cm
- 2、Throttle Servo: 3kg/cm
- 3、Engine: G0.18 or SH.18
- 4、Radio: 2CH AM




RH1009 DT5 N2 (Two Speed)

RH1002 Specs. :

- 1、Length: 530 mm (N2)
- 2、Width: 290 mm (N2)
- 3、Height: 180 mm (N2)
- 4、Wheelbase: 325 mm
- 5、Gear Ratio: 6.1:1 (H)
9.1:1 (L)
- 6、Tyre: $\phi 95 \times 40$ mm (N2)
- 7、Weight: 2000 g (N2)

Standard Equipments:

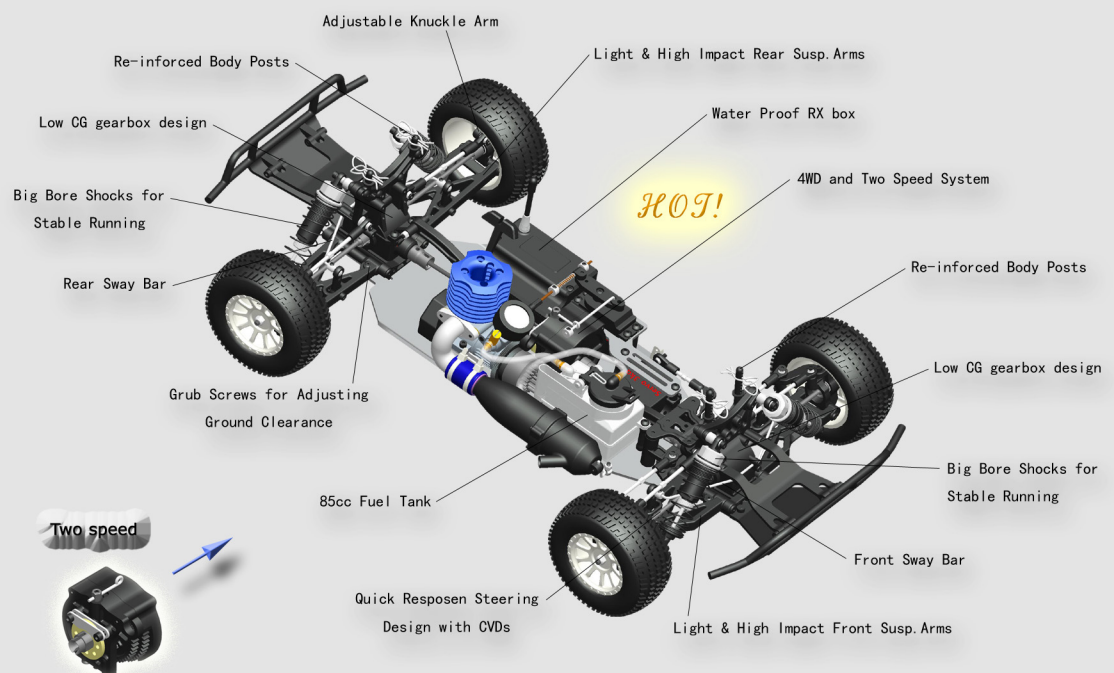- 1、Steering Servo: 3kg/cm
- 2、Throttle Servo: 3kg/cm
- 3、Engine: G0.18 or SH.18
- 4、Radio: 2CH AM



Add: 301, Bldg.K, No.13, Zaohekeng Ind., Jixia Village, Nanwan, Longgang zone, Shenzhen, Guangdong, China

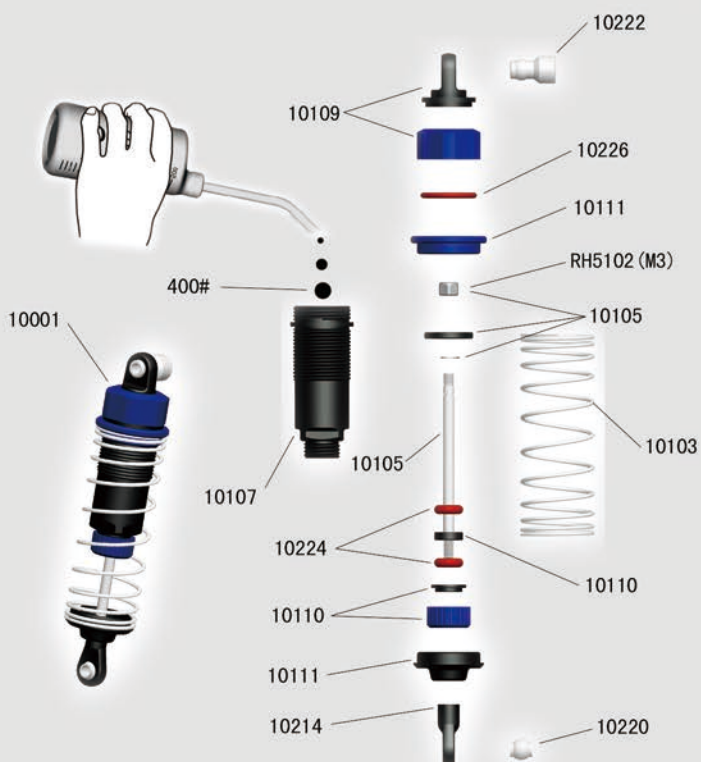
Tel: 86-755 28669639

<http://www.riverhobby.com>

Fax: 86-755 28669640


E-mail: info@riverhobby.com ; riverhobby_fullfunrc@126.com

Front Shocks




(Dia. 1-1)

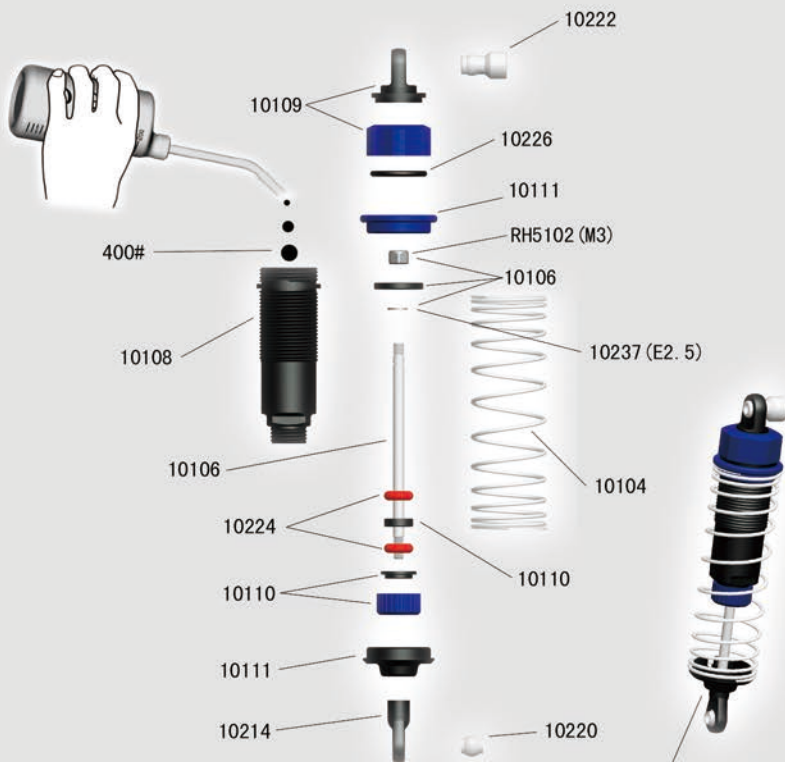Rear Shocks



(Dia. 1-2)

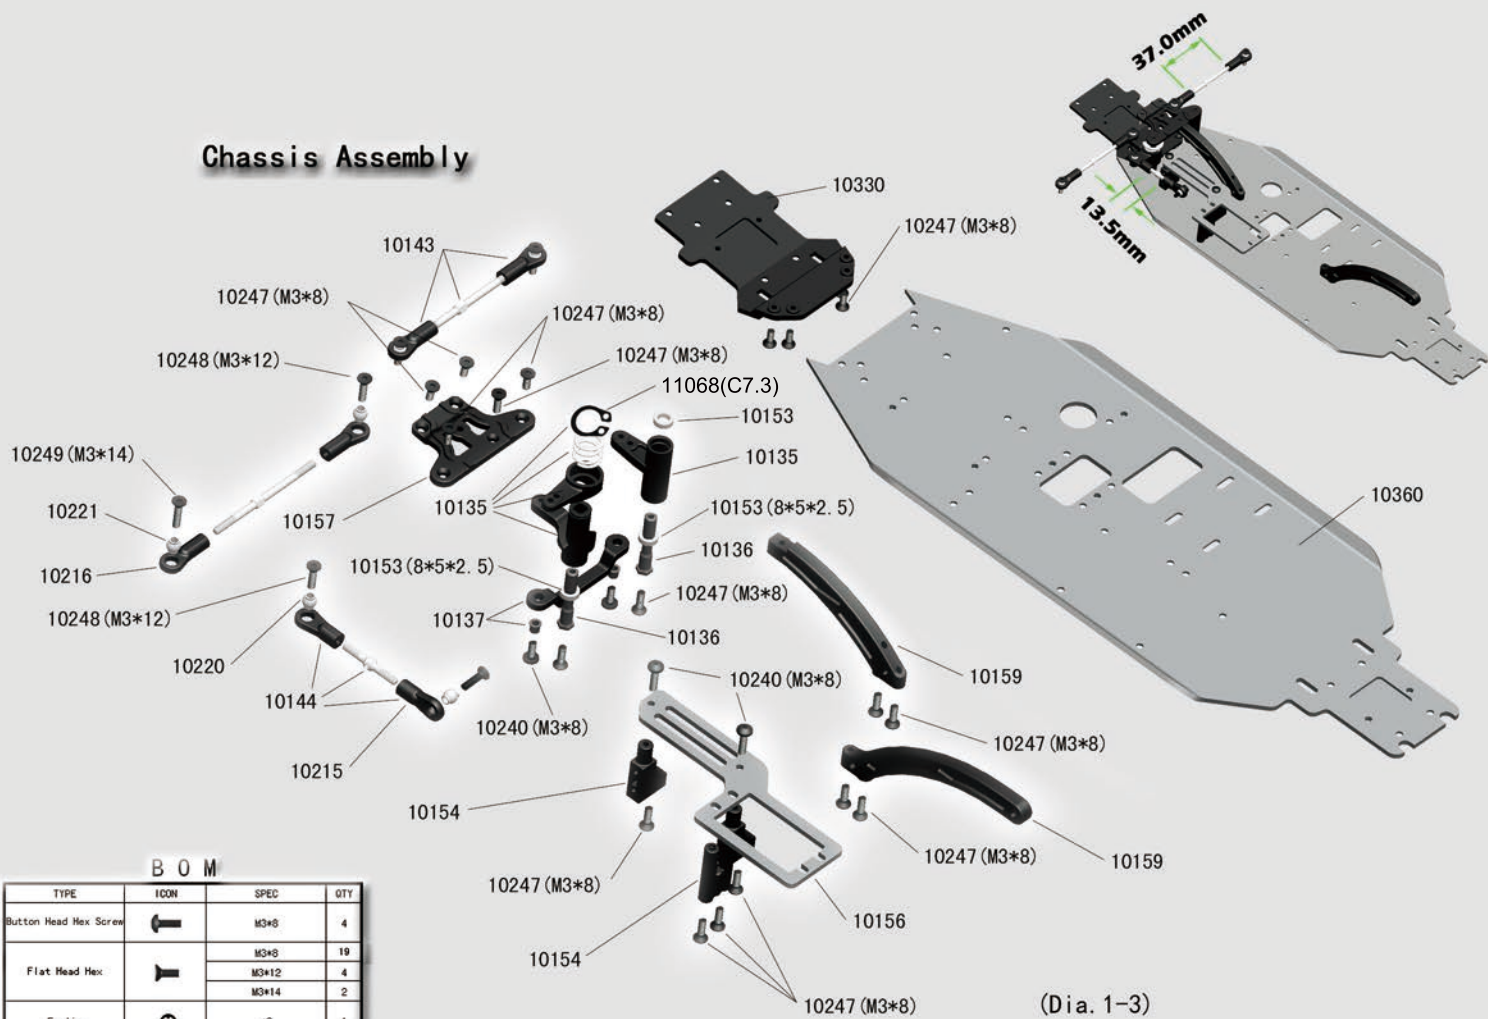
Chassis Assembly

B O M


TYPE	ICON	SPEC	QTY
Button Head Hex Screw		M3x5	4
Flat Head Hex		M3x8	19
		M3x12	4
		M3x14	2
E clip		#8	1
Ball Bearing		#6x5x2.5	3

Front Assembly


TYPE	ICON	SPEC	QTY
Round Head Self Tapping Hex Screw		2#10	4
		3#6	4
Button Head Hex Screw		M3#8	3
		M3#12	2
		M3#8	4
Cap Head Hex Screw		M3#14	2
		M3#16	2
		M3#18	2
		M3#8	2
		M3#10	10
		M3#12	3
		M3#14	2
		M3#18	2
		M3#20	2
		M3#36	2
		M3#3	2
Set Screw		M4#4	1
		M4#10	2
Ring Self Tapping Screw		3#4	2
Washer		#6#3, 1#0.2	2
Nylon Lock Nut		M3	2
E clip		#2.5	5
		#8, 05#4, 05#4, 15	4
O'Ring		#8#3#2.5	1
		#15, 6#412, 6#41	2
Ball Bearing		#15#410#4	2
		#10#40#4	6

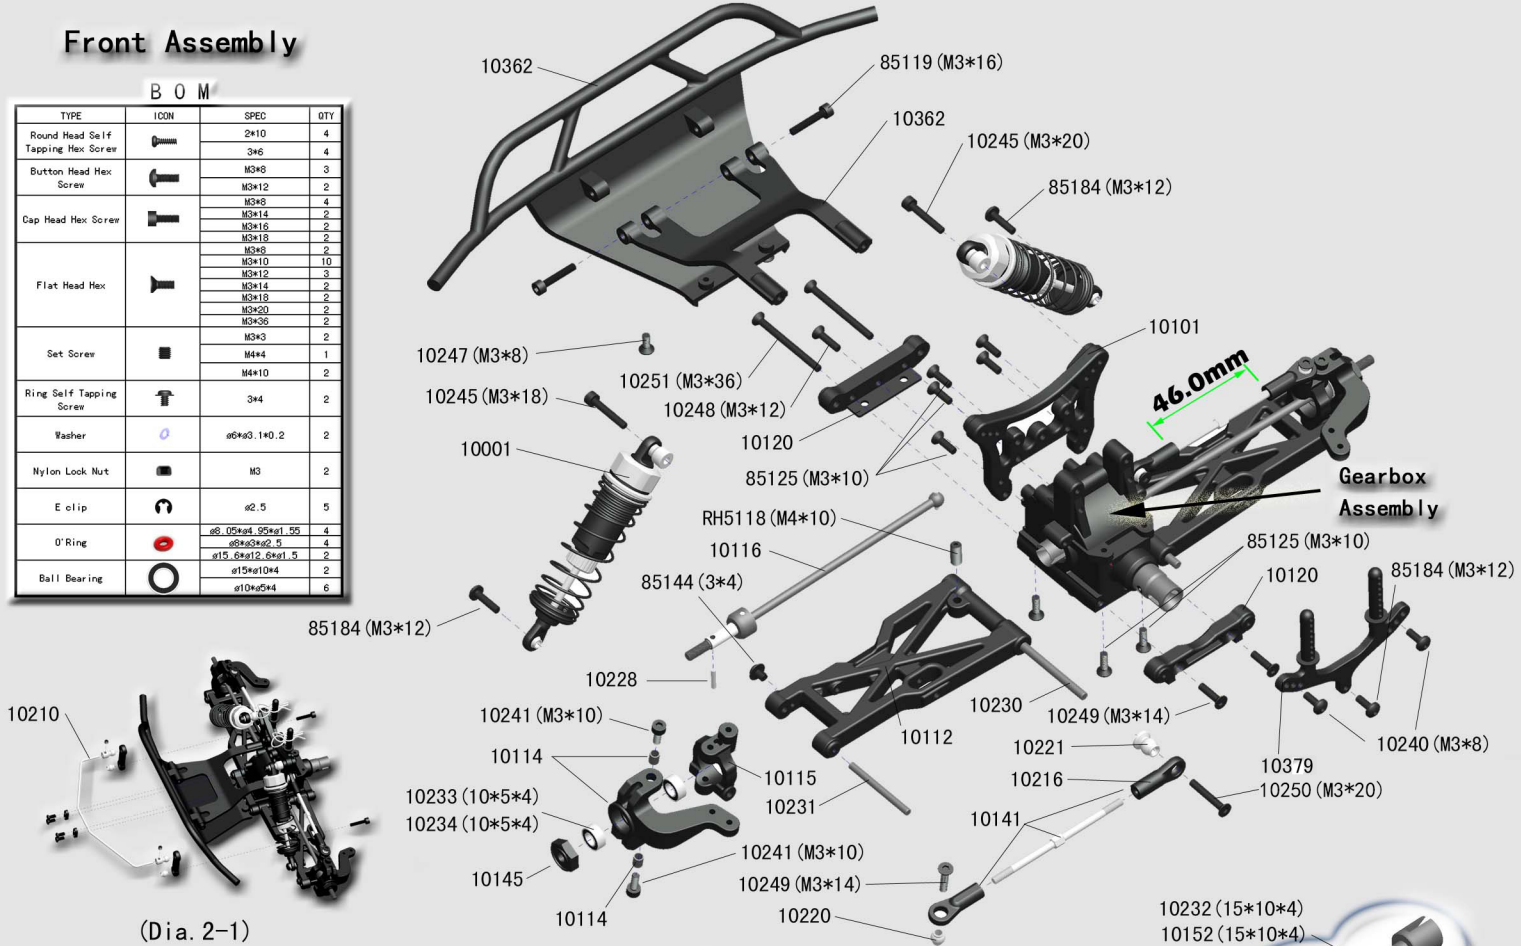

Gearbox Assembly

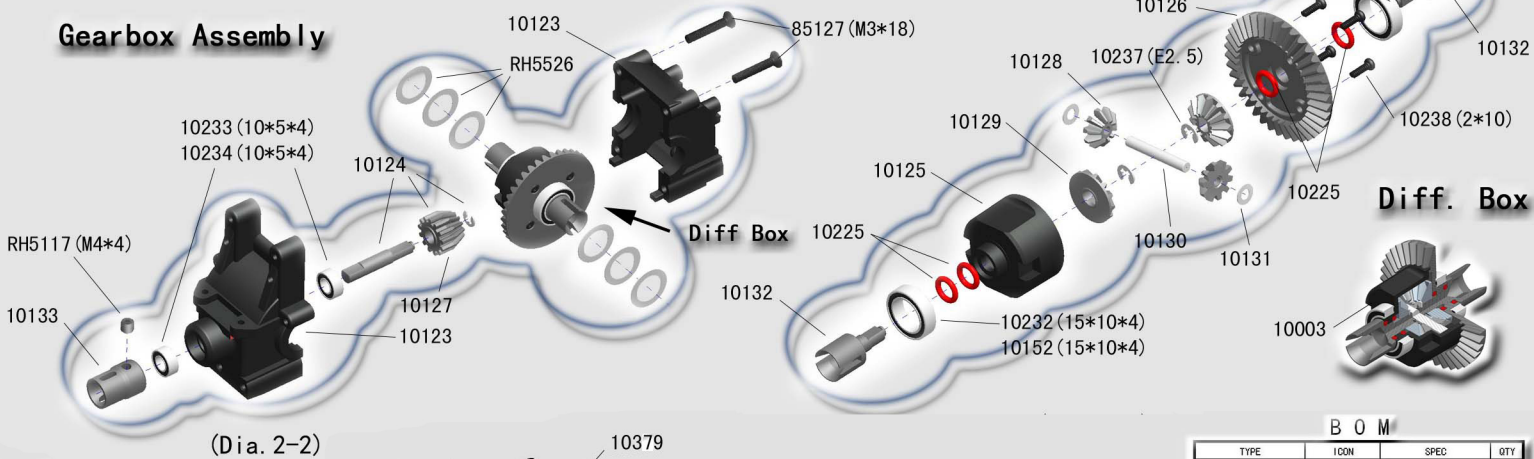


Rear Assmely

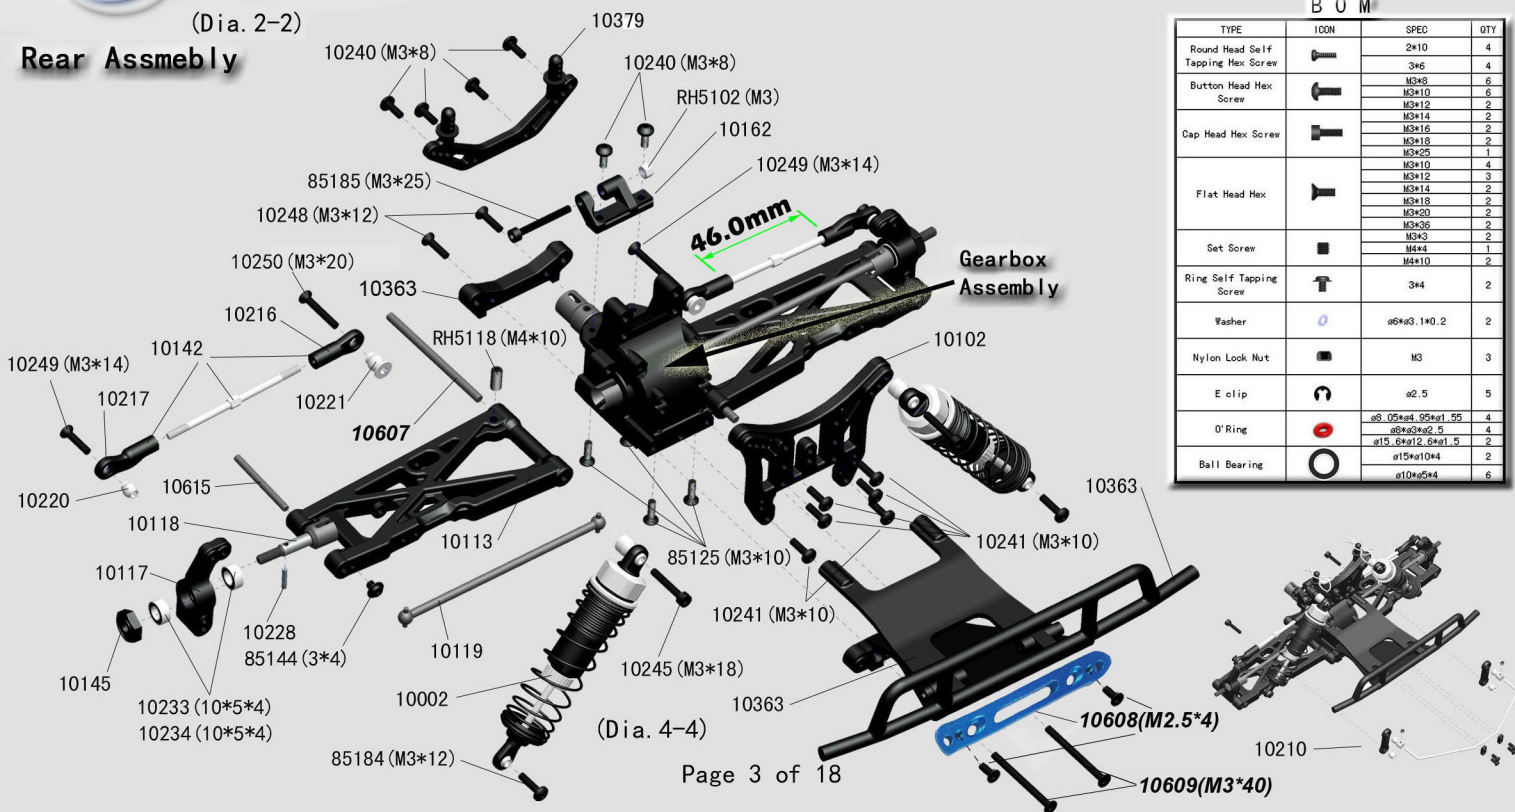


TYPE	ICON	SPEC	QTY
Round Head Self Tapping Hex Screw		2x10	4
		3x6	4
Button Head Hex Screw		M3x8	6
		M3x10	5
		M3x12	2
		M3x14	2
Cap Head Hex Screw		M3x16	2
		M3x18	2
		M3x20	1
		M3x10	4
		M3x12	3
Flat Head Hex		M3x14	2
		M3x18	2
		M3x20	2
		M3x36	2
Set Screw		M3x3	2
		M4x4	1
		M4x10	2
Ring Self Tapping Screw		3x4	2
Washer		a6x10, 1x0.2	2
Nylon Lock Nut		M3	3
E clip		a2, 5	5
O'Ring		a8, O5x10, O5x11, 55	4
		a8x3x2, O2, 5	4
		a15, O6x12, O6x1, 5	2
Ball Bearing		a15x10x4	2
		a10x5x4	6

Assembly Steps:

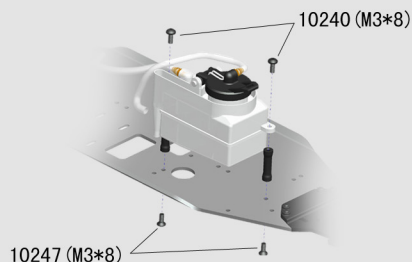
1、Fasten the fuel tank posts to the chassis, then the fuel tank assembly. (See Dia. 4-6)



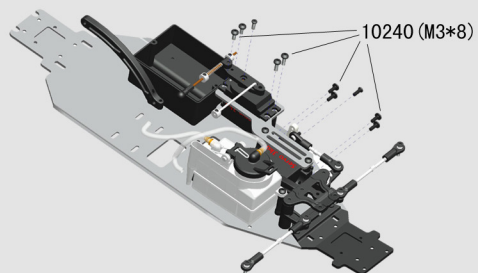
2、Assemble Chassis. (See Dia. 1-3, 4-1, 4-2)



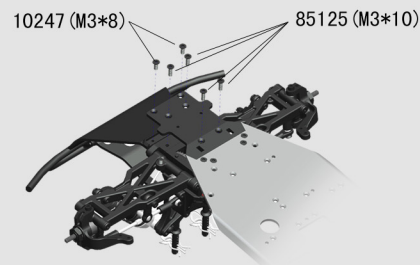
3、Assemble the front assembly to the chassis. (See Dia. 2-1)



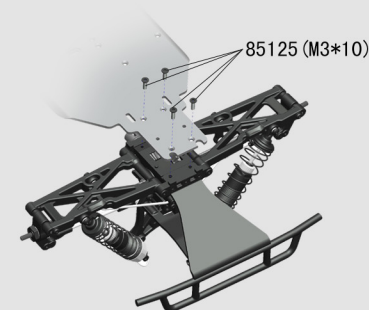
4、Assemble the rear assembly to the chassis. (See Dia. 2-4)



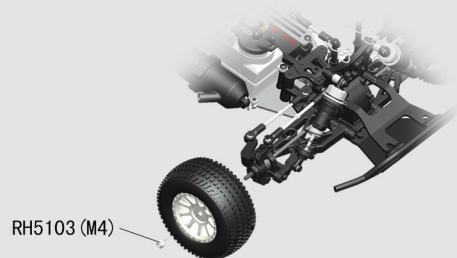
5、Tighten the wheels. (See Dia. 4-4 or 4-5)



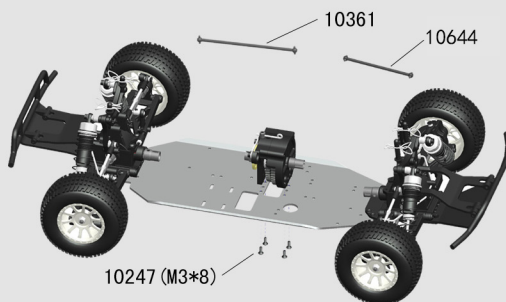
6、Assemble central transmission and rear central drive shaft to the chassis. (See Dia. 3-2 or 3-3)



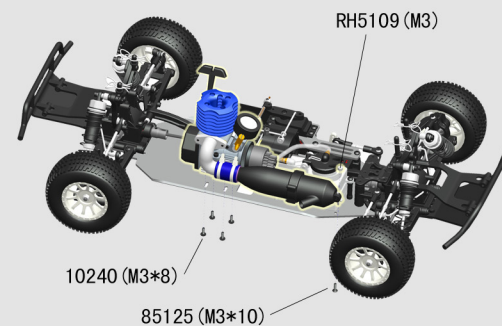7、Tighten the engine assembly to the chassis. (See Dia. 3-1)







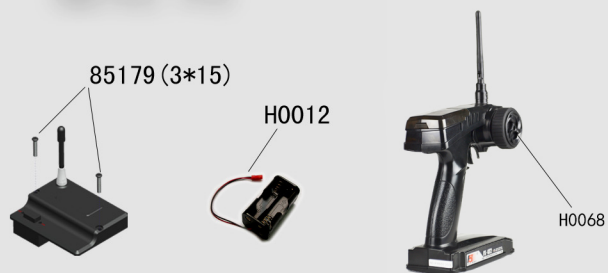8、最后，请连接好电池及接收机经调试好功能后再锁上电池盒上盖、装配好车身，至此整车就安装完毕了。 (See Dia. 4-3)




Ready To Run !!!



    


Assembly Steps:

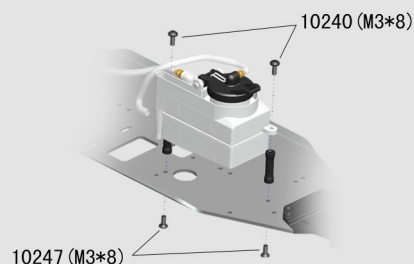
1、Fasten the fuel tank posts to the chassis, then the fuel tank assembly. (See Dia. 4-6)



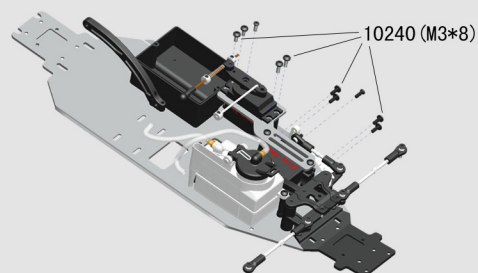
2、Assemble Chassis. (See Dia. 1-3, 4-1, 4-2)



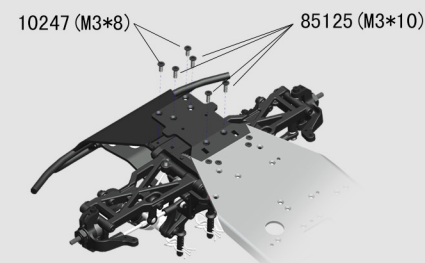
3、Assemble the front assembly to the chassis. (See Dia. 2-1)



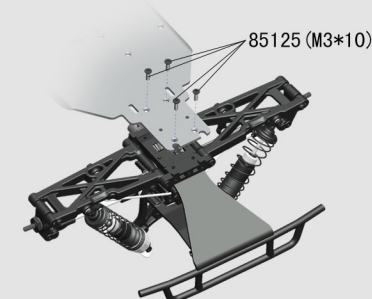
4、Assemble the rear assembly to the chassis. (See Dia. 2-4)



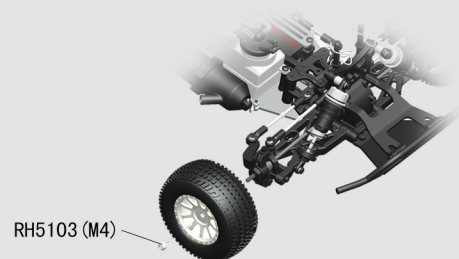
5、Tighten the wheels.
(See Dia. 4-4 or 4-5)



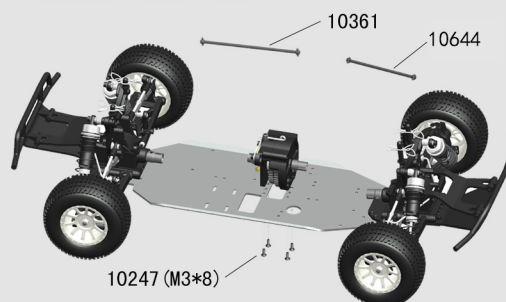
6、Assemble central transmission and rear central drive shaft to the chassis. (See Dia. 3-2 or 3-3)



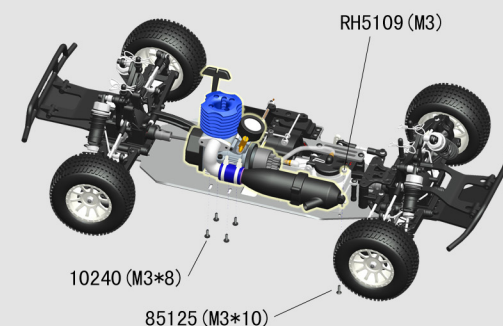7、Tighten the engine assembly to the chassis. (See Dia. 3-1)



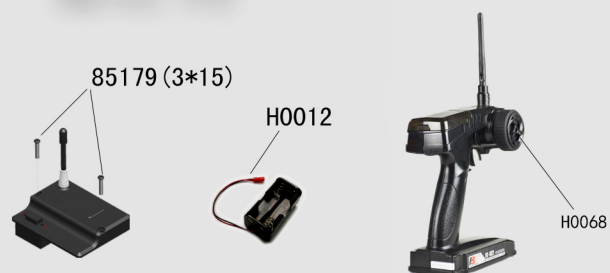8、最后，请连接好电池及接收机经调试好功能后再锁上电池盒上盖、装配好车身，至此整车就安装完毕了。
(See Dia. 4-3)



Ready To Run !!!



1/10 Scale 4WD Electric Short Course Truck

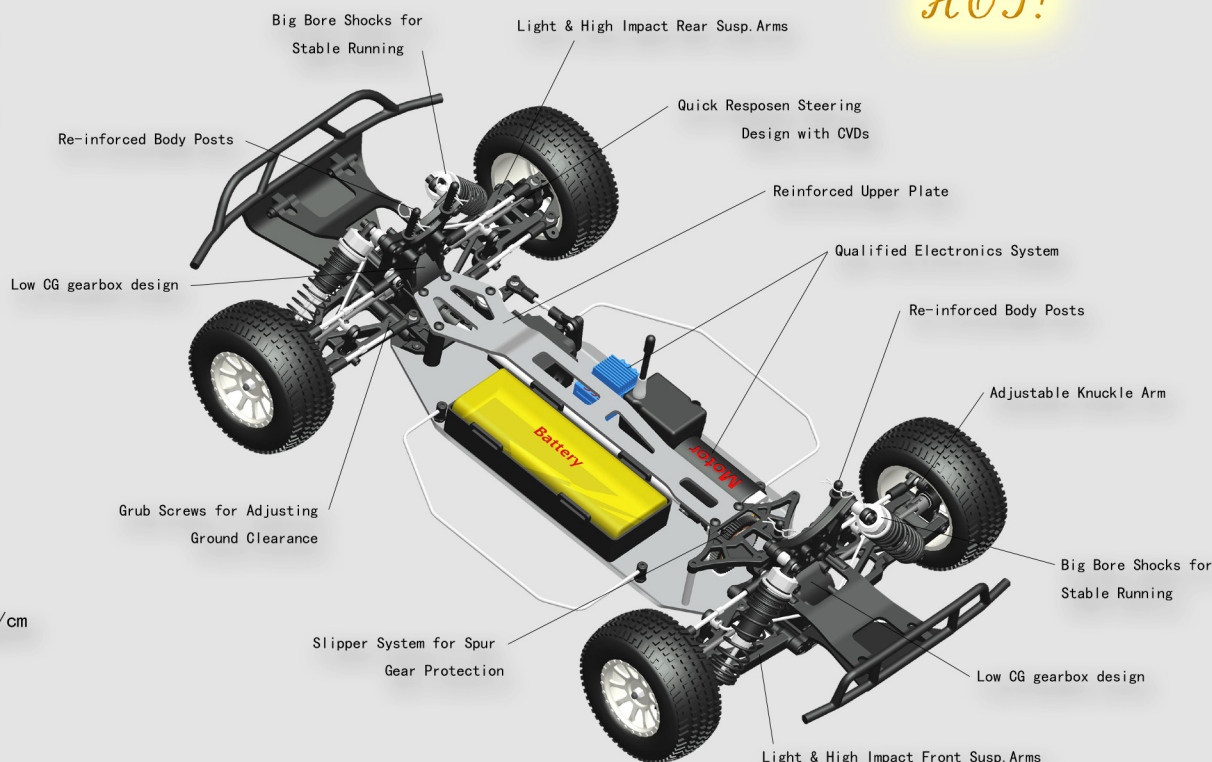
RH1018 DT5 EBD(Brushed)

RH1019 DT5 EBL(Brushless)

Specifications:

- 1、Length: 530 mm
- 2、Width: 290 mm
- 3、Height: 180 mm
- 4、Wheelbase: 325 mm
- 5、Gear Ratio: 8.3:1
- 6、Tyres: $\Phi 95 \times 40$ mm
- 7、Weight: 1950 g

HOT!



Standard Equipments:

- 1、Steering Servo: 3kg/cm
- 2、Motor: 550 (EBD)
3650 (EBL)
- 3、ESC: 60A (EBD)
300A (EBL)
- 4、Battery: Ni-MH SC1800mAh 7.2V (EBD)
Li-Po 2700mAh 7.4V $\leq 25C$ (EBL)
- 5、RADIO: 2CH A M (EBD)
2CH 2.4GHz (EBL)

EBL Brushless System Set:

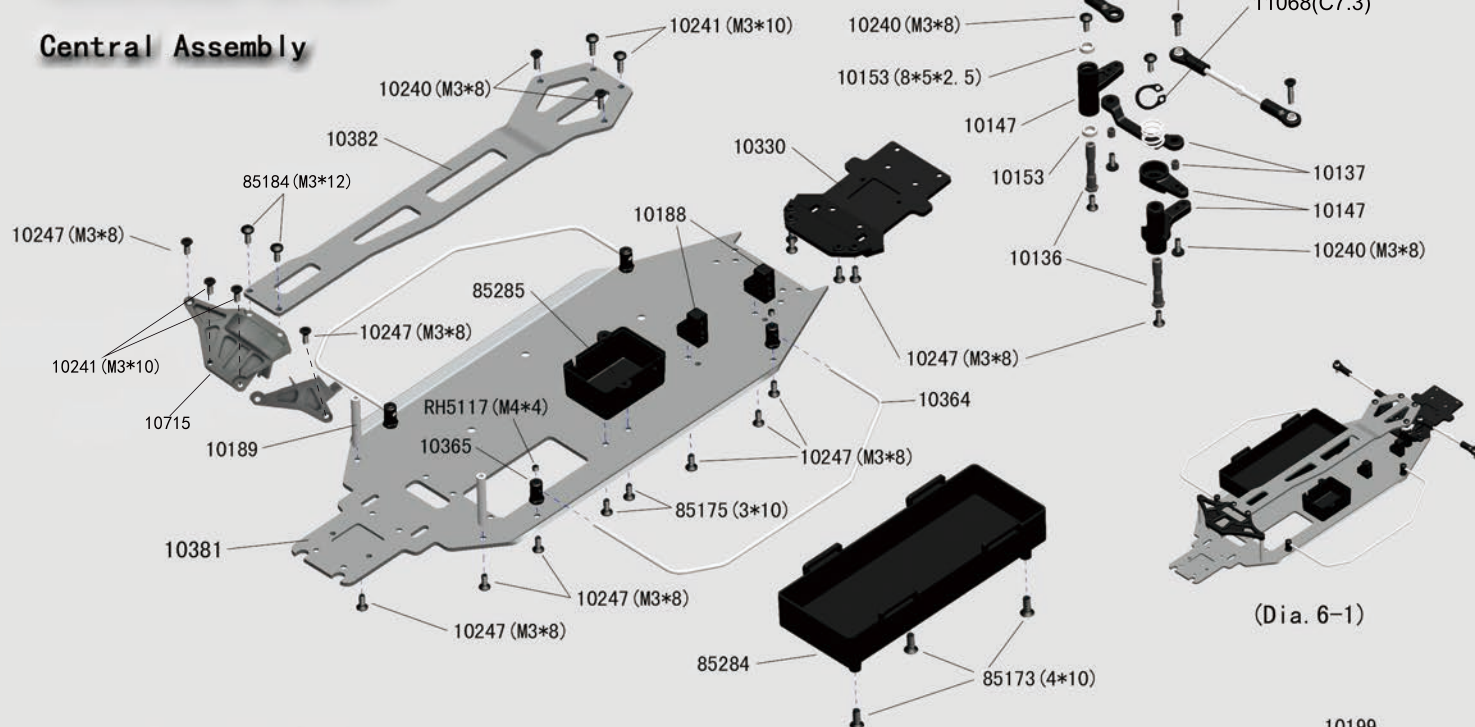


EBD Brushed System Set:




And the rear assbly is all same as DT5 N1 but without center outdrive cup(see Dia. 6-2)

Central Assembly




Rear Assembly

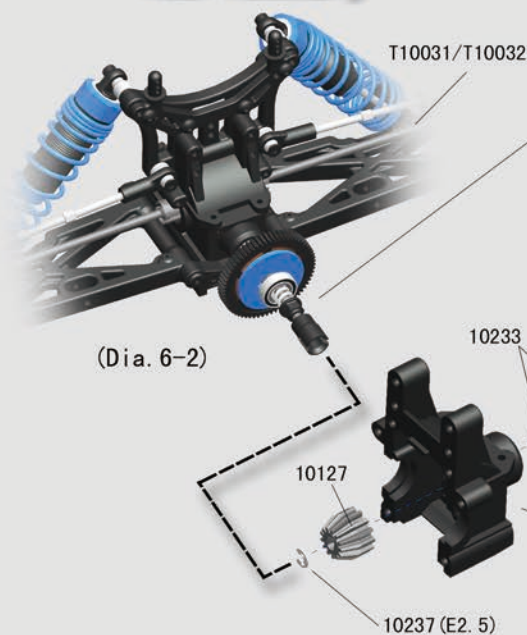

Motor Assembly



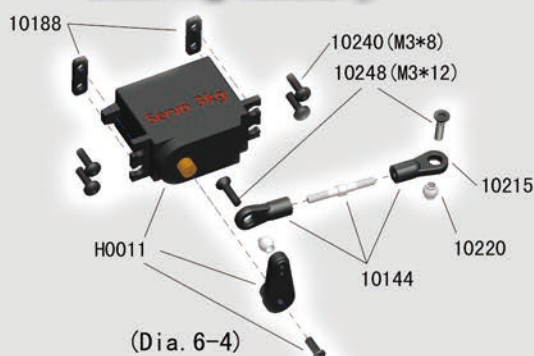Steering Assembly



ESC

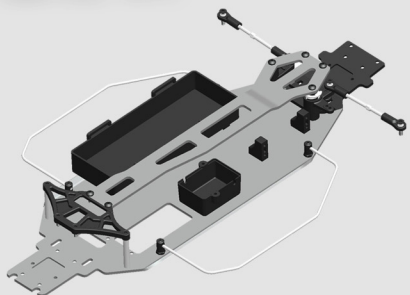


Receiver




ASSEMBLY STEPS:


1、Assembly center chassis part.
(See Dia. 6-1)



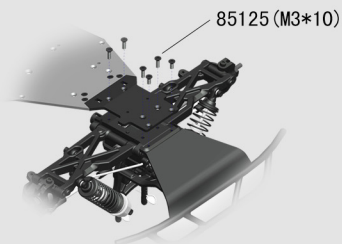
2、Assemble front assembly to chassis front. (See Dia. 2-1)



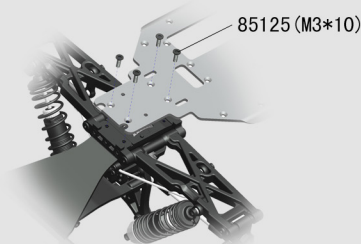
3、Assemble rear assembly to chassis rear part. (See Dia. 2-4)




5、Mount the wheels.
(See Dia. 4-4、4-5)

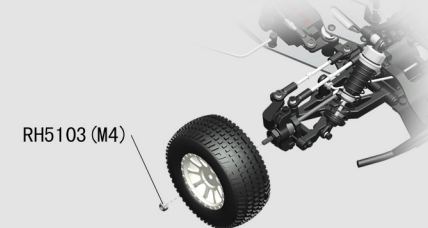

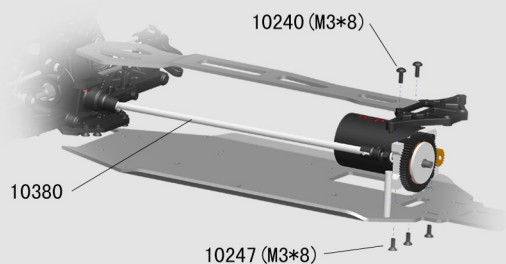6、Mount the motor assembly and central drive shaft. (See Dia.6-6)



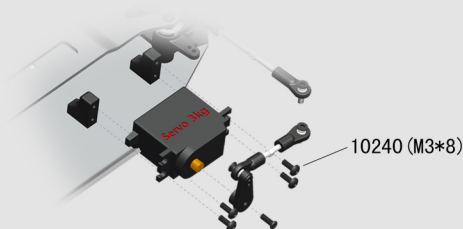7、Assemble steering servo and linkage. (See Dia.6-4)






Ready To Run !!!










8、Assemble ESC, receiver, battery and connect them to setup. (See Dia.6-3、6-5)









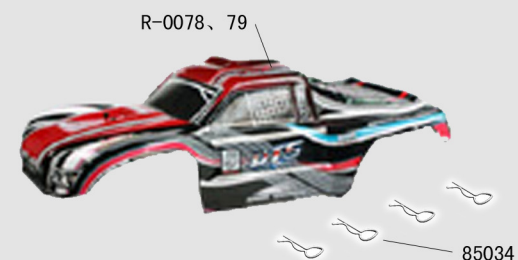
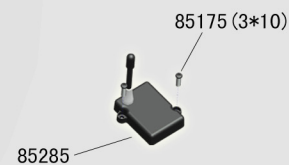
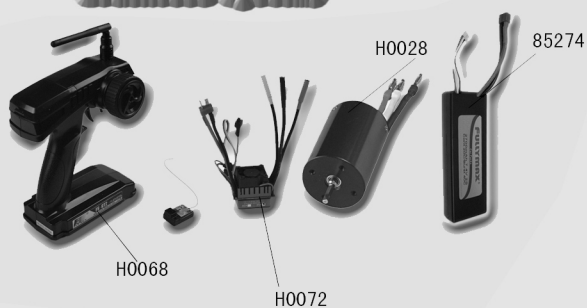
Brushless System:







Part List

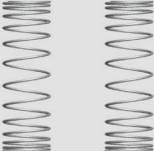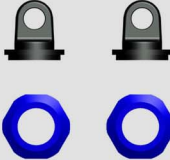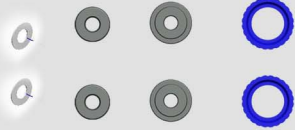 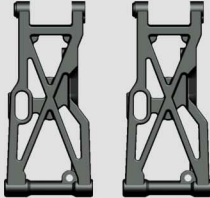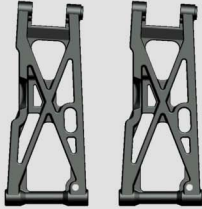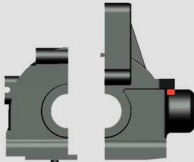10101 - Front Shock Tower 1pc  RH1008/RH1009/RH1018/RH1019	10102 -Rear Shock Tower 1pc  RH1008/RH1009/RH1018/RH1019	10001-Front Shocks 2pc  RH1008/RH1009/RH1018/RH1019	10002 - Rear Shock Tower 2pc  RH1008/RH1009/RH1018/RH1019
10103-Front Shock Spring 2pc  RH1008/RH1009/RH1018/RH1019	10104-Rear Shock Spring 2pc  RH1008/RH1009/RH1018/RH1019	10105-Front Shock Shaft & Piston Set 2sets  RH1008/RH1009/RH1018/RH1019	10106-Rear Shock Shaft & Piston Set 2sets  RH1008/RH1009/RH1018/RH1019
10107-Front Shock Body 2pc  RH1008/RH1009/RH1018/RH1019	10108-Rear Shock body 2pc  RH1008/RH1009/RH1018/RH1019	10109-Shock Upper Cap 2sets  RH1008/RH1009/RH1018/RH1019	10110-Shock Lower Caps 2sets  RH1008/RH1009/RH1018/RH1019
10111-Shock Lower holder & Adjust Ring 2sets  RH1008/RH1009/RH1018/RH1019	10112-Front Lower Susp. Arm 2pc  RH1008/RH1009/RH1018/RH1019	10113-Rear Lower Susp. Arm 2pc  RH1008/RH1009/RH1018/RH1019	10114-Steering Knuckle Arm 1set  RH1008/RH1009/RH1018/RH1019
10115-Uprights 2pc  RH1008/RH1009/RH1018/RH1019	10116-Front CVD 2pc  RH1008/RH1009/RH1018/RH1019	10117-Rear Hub Carrier 2pc  RH1008/RH1009/RH1018/RH1019	10118-Rear Drive Shaft 2pc  RH1008/RH1009/RH1018/RH1019
10119-Rear Dogbones 2pc  RH1008/RH1009/RH1018/RH1019	10123-Gearbox Housing Set 2pcs  RH1008/RH1009/RH1018/RH1019	RH5526-Diff 16T Gear Washer 6pcs  RH1008/RH1009/RH1018/RH1019	10124-Diff.Drive Gear w/pin 2sets  RH1008/RH1009/RH1018/RH1019

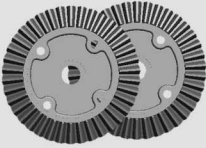  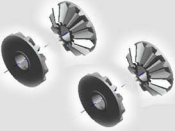 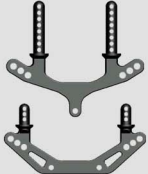
 
 
 
 
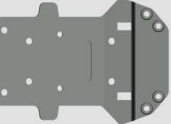
Part List

10125-Diff Case 2pcs  RH1008/RH1009/RH1018/RH1019	10126-Diff Drive Spur Gear 2pcs  RH1008/RH1009/RH1018/RH1019	10127-Diff Drive Gear 2pcs  RH1008/RH1009/RH1018/RH1019	10128-Diff Bevel Gear S. 4pcs  RH1008/RH1009/RH1018/RH1019
10129-Diff Bevel Gear B. 4pcs  RH1008/RH1009/RH1018/RH1019	10130-Diff Pin 2pcs  RH1008/RH1009/RH1018/RH1019	10131-Washer 6pcs  RH1008/RH1009/RH1018/RH1019	10132-Diff Drive Cup 4pcs  RH1008/RH1009/RH1018/RH1019
10133-Center Coupler 3pcs  RH1008/RH1009/RH1018/RH1019	10379-Body Post 2pcs  RH1008/RH1009/RH1018/RH1019	10135-Servo Saver (GP) 1set  RH1008/RH1009	10136-Servo Saver Post 2pcs  RH1008/RH1009/RH1018/RH1019
10137-Steering Ackerman  RH1008/RH1009/RH1018/RH1019	10141-Front Upper Susp. Arm 2sets  RH1008/RH1009/RH1018/RH1019	10142-Rear Upper Susp. Arm 2sets  RH1008/RH1009/RH1018/RH1019	10143-Steering Arm 2sets  RH1008/RH1009/RH1018/RH1019
10144-Servo Linkage 1pc  RH1008/RH1009/RH1018/RH1019	10145-Wheel Hub 4pcs  RH1008/RH1009/RH1018/RH1019	10146-Antenna Pipe Set 2sets  RH1008/RH1009/RH1018/RH1019	10147-Servo Saver (EP) 1set  RH1018/RH1019
10330-Chassis Front Part 1pc  RH1008/RH1009/RH1018/RH1019	10522-Tyre & insert 2sets  RH1008/RH1009/RH1018/RH1019	10523-Wheel complete 2sets  RH1008/RH1009/RH1018/RH1019	10524-Rim 2pcs  RH1008/RH1009/RH1018/RH1019

  
 
 
Part List

10362-Front bumper Set 1set  RH1008/RH1009/RH1018/RH1019	10363-Rear bumper Set 1set  RH1008/RH1009/RH1018/RH1019	10003-Diff Gearbox Set 1set  RH1008/RH1009/RH1018/RH1019	10607 Rear suspension arm pins w/screws 2pcs 
10151-Manifold Gasket 6pc  RH1008/RH1009	10152-Metal Bushing 15*10*4 6pc 	10153-Metal Bushing 8*5*2.5 6pc 	10154-Servo & Upper Plate Mounts 1set  RH1008/RH1009
10156-Upper Plate 1pc  RH1008/RH1009	10157-Upper Steering Plate  RH1008/RH1009	10004-Fuel tank Set 1set  RH1008/RH1009	10158-Fuel Line 2pcs  RH1008/RH1009
10159-Front/Rear Chassis Brace  RH1008/RH1009	10160-Receiver Box 1set  RH1008/RH1009	85026-Switch Cover 2pcs  RH1008/RH1009	10161-Servo Horns  RH1008/RH1009
10162-Chassis Brace mount 1pc  RH1008/RH1009	10163-Stopper 6pcs  RH1008/RH1009	10164-Throttle Linkage 1set  RH1008/RH1009	10165-Central Dongbone F. 1pc  RH1008/RH1009
P0010-GO. 18 engine 1pc P0011-SH. 18 Engine 1pc  RH1008/RH1009	10167-Air filter 1Set  RH1008/RH1009	10168-Tuned Pipe 1Set  RH1008/RH1009	10169-Silicone Coupler 1Set  RH1008/RH1009

 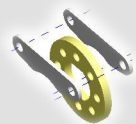  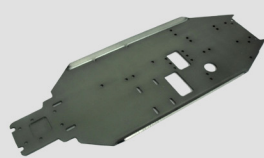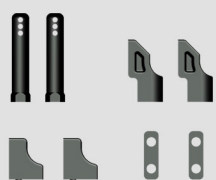Part List

85195-Zip Tie 6pcs  RH1008/RH1009/RH1018/RH1019	10170-Manifold 1Set  RH1008/RH1009	85035-Flywheel 1pc  RH1008/RH1009	85087-Clutch Nut 2pcs  RH1008/RH1009
85045-Clutch Shoes & Springs  RH1008/RH1009	10171-Clutch Bell (14T) 1pc  RH1008	10172-Clutch Bell (two speed) 1pc  RH1009	10173-Engine mount 2pcs  RH1008/RH1009
10005-Central Transmission Complete 1Set (Single Speed)  RH1008	10174-Central Transmission Bulkheads 2pcs  RH1008/RH1009	10175-Brake Post 1Set  RH1008/RH1009	10176-Brake Set 1set  RH1008/RH1009
10177-Brake Cup 2pcs  RH1008/RH1009	10178-Single Speed Shaft w/pin  RH1008	10179-50T Gear (Single Speed) 1pc  RH1008	10006-Central Transmission Complete 1Set (Two Speed)  RH1009
10180-Two Speed Clutch 1Set  RH1009	10181-Two Speed Shaft 1pc  RH1009	10182-50T Two Speed Gear 1pc  RH1009	10183-45T Two Speed Gear 1pc  RH1009
10360-N1/N2 Chassis Plate 1pc  RH1008/RH1009	10361-Central Dongbone R. 1pc  RH1008/RH1009	10185-Battery Cover (EP) 1pc  RH1018/RH1019	10188-Battery Post 2sets  RH1018/RH1019





 
 
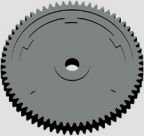
Part List

10189-Post for Rear Spur Gear Cover 2pc  RH1018/RH1019	10190-Motor Mount (EP) 1pc  RH1018/RH1019	10191-Slipper Complete (EP) 1set  RH1018/RH1019	10192-Slipper Pad (EP) 2pc  RH1018/RH1019
10193-Slipper Gasket (EP) 2pc  RH1018/RH1019	10194-65T Spur Gear (EP) 1pc  RH1018/RH1019	10195P-Slipper Shaft (EP) 1pc  RH1018/RH1019	10196-Slipper Spring Bracket (EP) 1pc  RH1018/RH1019
10197-Slipper Spring (EP) 1pc  RH1018/RH1019	10715-Rear Spur Gear Cover (EP) 1pc  RH1018/RH1019	10199-Slipper Drive Cup 1pc  RH1018/RH1019	10200-BEARING BRACKET (EP) 1pc  RH1018/RH1019
10323-Pinion Gear 23T(EP) 1pc  RH1018/RH1019	10203-Spur gear cover (EP) 1pc  RH1018/RH1019	10210-Sway Bar 2Sets  RH1018/RH1019	10364-Body guard frame 2pcs  RH1018/RH1019
10365-Body guard frame bracket 4pc  RH1018/RH1019	10380-Center Drive Shaft (EP) 1pc  RH1018/RH1019	10381-EBD/EBL chassis plate 1pc  RH1018/RH1019	10382-EBD/EBL upper plate 1pc  RH1018/RH1019
85034-Body Clip (Medium Size) 6pcs 	85029-Body Clip (Small Size) 6pcs 	10214-Shock Ball End 6pcs 	10215-Servo Link Ball End 6pcs 



Part List

10216-Steering Linkage Ball End 6pcs 	10217-Rear Upper Linkage Ball End 6pcs 	10218-Sway Bar Fix Plate 6pcs 	10219-Sway Bar Holders 6pcs 
10220-Ball A 6pcs 	10221-Ball B 6pcs 	10222-Ball C 6pcs 	10223-Ball D 6pcs 
10224-Shock O-ring (Lower) 6pcs 	10225-Diff O-ring Seal 6pcs 	10226-Shock O-ring (upper) 6pcs 	10227-Tuned Pipe Seal & Fuel Tank Seal 1set 
10228-Pin ϕ 2*10 6pcs 	10229-Pin ϕ 2*11 6pcs 	10230-Hinge Pins (long & short) 2sets 	10231-One Way Bearing 3pcs 
10232-Ball Bearing 15*10*4 6pcs 	10233-Ball Bearing 10*5*4 6pcs 	10234-Metal Bushing 10*5*4 6pcs 	10235-Ball Bearing 8*5*2.5 6pcs 
11068-C clip-7.3mm 4pc 	RH5190-E clip-4mm 6pc 	10237-E clip-2.5mm 6pc 	RH5102-Nylon Lock Nut M3 6pc 

   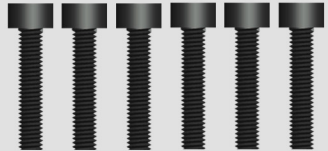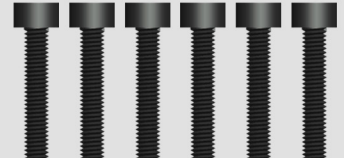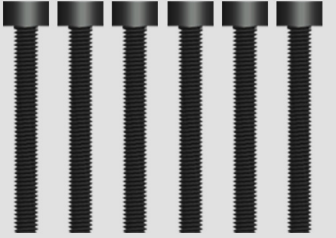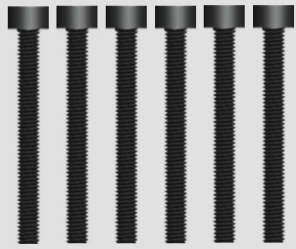Part List

RH5103-Nylon Lock Nut-M4 6pc 	85148-Round Head Self Tapping Hex Screw 2*6 4pcs 	10238-Round Head Self Tapping Hex Screw 2*10 6pc 	85179-Round Head Self Tapping Hex Screw 3*15 8pc 
10239-Round Head Self Tapping Hex Screw M3*6 6pc 	10240-Button Head Hex Screw M3*8 6pc 	10241-Button Head Hex Screw M3*10 6pc 	85184-Button Head Hex Screw M3*12 6pc 
10242-Button Head Hex Screw M3*14 6pc 	85144-Ring Self Tapping Screw 3*4 4pc 10256-Ring Self Tapping Screw 3*6 6pc 	RH5116-Set Screw M3*3 6pc 	RH5117-Set Screw M4*4 6pc 
RH5118-Button Head Hex Screw M4*10 6pc 	RH5562-Cap Head Hex Screw M3*8 6pc 	10243-Cap Head Hex Screw M3*10 6pc 	85182-Cap Head Hex Screw M3*10 6pc 
10244-Cap Head Hex Screw M3*14 6pc 	85119-Cap Head Hex Screw M3*16 6pc 	10245-Cap Head Hex Screw M3*18 6pc 	85185-Cap Head Hex Screw M3*25 6pc 
10246-Cap Head Hex Screw M3*28 6p 	10247-Flat Head Hex M3*8 6pc 	85125-Flat Head Hex Screw M3*10 8p 	85175-Flat Head Hex Screw 3*10 8p 

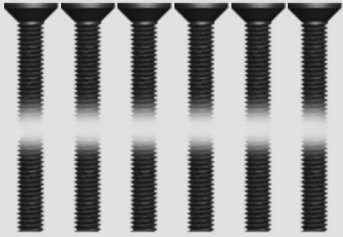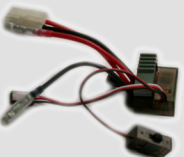Part List

10248-Flat Head Hex Screw M3*12 6p 	10249-Flat Head Hex Screw M3*14 6p 	85127-Flat Head Hex Screw M3*18 3p 	10250-Flat Head Hex Screw M3*20 6p 
10251-Flat Head Hex Screw M3*36 6p 	85173-Flat Head Hex Screw M4*10 6p 	H0068 - 2.4GHz Transmitter 1pc 	
H0026 - Brushless ESC 1pc 	H0027-300A ESC 1pc 	H0028 - 3650 Brushless Motor 1pc 	H0029 - 550 Brushed Motor 1pc 
H0030 - Ni-MH 7.2V 1800mAh 1pc H0031 - Ni-MH 7.2V 3000mAh 1pc 	H0012 - Battery Case 1pc 	H0011 - 3kg/cm Servo 1pc 	85274-Li-Po 2700mAh 7.4V 1pc 
10253 - 1/10 Charger CE 1pc 10254 - 1/10 Charger UL 1pc 10255 - 1/10 Charger BS 1pc 	RH5189 - Receiver Switch 1pc 	85284-Battery case 1pc 	85285-RX case 1set 
R0078-Clear SC truck body 1pc 	R0079-Printed SC truck body 1pc 	10608 Rear bumper Fix plate(alloy) w/ screws 2pcs 	10609 Flat hex screw M3*40 6pcs 

Upgrade Parts List

10902 - Front Shock Plate (Carbon) 1Set  RH1008/RH1009/RH1018/RH1019	10903 - Rear Shock Plate (Carbon) 1Set  RH1008/RH1009/RH1018/RH1019	10906-Body Post (AL) 2pc  RH1018/RH1019	10907-Front Shocks (AL) 2pc  RH1008/RH1009/RH1018/RH1019
10908-Rear Shocks (AL) 2pc  RH1008/RH1009/RH1018/RH1019	10909 - Front Lower Susp. Arm (AL) 2pc  RH1008/RH1009/RH1018/RH1019	10910 -Rear Lower Susp. Arm (AL) 2pc  RH1008/RH1009/RH1018/RH1019	10911 - Steering Ackerman (AL) 1pc  RH1008/RH1009/RH1018/RH1019
10912 - Front Susp. Holders (AL) 1Set  RH1008/RH1009/RH1018/RH1019	10913 - Front & Rear Brace (AL) (AL) 1Set  RH1008/RH1009	10914 - Rear Susp. Holders (AL) 1Set  RH1008/RH1009/RH1018/RH1019	10915 - Rear Hub Carrier (AL) 2pc  RH1008/RH1009/RH1018/RH1019
10916-Front Top Plate (Carbon) 1pc  RH1008/RH1009	10917 - Steering Knuckle Arm (AL) 2Set  RH1008/RH1009/RH1018/RH1019	10918 - Wheel Hub (AL) 4pc  RH1008/RH1009/RH1018/RH1019	10919 - Upper Plate (AL) 1pc  RH1008/RH1009
10920 - Tuned Pipe (AL) 1Set  RH1008/RH1009	10921 - Chassis Brace mount (AL) 1pc  RH1008/RH1009	85265 - Heatsink 1pc  RH1018/RH1019	10923 - Alum Steering Arm 2pc  RH1008/RH1009/RH1018/RH1019
10924 - Alum Knuckle Arm 2pc  RH1008/RH1009/RH1018/RH1019	10969 Alloy front suspension holders 1set(Optional) 	10971 Alloy rear suspension holders 1set(Optional) 	10610 Rear bumper fix plate & suspension arm pins set 