

ROCKBEN 岩本®



ROCKBEN 岩本®

## Workstation




### Installation Manual

Shanghai Rockben Industrial Equipment Manufacturing Co., Ltd.

Shanghai Rockben Industrial Equipment Manufacturing Co., Ltd.




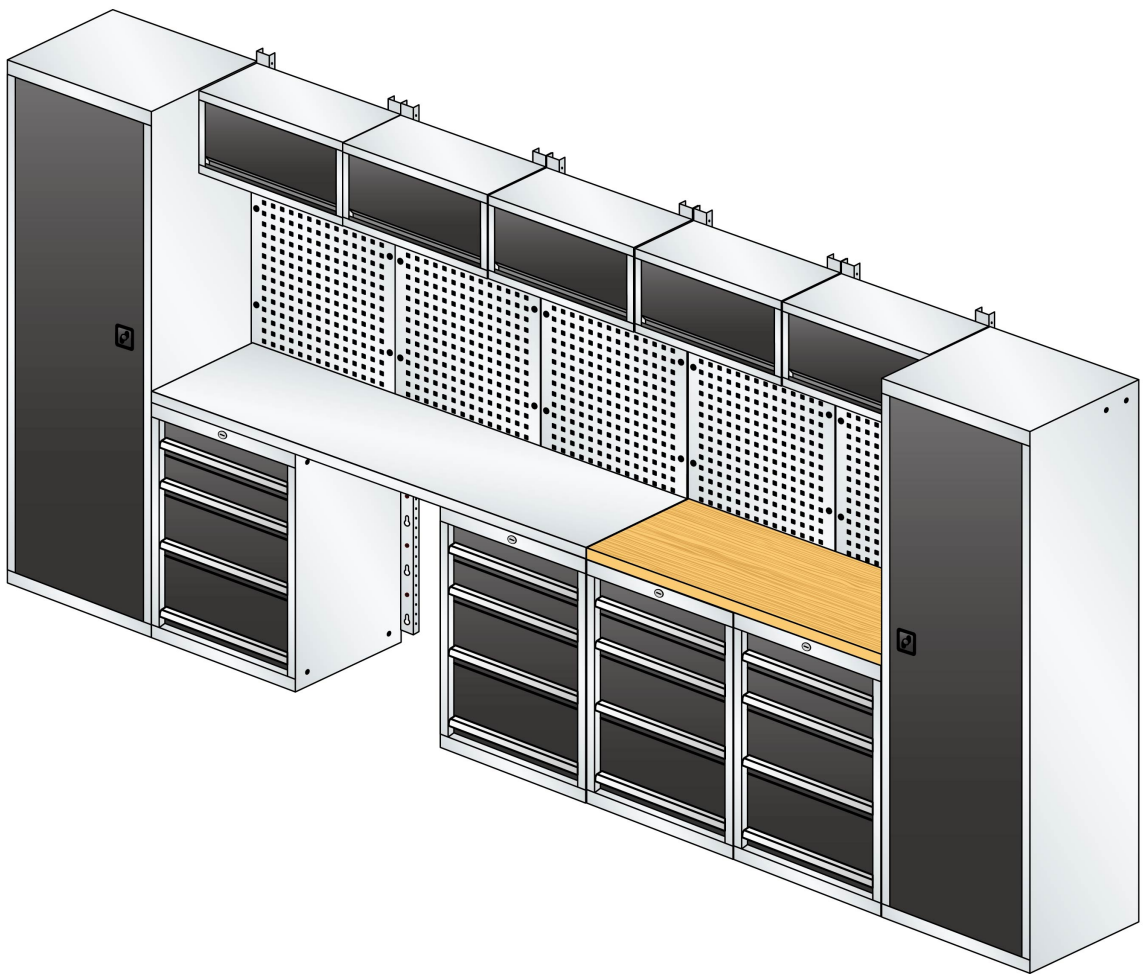


**! Safety Notice:**

- 1、 Please read this installation manual carefully before assembling.
- 2、 Our company reserves the right to modify the product specifications and structures without prior notice.  
For any updates, please refer to the latest official documentation or consult our customer service.


**01 STEP** Base Cabinet

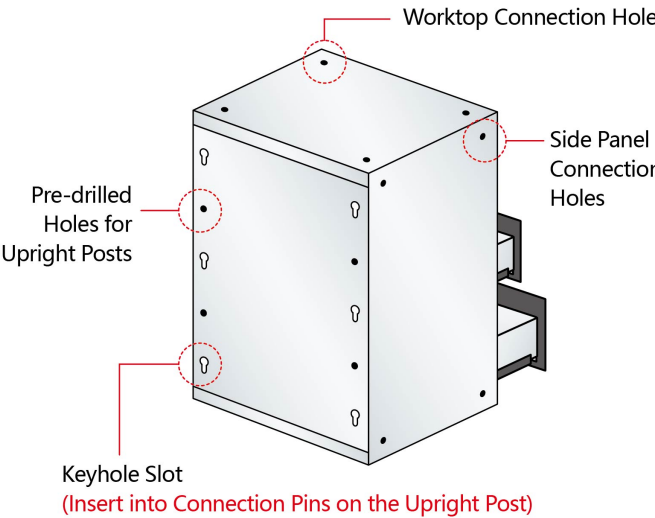


**03 STEP** Pegboard

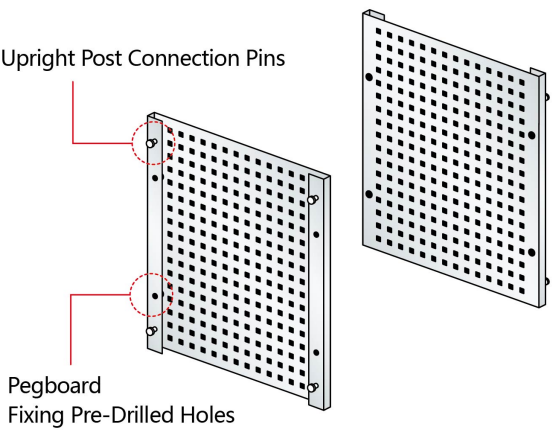


**02 STEP** Upright Posts

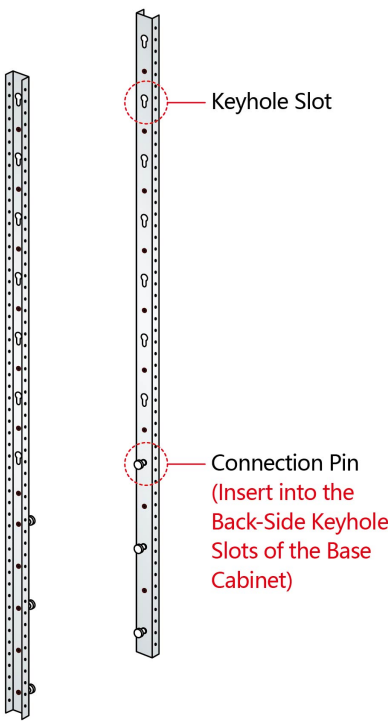

**04 STEP** Hanging Cabinet

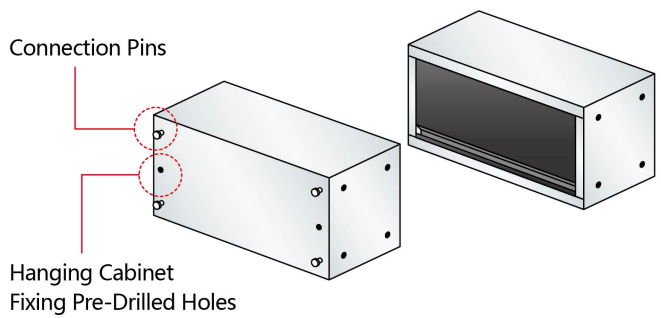

**05 STEP** Worktop

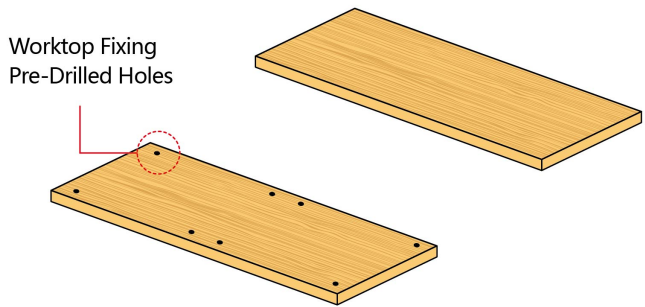

**!** Connection holes and connection pins come as standard factory configuration.

01  
STEP

Hanging Cabinet Preparation





Pre-drilled  
Holes for  
Upright Posts

Keyhole Slot


(Insert into Connection Pins on the Upright Post)

02  
STEP

Hanging Cabinet Installation

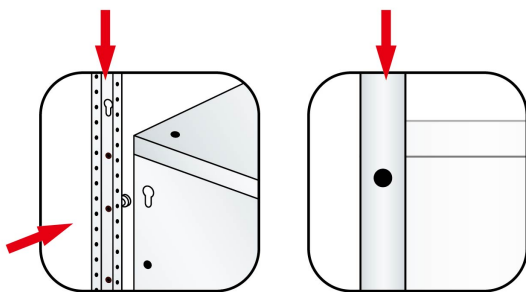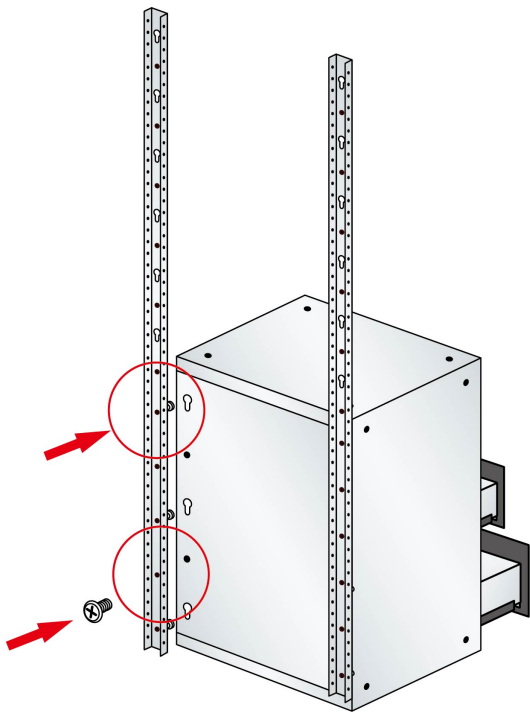

1. Insert the hanging cabinet connection pins into the keyhole slots on the upright posts and press downward to lock them in place.

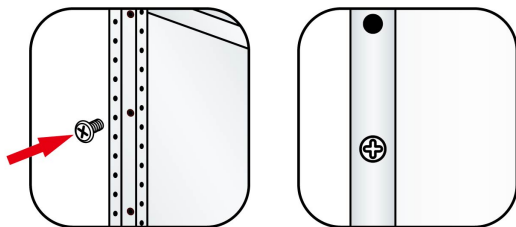


2. Open the cabinet door first, then use screws to secure the hanging cabinet to the upright posts.

01  
STEP

Pegboard preparation



Upright Post Connection Pins

Pegboard  
Fixing Pre-Drilled Holes

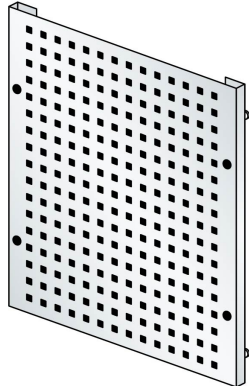


02  
STEP

Pegboard Installation

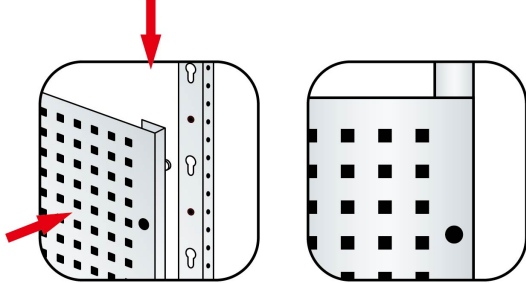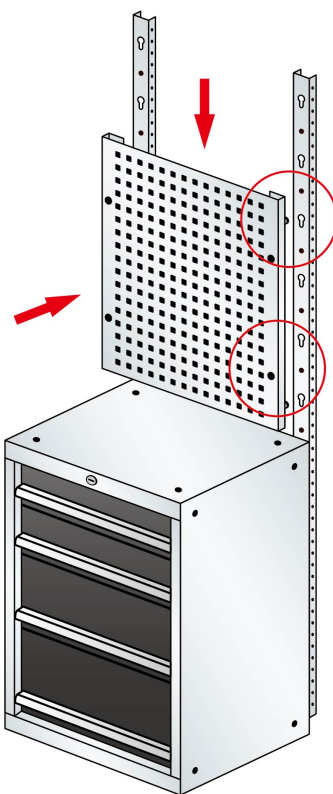


1. Insert the pegboard connection pins into the keyhole slots on the upright posts and press downward to lock them in place.

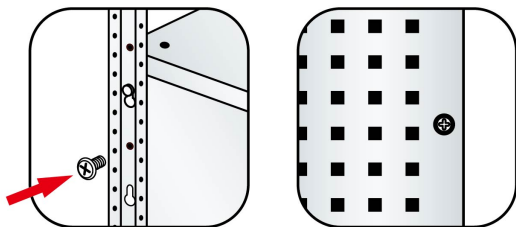



2. Use screws to secure the pegboard to the upright posts.




## 01 STEP Hanging Cabinet Preparation

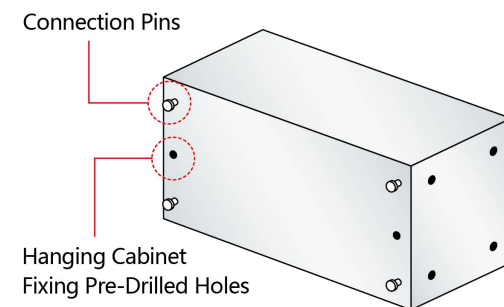

## 02 STEP Hanging Cabinet Installation

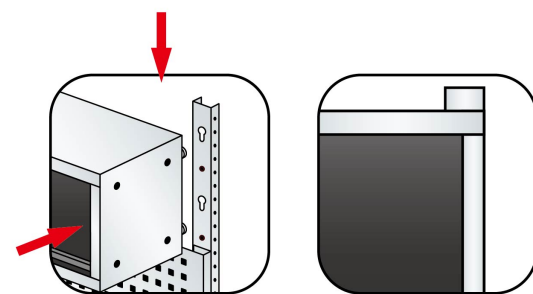
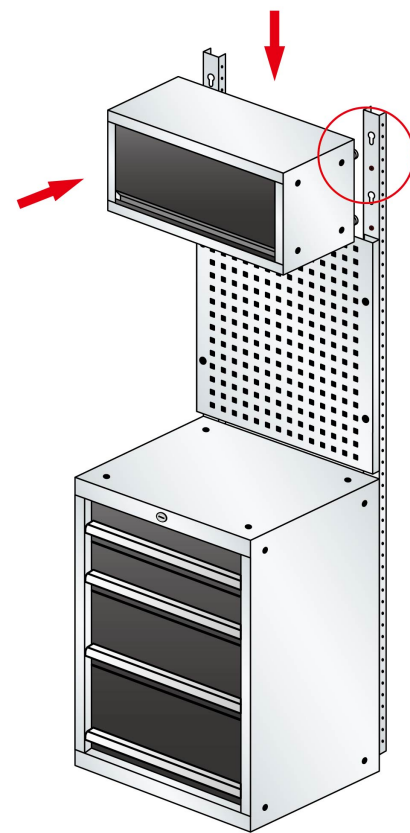


1. Insert the hanging cabinet connection pins into the keyhole slots on the upright posts and press downward to lock them in place.

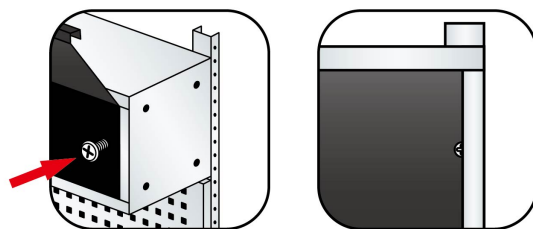


2. Open the cabinet door first, then use screws to secure the hanging cabinet to the upright posts.


## 01 STEP Cabinet Connection Upright Post Connection Hanging Cabinet Connection

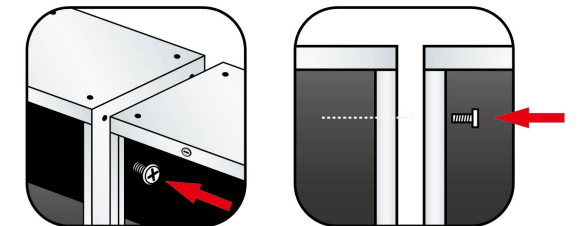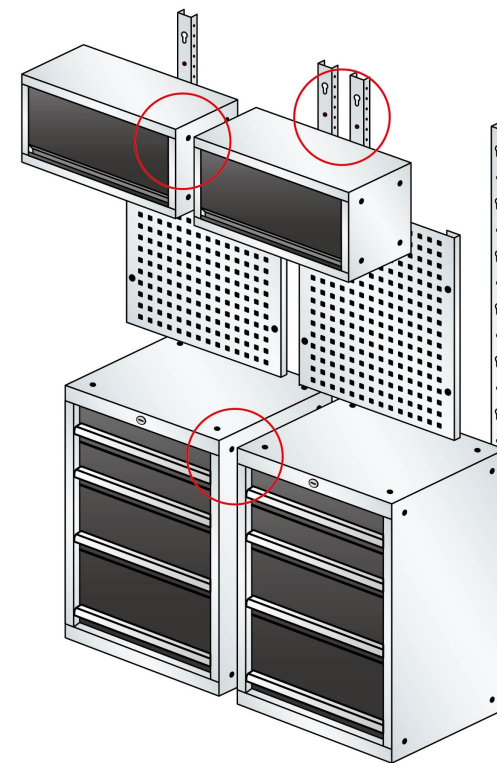

1. Remove 1~2 drawers, then use screws to connect the adjacent cabinets from the inside.

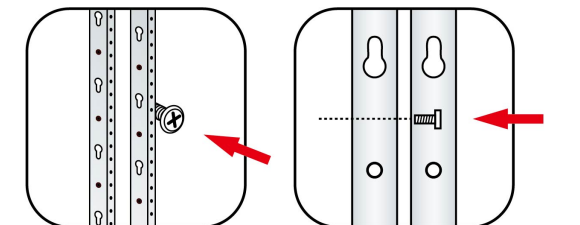


2. Use screws to connect the upright posts from the side.

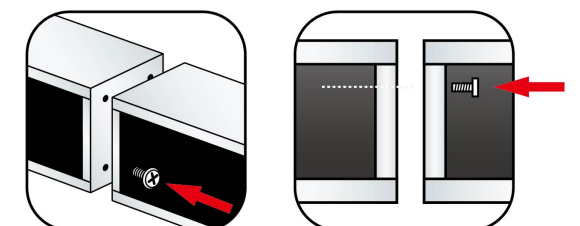

3. Open the hanging cabinet door and use screws to connect the hanging cabinets from the inside.

## 02 STEP Hanging Cabinet to Storage Cabinet Connection

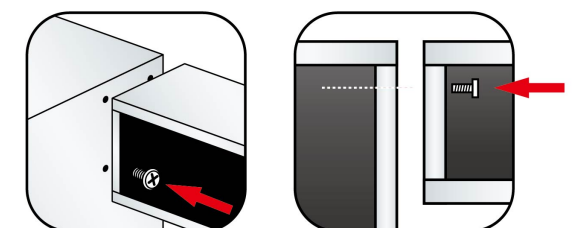


1. Open the hanging cabinet door and the storage cabinet door, then use screws to secure the hanging cabinet to the storage cabinet from the inside.

**!** For multiple cabinet connections, follow the above steps sequentially for installation




## 01 STEP Worktop Preparation



Worktop Fixing  
Pre-Drilled Holes

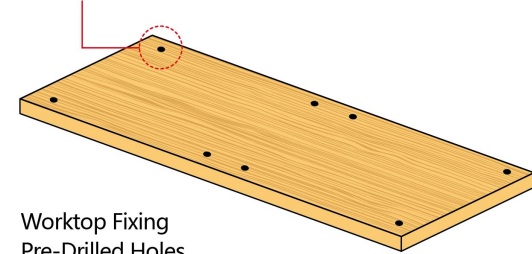

Worktop Fixing  
Pre-Drilled Holes

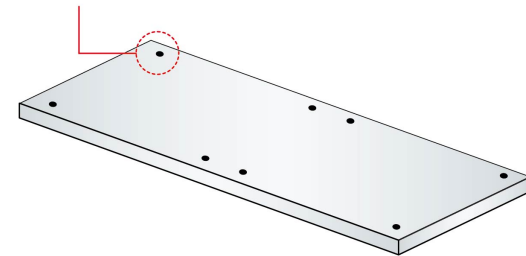


## 02 STEP Worktop Installation

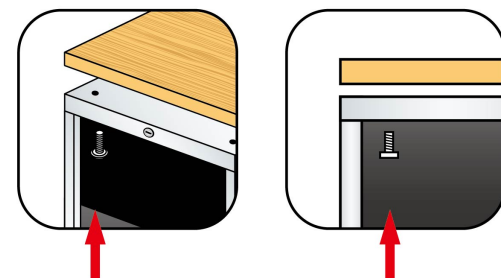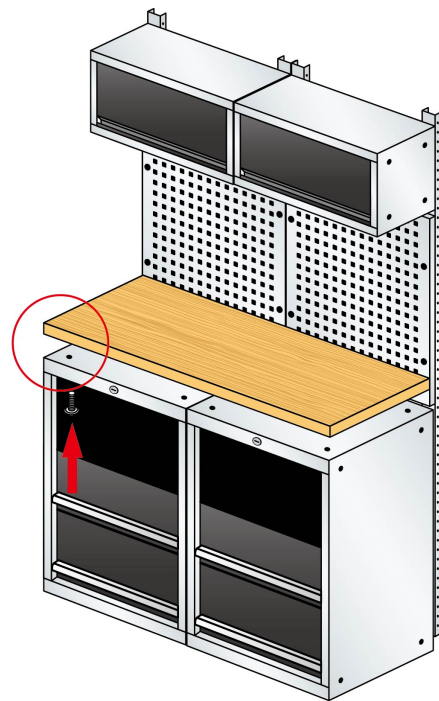


1. Remove 1-2 drawers, then use screws to secure the worktop to the cabinet from the inside.

## 01 STEP Installing the Middle Upright Posts

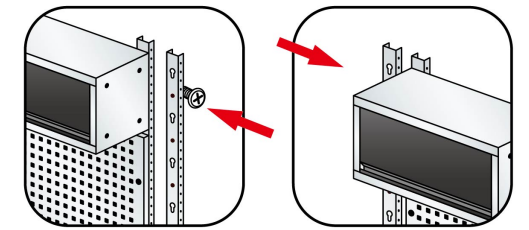


1. Secure both middle upright posts separately to the corresponding upright posts (ensure proper alignment for upper and lower connections).

## 02 STEP Installing the Middle Pegboard

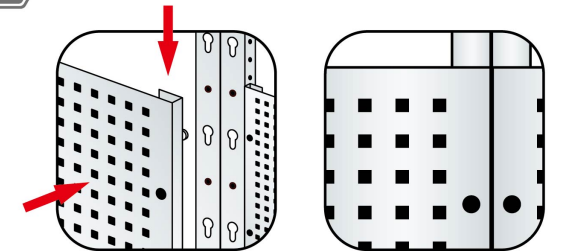


2. Insert the pegboard connection pins into the keyhole slots on the upright posts and press downward to lock them in place.

## 03 STEP Installing the Middle Hanging Cabinet


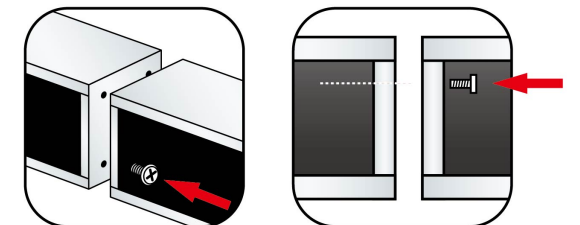



3. Open the hanging cabinet door, then use screws from the inside to connect the left and right adjacent hanging cabinets.

## 04 STEP Installing the Worktop

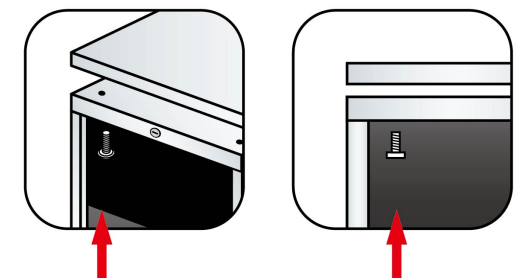

4. Remove 1-2 drawers, then use screws from the inside to secure the worktop to the cabinet.

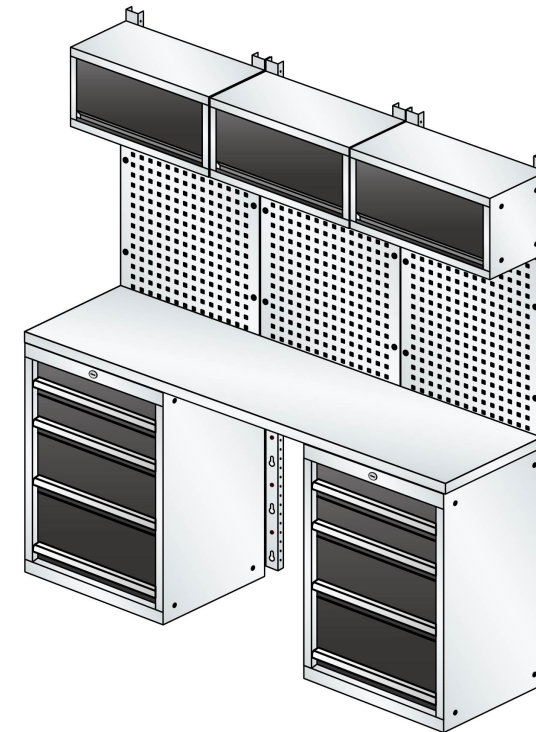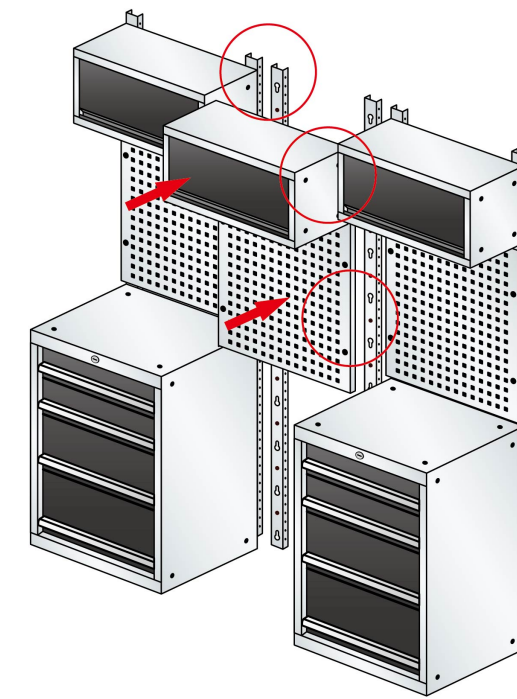

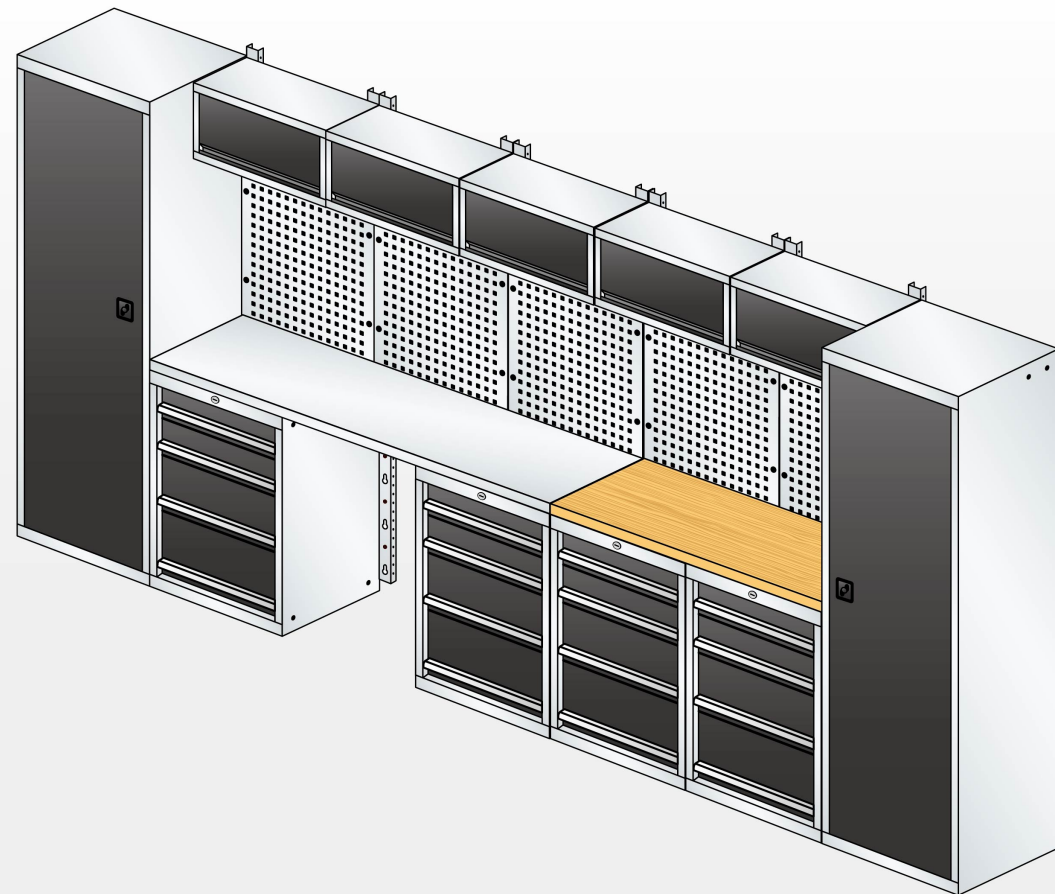


## 01 STEP Pre-Installation Planning

1. Mark the floor in the installation area to predefine the placement of each cabinet.

## 02 STEP Installing Base Cabinets Upright Posts


1. Following the previous steps, gradually install the tool cabinets and align adjacent cabinets.
2. Install the upright posts step by step, securing them with screws as needed.

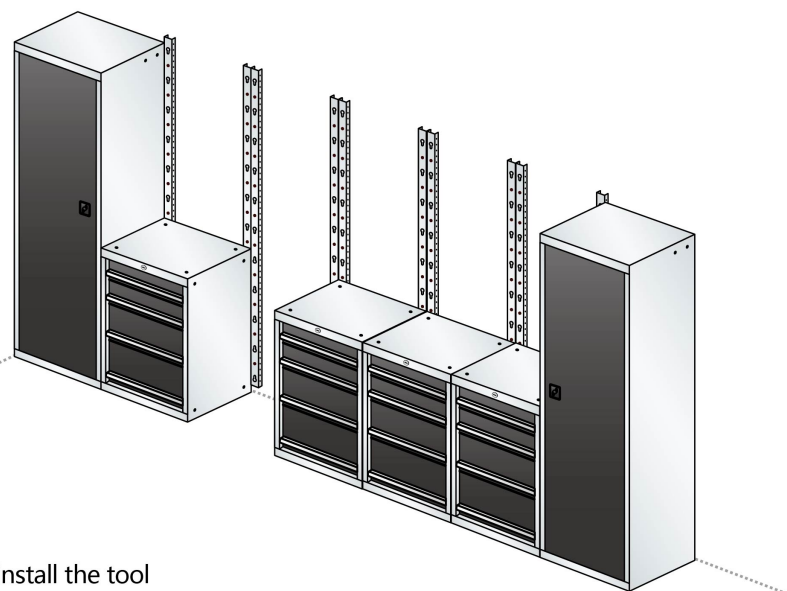

## 03 STEP

### Worktop Installation


1. Following the previous steps, gradually install the worktops.
2. Adjust the tool cabinets as needed to ensure the work surface is level.

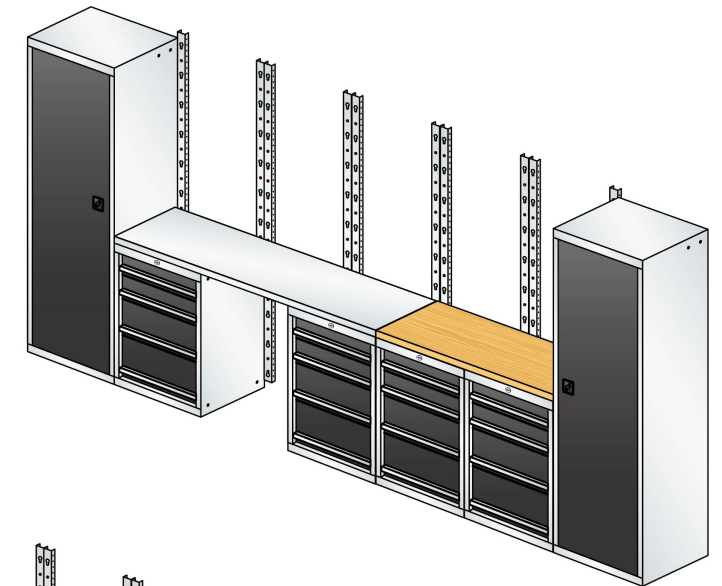

## 04 STEP

### Pegboard Installation

1. Following the previous steps, gradually install the pegboards.

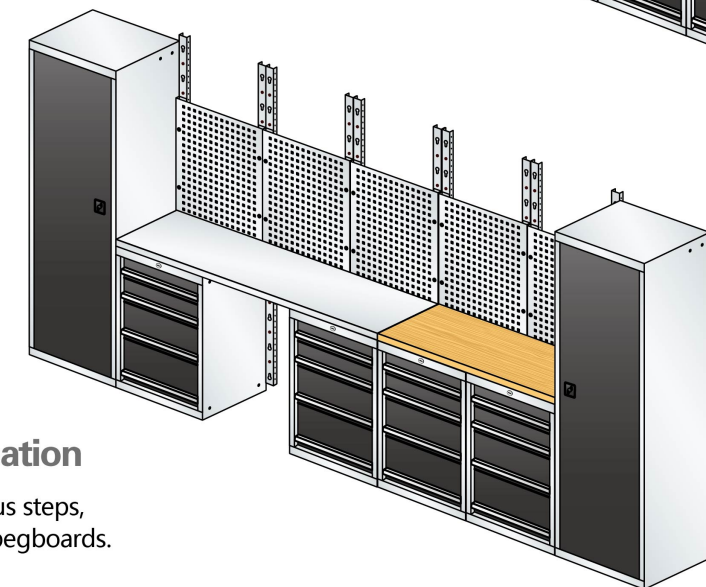

## 05 STEP

### Hanging Cabinet Installation

1. Following the previous steps, gradually install the hanging cabinets and secure them with screws.

