


ViPlex Express

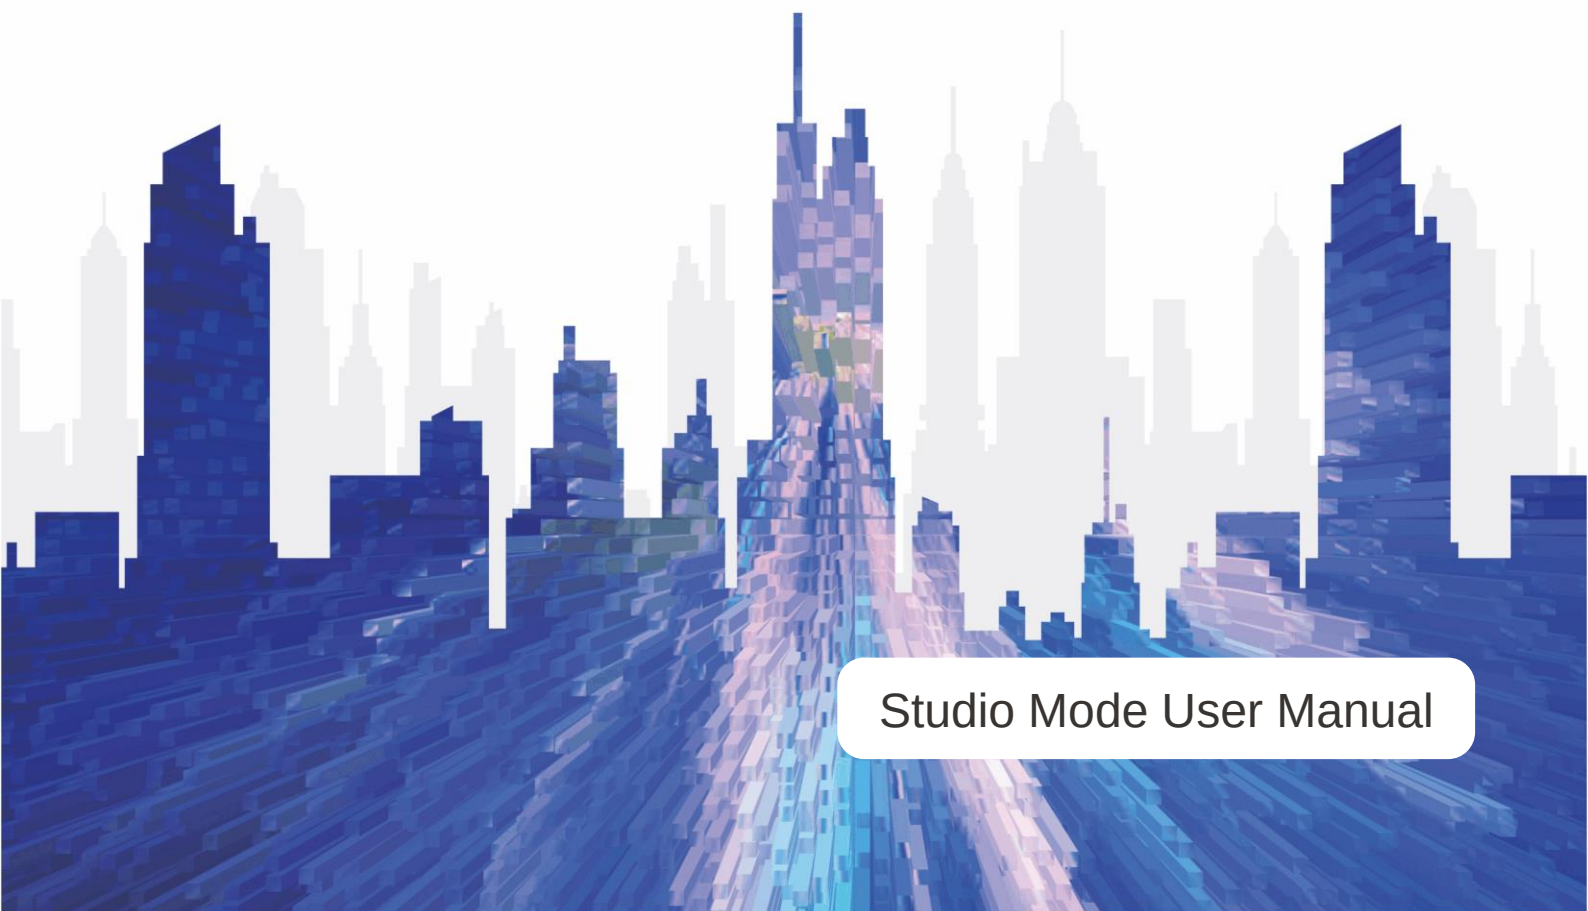

Studio Mode User Manual

Contents

Contents	i
1 Software Introduction	1
2 Getting Started.....	2
2.1 Preparing a PC.....	2
2.2 Installing Software	2
2.3 Checking PC Configuration Options	2
2.3.1 Windows Automatic Update	2
2.3.2 Firewall	3
2.3.3 Screen off and Sleep	3
2.3.4 Scaling Size and Multiple Displays	4
2.3.5 UAC	4
2.3.6 Antimalware Service Executable.....	5
2.3.7 Superfetch	5
2.4 Connecting to Displays.....	6
2.5 Selecting Working Mode.....	6
2.6 Creating Solutions	7
2.7 Playing Solutions	8
3 Solution Management.....	8
3.1 Creating Solutions	8
3.1.1 Creating a Regular-Screen Solution	9
3.1.2 Creating an Ultra-Long-Screen Solution	12
3.2 Playing Solutions.....	13
3.3 Screen Monitoring	13
4 Playback Management	14
4.1 Setting Playback Window	14
4.2 Showing and Hiding Playback Window	14
5 Play Logs	15
5.1 Searching for Play Logs	15
5.2 Exporting Play Logs.....	15
6 System Settings.....	16
6.1 Switching Language	16
6.2 Switching Working Mode	16
6.3 Setting Preferences.....	16
6.3.1 Starting Playback.....	16
6.3.2 Setting Shortcut of Showing and Hiding Playback Window	16
6.4 Viewing User Manual.....	16
6.5 Checking for Updates	16
6.6 Feedback.....	16
6.7 Viewing Software Information	17
7 FAQs.....	18
7.1 How to set the inbound firewall rules?	18
7.2 What video formats are supported in studio mode?	19
7.3 Limitations on Playback Parameters for Ultra-long Screens.....	20
7.4 Limitations on Cut-to-Display Windows for Regular Screens	20

1 Software Introduction

ViPlex Express is a display content publishing management system for PC, which is installed in the Windows operating system and allows you to edit solutions and play the solutions on LCD or LED displays. In async mode, ViPlex Express is also used to control multimedia players. This document introduces you to the functions and operations in studio mode.

ViPlex Express is part of the cloud solution. On the startup page of studio mode, clicking **Cloud Platform** on the left menu allows you to view the related information.

Two Working Modes

ViPlex Express has two working modes and you can switch to your desired mode based on the application scenario.

+ Studio Mode

When a solution is being played in ViPlex Express, the solution is also played synchronously on the display. This mode is applicable to synchronous playback.

The playback window is on the extended display. You can use the screen monitoring function to view the playback on your primary monitor.

+ Async Mode

ViPlex Express sends solutions to multimedia players. The solutions will be stored in the multimedia players and played according to their playback plans. This mode is applicable to the scenario when multimedia players load displays.

Professional Solution Editing

ViPlex Express is designed with a professional solution editing function allowing you to edit solutions with various contents and complex schedules as required.

+ Multiple pages

A solution can be added with multiple pages that are played in order from top to bottom.

+ Flexible layout

You can use a system template or customize a template when adding a page. In a template, you can set the number, coordinates, width, and height of windows based on your needs.

+ A variety of media

On a page, you can add general windows, cut-to-display window, Office documents, images, videos, GIF, text, colorful text, digital clocks, analog clocks, timers, weather, RSS, streaming media, web pages, and cut-to-display window.

+ Multiple properties

Every type of media has multiple properties that can satisfy your needs and present a variety of solutions.

+ Scheduling as you wish

You can set a period and cycle for each page to play. The schedules of a page can be batch applied to other pages. If the periods of several pages overlap, the pages will be played in order from top to bottom.

+ Quick preview

Clicking the preview button allows you to preview the current page. The preview window refreshes immediately when you move on to another page.

All-round Control

In async mode, ViPlex Express enables you to fully control multimedia players, such as brightness adjustment, time synchronization, font management, terminal upgrade, video source switching, screen status control, play log query, network configuration, RF management, and standalone playback.

2 Getting Started

2.1 Preparing a PC

Minimum requirements:

- OS: Windows 7 SP1 64-bit
- CPU: i5
- RAM: 4 GB
- HDD: 60 GB

2.2 Installing Software

Prerequisites

- Framework 4.6.x is installed.
- The official version of Visual C++ 2017 runtime components are installed.
- The installation package of ViPlex Express is obtained.

Where to Obtain

<http://www.en.vnnox.com/download>

Installing Software

Double click the installer to install ViPlex Express by following the wizard.

2.3 Checking PC Configuration Options

To ensure stable playback, please check the Windows configuration options shown in [Table 2-1](#). If a configuration option does not conform to the target status, please change it. This chapter takes Windows 10 as an example.

Table 2-1 Configuration options


Configuration Options	Target Status
Windows automatic update	Off
Firewall	• Off • Allow program connection Conforms to any of the above statuses.
Turn off screen	Never
Sleep	Never
Scaling size	100%
Multiple displays	Duplicate these displays
UAC	Never notify
Antimalware Service Executable	Disabled
Superfetch	Manual

2.3.1 Windows Automatic Update

- Step 1 Click  on the Windows Start menu.
- Step 2 Choose **Update & Security**.
- Step 3 On the Windows Update page, click **Advanced** options.

Step 4 Check whether Windows automatic update is turned off.


Figure 2-1 Windows automatic update

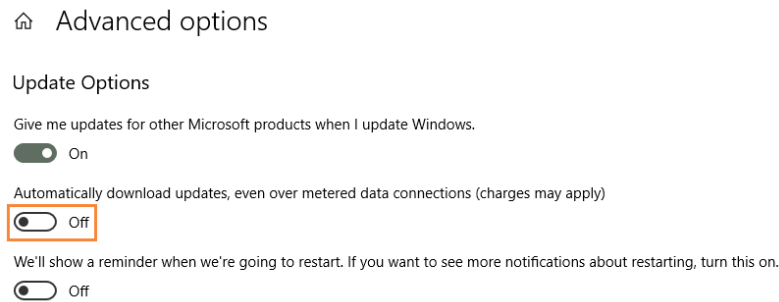

2.3.2 Firewall

- Step 1 Click  on the Windows Start menu.
- Step 2 Choose **Update & Security**.
- Step 3 Select Windows Security.
- Step 4 Click **Open Windows Defender Security Center**.
- Step 5 Check whether the firewall is turned off. If the firewall needs to be turned on, check whether the connection is allowed. For the method to allow program connection, see [7.1 How to set the inbound firewall rules?](#)

Figure 2-2 Firewall

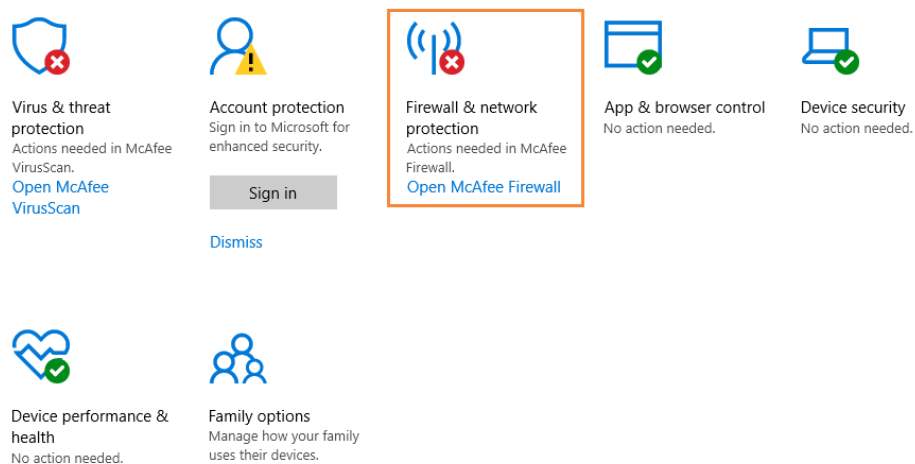

2.3.3 Screen off and Sleep

- Step 1 Click  on the Windows Start menu.
- Step 2 Choose **System**.
- Step 3 Choose **Power & sleep**.
- Step 4 Check whether all the four configuration options are set to **Never**.

Figure 2-3 Screen off and sleep

Power & sleep

Screen

On battery power, turn off after

When plugged in, turn off after

Sleep

On battery power, PC goes to sleep after

When plugged in, PC goes to sleep after

2.3.4 Scaling Size and Multiple Displays

Step 1 Click  on the Windows Start menu.

Step 2 Choose **System**.

Step 3 Check whether the scaling size is 100% and the option of multiple displays is set to **Duplicate these displays**.

Note: When multiple monitors are connected, the configuration option for multiple displays will appear.

Figure 2-4 Scaling size and multiple displays

Scale and layout

Change the size of text, apps, and other items

Advanced scaling settings

Resolution

Orientation

Multiple displays

Multiple displays


2.3.5 UAC

Step 1 Click  on the Windows Start menu.

Step 2 Type "User Accounts" in the search box and select **Change User Account Control Settings**.

Step 3 Check whether UAC is set to **Never notify**.


Figure 2-5 UAC

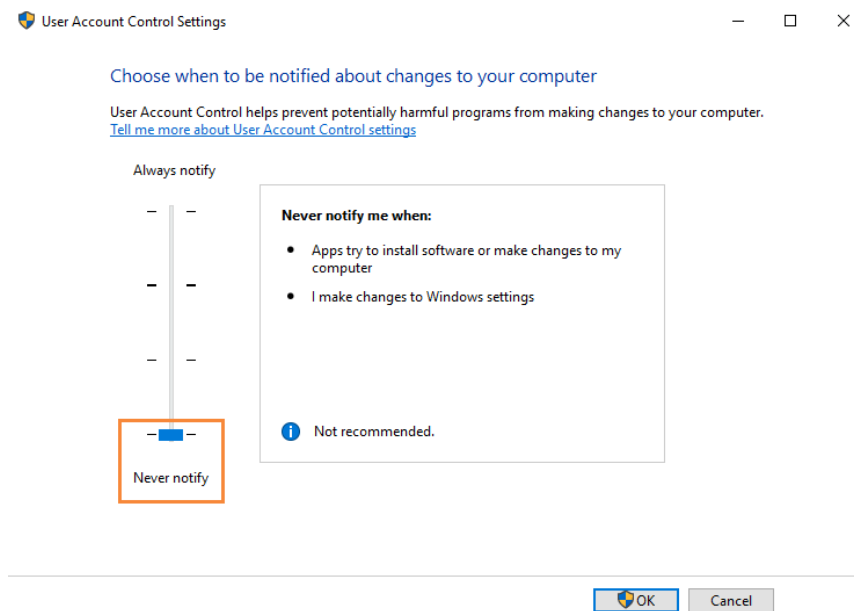

2.3.6 Antimalware Service Executable

- Step 1 Press **Win+R** buttons to open the **Run** window.
- Step 2 Type **gpedit.msc** command and press **Enter** to open the **Local Group Policy Editor** dialog box.
- Step 3 Expand **Computer Configuration > Administrative Templates > Windows Components > Windows Defender Antivirus**.
- Step 4 Click **Real-time Protection**.
- Step 5 Check whether the status of **Turn on process scanning whenever real-time protection is enabled** is **Disabled**.


Figure 2-6 Antimalware service executable

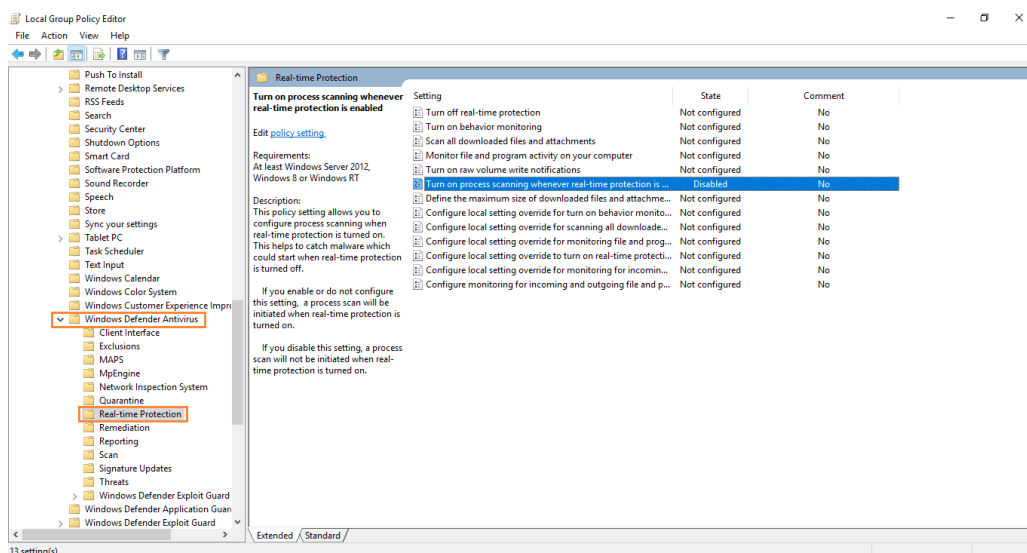

2.3.7 Superfetch


- Step 1 Press **Win+R** buttons to open the **Run** window
- Step 2 Type **services.msc** command and press **Enter** to open the **Services** dialog box.
- Step 3 Check whether the startup type of Superfetch is **Manual**.

Figure 2-7 Superfetch

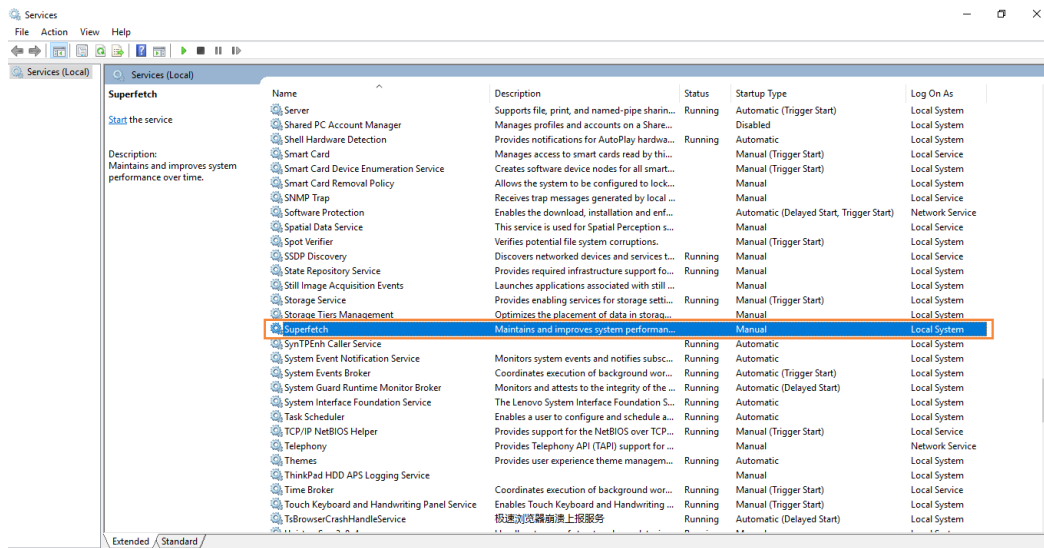

2.4 Connecting to Displays

Figure 2-8 Connecting to displays

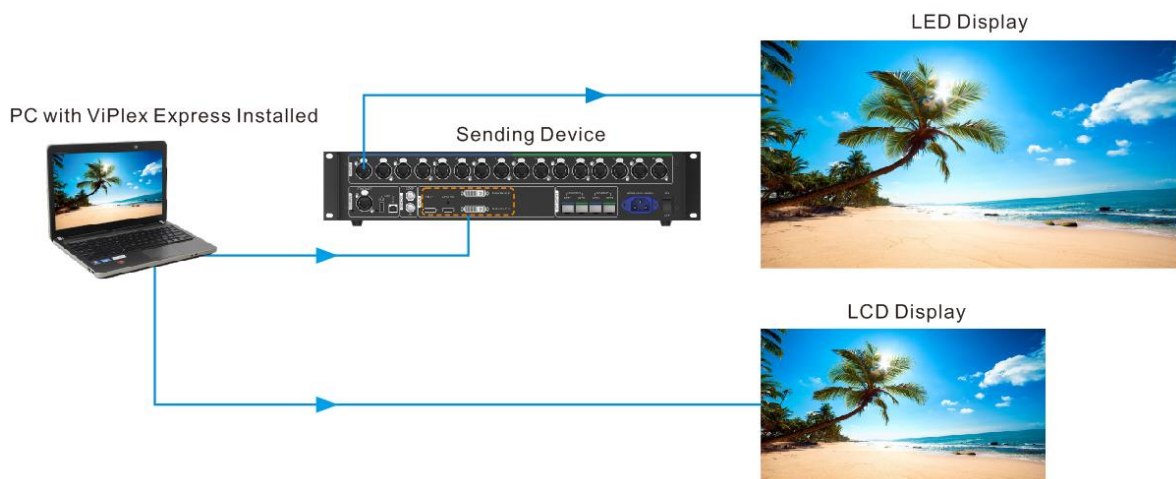

+ Connection 1

The PC with ViPlex Express installed is connected to a sending card and serves as a video source for the LED display. Figure 2-8 uses the MCTRL4K sending device as an example.

+ Connection 2


The PC with ViPlex Express installed is connected to an LCD and serves as a video source for the LCD.

2.5 Selecting Working Mode

First Installation

After ViPlex Express is first installed, a **Select Mode** dialog box appears when you open ViPlex Express. Select **Studio Mode** and click **Open**.

Figure 2-9 Selecting a working mode

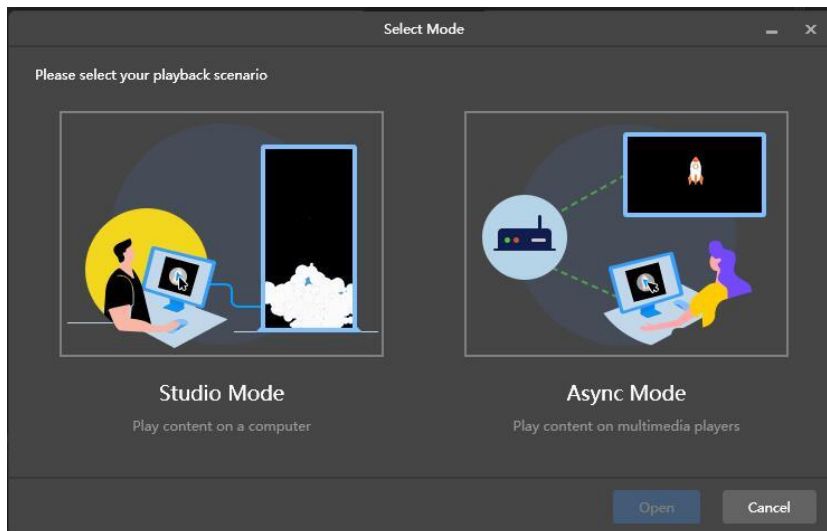

Other Situations

If you have installed ViPlex Express or selected a working mode before, the dialog box shown in [Figure 2-9](#) will not appear. If ViPlex Express is in async mode by default after opened, switch to studio mode by following the steps below:

In the top-right corner, choose  > **Working Mode** > **Studio Mode** and click **OK**. ViPlex Express will be in studio mode after restarted.

2.6 Creating Solutions

After updated, the solution data in async mode will be synchronized to studio mode.


Step 1 After you select studio mode, the startup page of studio mode is displayed.

Step 2 Click  and select Regular Screen or Ultra-Long Screen.

- Select **Regular Screen** to access the solution editing page.

On the solution editing page, choose **Playback Window** > **Playback Window Settings** from the menu bar and set the coordinates, width, and height of the playback window and select an option of keeping the window on top. If **Same as desktop** is selected, the size of the playback window will be the same as the size of your desktop.


Figure 2-10 Playback window settings

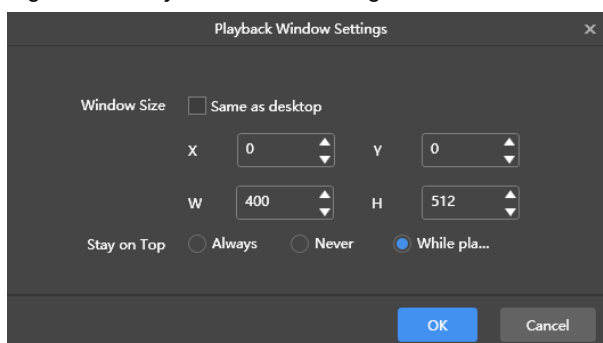

- Select **Ultra-Long Screen** to open the **Solution Information** dialog box, as shown in [Figure 2-1](#).

Step 3 Set the solution information and click **OK**.

Figure 2-1 Solution information

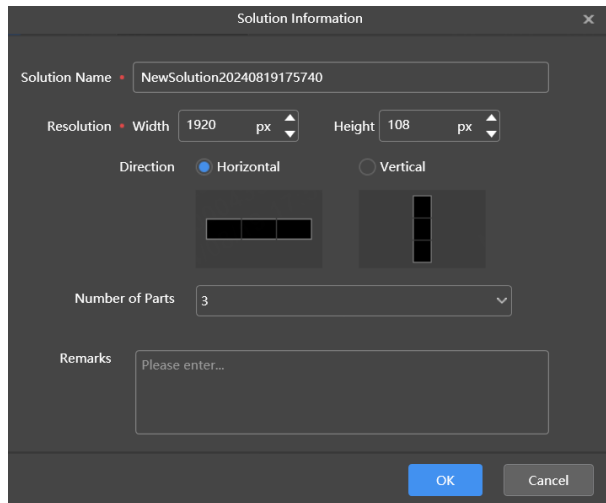

The 'Solution Information' dialog box contains the following fields and controls:

- Solution Name:** A text field with the value 'NewSolution20240819175740'.
- Resolution:** Two spinners for 'Width' (1920 px) and 'Height' (108 px).
- Direction:** Two radio buttons, 'Horizontal' (selected) and 'Vertical'.
- Number of Parts:** A dropdown menu showing '3'.
- Remarks:** A large text area with the placeholder 'Please enter...'.
- Buttons:** 'OK' and 'Cancel' buttons at the bottom right.

Step 4 After the solution editing is done, click **Save**.

Step 5 (Optional) At the upper right of the page, click  to preview the Beginner's Guide, and then click **Get Started**.

Step 6 (Optional) At the upper right of the page, click  to preview the current page.

When the preview window is opened, you can also select other pages to preview. If you make changes to the current page, click **Refresh** at the top right to refresh the preview window.


Step 7 (Optional) At the upper right of the page, click **View Schedule** to view the schedule of each page in the solution.

2.7 Playing Solutions

Step 1 On the solution editing page, click  at the upper right to play a solution.

Step 2 The solution editing page is not displayed and a playback control bar appears.

Figure 2-2 Playback control bar



- : Pause playback. After the playback is paused, this button changes to the **Play** button.
- : Stop playback and display the solution editing page.
- : Restart the playback from the beginning.
- : Expand the solution editing page.
- : Collapse the solution editing page.

3 Solution Management

3.1 Creating Solutions

Step 1 After you select studio mode, the startup page of studio mode is displayed.

- You can create solutions for regular screens (hereinafter referred to as "regular-screen solutions") and solutions for ultra-long screens (hereinafter referred to as "ultra-long-screen solutions").
- After updated, the solution data in async mode will be synchronized to studio mode.

3.1.1 Creating a Regular-Screen Solution

Related Information

- A regular-screen solution contains one or more pages and each page contains one or more media items.
- The pages of a solution are played in order from top to bottom.

Operating Procedure


Before you create a solution, get the screen resolution in advance.

Step 1 Click  and select **Regular Screen** from the drop-down menu.

- When you access the studio mode for the first time to create a regular-screen solution, you are prompted to set the playback window, as shown in [Figure 3-1](#).

The playback window and screen must be consistent in resolution.


Figure 3-1 Playback window settings

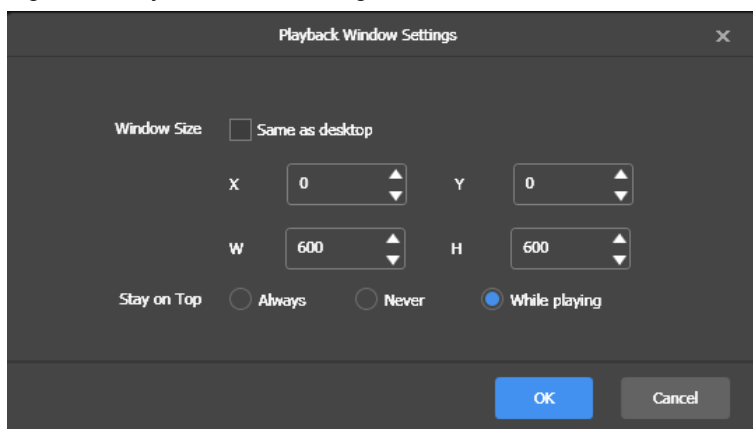

- In other situations, the solution editing page is displayed when you access the studio mode to create a regular-screen solution, as shown in [Figure 3-2](#).

You can resize and reposition the playback window and choose to show or hide the playback window. For details, see [4 Playback Management](#).

Figure 3-2 Solution editing page

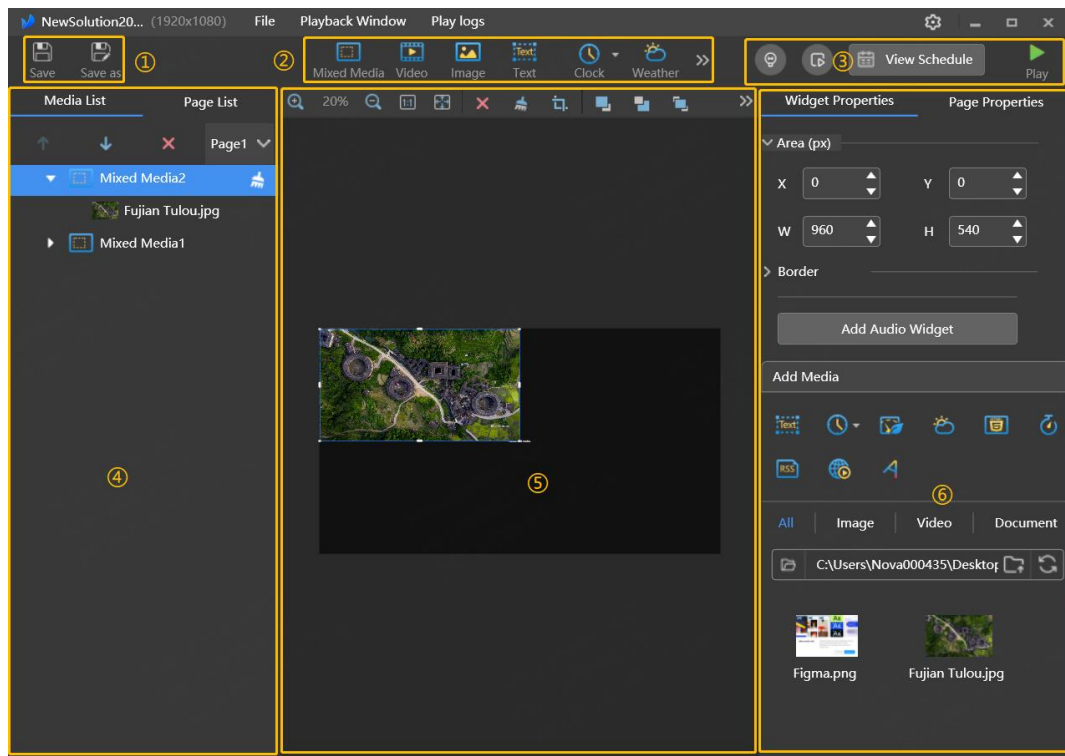

The description of the solution editing page is shown in [Table 3-1](#).

Table 3-1 Description of the solution editing page

No.	Function	Description	
1	Saving a solution and saving a solution as another solution	Used for saving a solution and saving a solution as another solution	
2	Adding media You can click an icon to add a corresponding type of media.	: Mixed media	: Video
		: Text	: Image
		: Colorful text	: Document
		: Clock	: Timer
		: Weather	: Web page
		: Table	: RSS
		: Streaming media	: Cut-to-display window
3	Viewing the Beginner's Guide, previewing pages, viewing schedules, and playing solutions	Used for viewing the Beginner's Guide, previewing pages, viewing schedules, and playing solutions.	
4	Editing media and pages. • Media list: Adjust media order and delete media. – Click the up/down buttons or drag media to change the layer order. – Media includes media	: Add	: Open the Page Template dialog box
		: Copy	: Delete
		: Move up	: Move down

No.	Function	Description	
	types such as images, videos, mixed media, and documents, which can be adjusted in playback order by clicking the up/down buttons or manually dragging the media. • Page list: Add, copy and delete pages, and adjust the page order. Pages play sequentially from top to bottom.		
5	Editing media on pages	 : Zoom editing area in	 : Zoom editing area out
		 : Show the editing area in the original size	 : Automatically fit the editing area according to the software interface
		 : Delete selected media	 : Clear all media
		 : Crop image	 : Bring forward
		 : Send backward	 : Bring to front
		 : Send to back	 : Fill the entire screen
		 : Fit the screen horizontally	 : Fit the screen vertically
		 : Align top	 : Center vertically
		 : Align bottom	 : Align left
		 : Center horizontally	 : Align right
6	Editing media on pages	Used for editing widget and page properties • Widget Properties: Widgets are the media added to a page. The properties of different types of media vary. Click a widget to select it before you edit its properties. • Page Properties: Set the name, play count, validity range and playback schedule of a page. – Play Count: Set the number of times to play a page continuously. – Validity Range: After this option is selected, the Start Date and End Date parameters are displayed. Expired pages will be skipped during solution playback. – Schedule: Allows you to specify the timeslots to play a page and select the days to repeat the playback. If the timeslots of different pages overlap, the pages will be played in order from top to bottom. – Apply Schedule: Allows you to apply the schedule of the current page to other pages. You can select multiple pages and apply a schedule to them at the same time.	

Notes

- When you add an Excel file, the number of rows of the Excel file must be less than or equal to 600 and the total width of the columns must be less than or equal to the width of an A4 landscape paper. It is recommended that you set the page layout of the Excel file to A4 landscape.

- Users can set the text color and merge the cells in the Excel file to be imported. Other properties of the cells in the Excel file currently cannot be displayed. Please scan the **Feedback** QR code in the navigation bar to give feedback if needed.
- A valid URL is required when you add RSS, streaming media, or web page media.
- When you add weather media, the screen must be connected to the Internet so that it can obtain real-time weather information.
- For the limitations on cut-to-display windows, see [7.4 Limitations on Cut-to-Display Windows for Regular Screens](#).

Step 2 After the solution editing is done, click **Save**.

Step 3 (Optional) At the upper right of the page, click  to preview the Beginner's Guide, and then click **Get Started**.

Step 4 (Optional) At the upper right of the page, click  to preview the current page.

When the preview window is opened, you can also select other pages to preview. If you make changes to the current page, click **Refresh** at the top right to refresh the preview window.


Step 5 (Optional) At the upper right of the page, click View **Schedule** to view the schedule of each page in the solution.

3.1.2 Creating an Ultra-Long-Screen Solution

Step 1 Click  and select **Ultra-Long Screen** from the drop-down menu.

The **Solution Information** dialog box appears.


Figure 3-3 Solution information of an ultra-wide screen

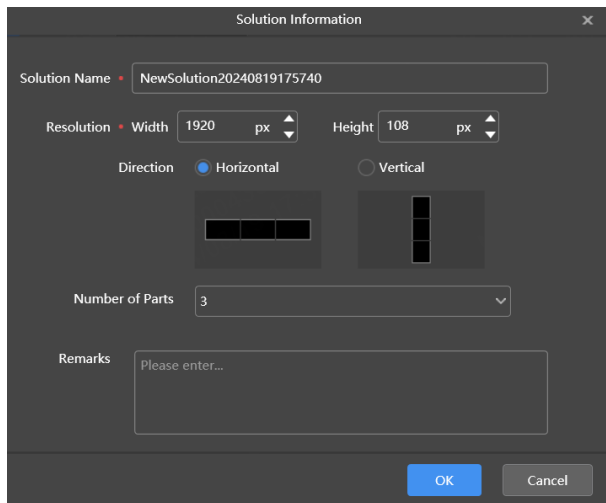

The dialog box titled "Solution Information" contains the following fields and options:

- Solution Name:** NewSolution20240819175740
- Resolution:** Width 1920 px, Height 108 px
- Direction:** ☒ Horizontal, ☐ Vertical
- Number of Parts:** 3
- Remarks:** Please enter...
- Buttons:** OK, Cancel

Figure 3-4 Solution information of an ultra-tall screen

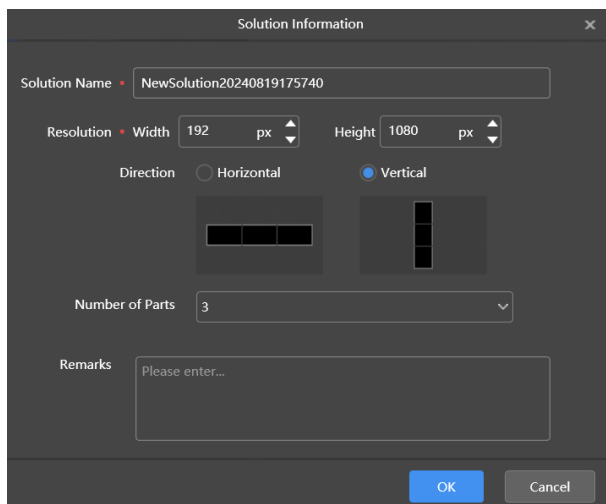

The dialog box titled "Solution Information" contains the following fields and options:

- Solution Name:** NewSolution20240819175740
- Resolution:** Width 192 px, Height 1080 px
- Direction:** ☐ Horizontal, ☒ Vertical
- Number of Parts:** 3
- Remarks:** Please enter...
- Buttons:** OK, Cancel

- Step 2 Set a name, resolution, direction and the number of parts for the solution, then click **OK**.
- The resolution of the solution must be consistent with the configured screen width and height.
 - Set the direction according to the actual situation, For an ultra-wide screen, select **Horizontal**, while for an ultra-tall screen, select **Vertical**.
 - The number of parts is calculated according to the actual screen width and height and the configured screen width and height.
- Step 3 Edit the solution on the solution editing page, as shown in [Figure 3-2](#).
- In the page media editing area, the page is displayed based on the actual screen resolution and boundaries appear according to the number of parts.
 - Only images, text and colorful text can be placed across the boundary.
- Step 4 After the solution editing is done, click **Save**.
- Step 5 (Optional) At the upper right of the page, click  to preview the Beginner's Guide, and then click **Get Started**.
- Step 6 (Optional) At the upper right of the page, click  to preview the current page.
- When the preview window is opened, you can also select other pages to preview. If you make changes to the current page, click **Refresh** at the top right to refresh the preview window.
- Step 7 (Optional) At the upper right of the page, click **View Schedule** to view the schedule of each page in the solution.


Note

- Ultra-long-screen solutions do not support synchronous playback.
- To ensure smooth playback, playing videos and text simultaneously is not recommended.

3.2 Playing Solutions

On the top right of the page, click  to play a solution. The solution editing page is not displayed and a playback control bar is displayed.

Figure 3-5 Playback control bar




- : Pause playback. After the playback is paused, this button changes to the **Play** button.
- : Stop playback and display the solution editing page.
- : Restart the playback from the beginning.
- : Expand the solution editing page.
- : Collapse the solution editing page.

3.3 Screen Monitoring

If you have an extended display connected and the solution is played on that display, click  on the playback control bar to monitor on the main display the image currently being played.

Figure 3-6 Screen monitoring




4 Playback Management

4.1 Setting Playback Window

On the menu bar of the solution editing page, choose **Playback Window > Playback Window Settings**. Set the coordinates, width, and height of the playback window and select an option of keeping the window on top. If **Same as desktop** is selected, the size of the playback window will be the same as the size of your desktop.

Figure 4-1 Playback window settings

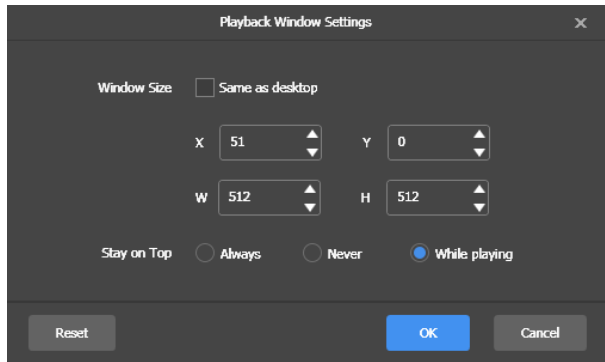

4.2 Showing and Hiding Playback Window

- When the playback window is shown, choose **Playback Window > Hide Playback Window** on the menu bar to hide the playback window.
- When the playback window is hidden, choose **Playback Window > Show Playback Window** on the menu bar to show the playback window.


The default shortcut of showing and hiding playback window is **Ctrl+H**. You can change it in  > **Preferences**.

5 Play Logs

5.1 Searching for Play Logs

Step 1 On the solution editing page, select **Play logs** on the menu bar.

Figure 5-1 Play logs

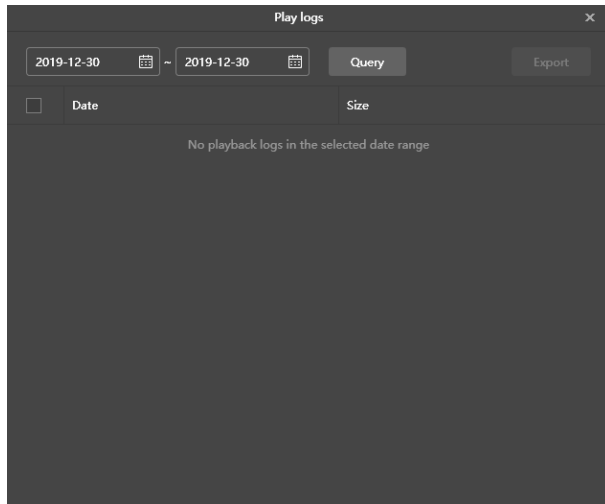

Step 2 Set the date range and click **Query**.

Querying play logs of the current day is not supported.

Step 3 In the displayed query result list, click the date to view the general information and details of the play logs.

Step 4 (Optional) Click **Back** to go back to the query result list.


5.2 Exporting Play Logs

Step 1 On the solution editing page, select **Play logs** on the menu bar.

Step 2 Set the date range and click **Query**.

Querying play logs of the current day is not supported.

Figure 5-2 Query result

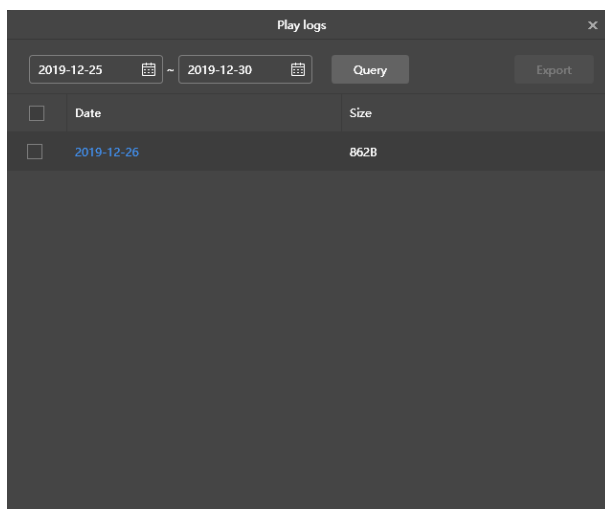

Step 3 Select the logs you want to export and click **Export**.

Step 4 In the displayed dialog box, set the export path and format.

Step 5 Click **OK**.

6 System Settings

To enter system settings, click  in the top-right corner of the startup page or solution editing page in studio mode.

6.1 Switching Language

Choose  > **Language** and select the target language from the submenu.


6.2 Switching Working Mode

Choose  > **Working Mode** > **Async Mode** to switch to the async mode.

6.3 Setting Preferences

Choose  > **Preferences** to open the **Preferences** dialog box.

Figure 6-1 Setting preferences

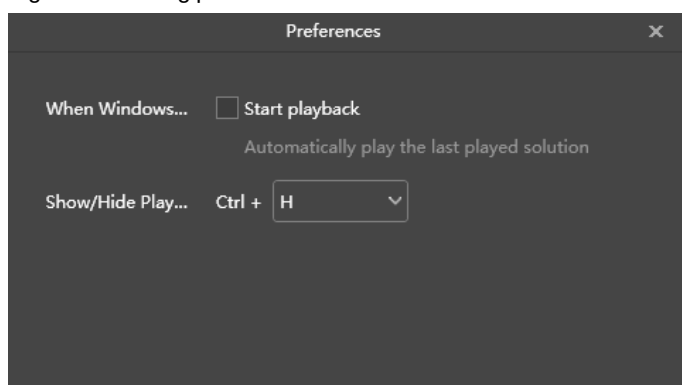

6.3.1 Starting Playback

Select **Start playback** and the software will automatically play the last played solution when Windows starts.

6.3.2 Setting Shortcut of Showing and Hiding Playback Window

Select a letter from the drop-down list. The selected letter and **Ctrl** constitute the shortcut of showing and hiding the playback window.

6.4 Viewing User Manual

Choose  > **User Manual** to view the user manual of this software.


You can also click **User Manual** on the left menu on the startup page in studio mode.

6.5 Checking for Updates

Choose  > **Check for Updates**. In the displayed dialog box, check whether a software update is available. If there is an update available, click **Download** to start the online update.

6.6 Feedback

Choose  > **Feedback**. In the displayed dialog box, scan the code with your WeChat to follow the official account of NovaStar Cloud Service or send your feedback to the email address provided.

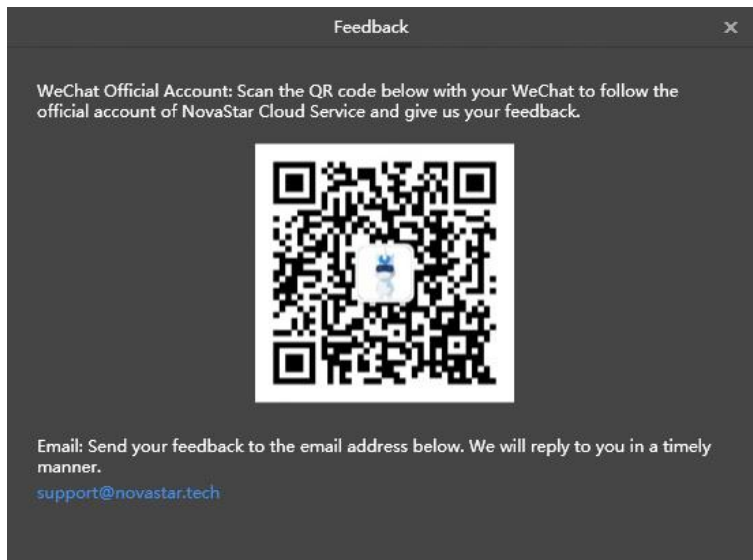

6.7 Viewing Software Information


Choose  > **About**. In the displayed dialog box, view the software related information.

7 FAQs

7.1 How to set the inbound firewall rules?


- Step 1 Click  on the Windows Start menu.
- Step 2 Choose **Update & Security**.
- Step 3 Choose **Windows Security**.
- Step 4 Click **Open Windows Defender Security Center**.
- Step 5 Click Firewall & network protection.
- Step 6 Click **Advanced Settings** and then click **Yes** to open the **Windows Defender Firewall with Advanced Security** dialog box.

Figure 7-1 Advanced settings

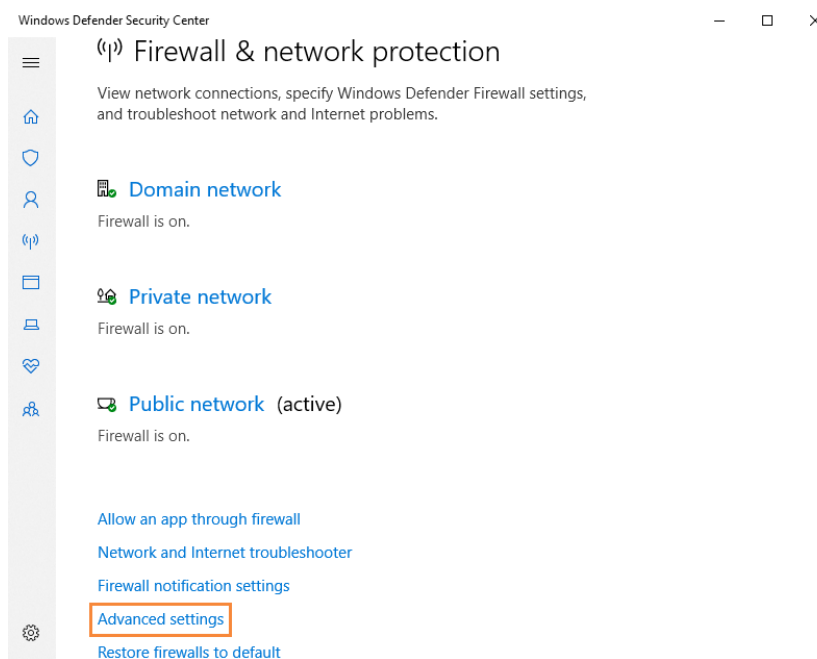

- Step 7 Click Inbound Rules.


Figure 7-2 Inbound rules

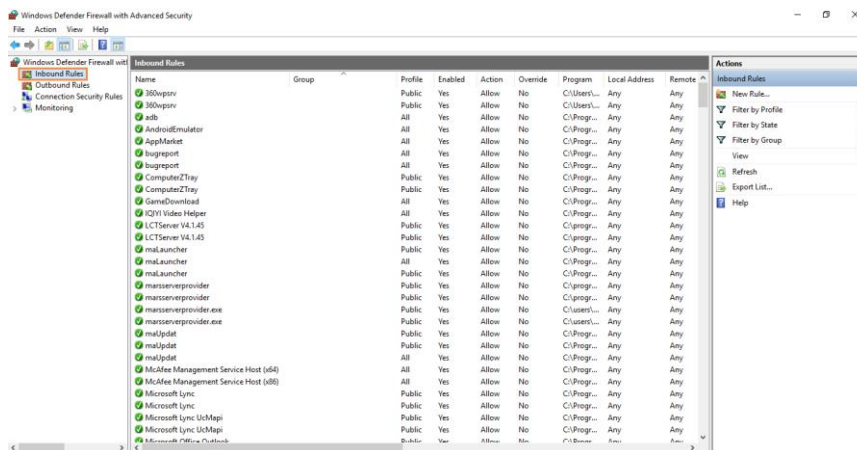

- Step 8 On the right of the page, click **New Rule** to open the **New Inbound Rule Wizard** dialog box.


Step 9 Select **Program** and click **Next**.

Figure 7-3 Rule type

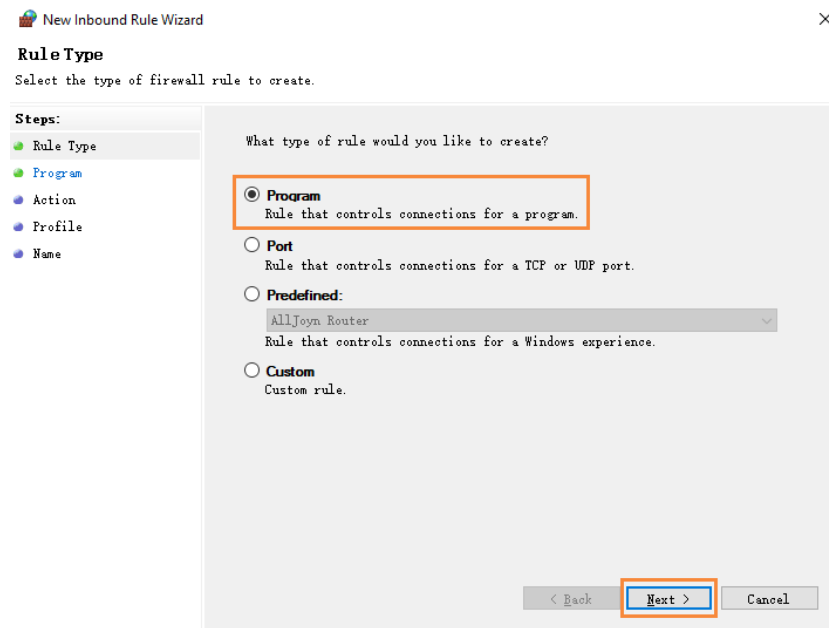

Step 10 Click **Browse**, select **Proto.exe** from the local PC, and then click **Next**.

Figure 7-4 Program selection

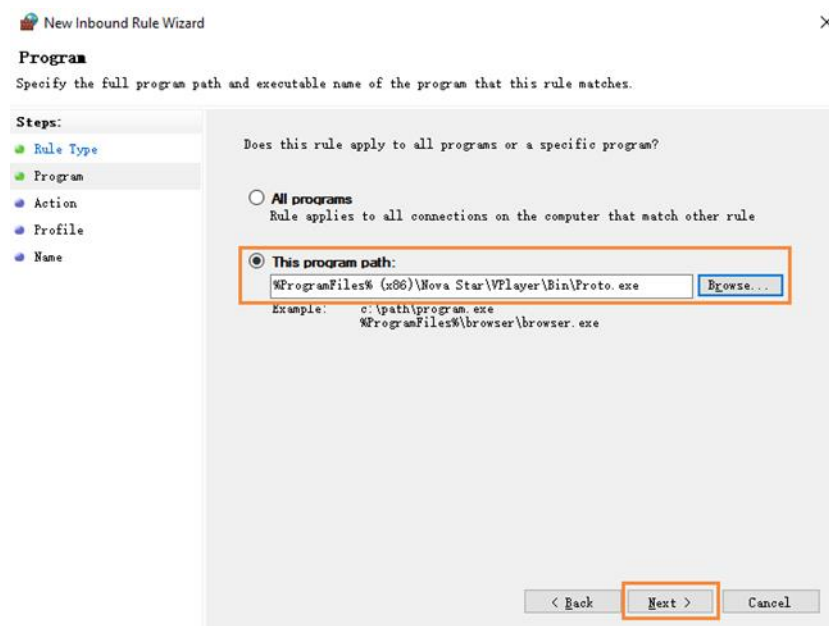

Step 11 Select **Allow the connection** and click **Next**.

Step 12 Select **Domain**, **Private**, and **Public** and click **Next**.

Step 13 Enter a name and click **Finish**.

7.2 What video formats are supported in studio mode?

The following video formats are supported in studio mode:

*.3g2, *.3gp, *.3gp2, *.3gpp, *.amv, *.asf, *.avi, *.bik, *.bin, *.divx, *.drc, *.dv, *.f4v, *.flv, *.gvi, *.gxf, *.iso, *.m1v, *.m2v, *.m2t, *.m2ts, *.m4v, *.mkv, *.mov, *.mp2, *.mp4, *.mp4v, *.mpe, *.mpeg, *.mpeg1, *.mpeg2, *.mpeg4,

*.mpg, *.mpv2, *.mts, *.mxf, *.mxg, *.nsv, *.nuv, *.ogg, *.ogm, *.ogv, *.ps, *.rec, *.rm, *.rmvb, *.rpl, *.thp, *.tod, *.ts, *.tts, *.txd, *.vob, *.vro, *.webm, *.wm, *.wmv, *.wtv, *.xesc

AVI only supports the following video coding formats: MPEG-2, MPEG-4, MPEG-4 ASP, H.264, DivX 4/5/6, XviD, SV1, 3ivX D4, H.264/MPEG-4 AVC/MKV, AMR, WebM, WMV, MP3. For instance, AVI videos in DX50 and MP4V formats cannot be played.

When a video format is not supported, you are advised to convert the video to MP4 format with a professional video format conversion software.

7.3 Limitations on Playback Parameters for Ultra-long Screens

Table 7-1 Media playback parameter description

Playback Window Size	Maximum width	3840 px
	Maximum height	2160 px
Number of Parts	Up to 8 parts	
Scrolling Text	Maximum font size	256px
	Maximum number of characters	2000
Number of Videos (Resolution x Number)	Number of videos that can be played simultaneously: (Choose one from the following 4 options) • 4K x 1 • 1080P x 2 • 720P x 4 • (480×50) x 6	
Other Media	None	

7.4 Limitations on Cut-to-Display Windows for Regular Screens

Table 7-2 Limitations on the playback of cut-to-display windows

Item	TB4, TB6, TB8	TB1-4G (Optional 4G), TB2-4G (Optional 4G)
Recommended screen resolution (width × height)	4096 × 288 pixels	1920 × 1080 pixels
Number of parts	Cut horizontally: Actual screen width/Playback window width ≤8 Cut vertically: Actual screen height/Playback window height ≤8	