

INSTRUCTION MANUAL

1/10 Scale 4WD RC Nitro & Electric Powered Car

RH1001 Blade SS (Single Speed)

RH1002 Blade TS(Two Speed)

RH1011 Sword(Brushed)

RH1013 BLX10(Brushless)

RH1069 Merak(Brushed)

RH1070 Merak(Brushless)



V24.11

Index

Blade Specification-----	P2
Assembly Diagrams-----	P3-P7
Shocks & Chassiss Assembly-----	P3
Front & Rear Assembly-----	P4
Engine & Central Tranmssion Assembly-----	P5
Others-----	P6
Swar bar upgrade-----	P7
Assembly Steps-----	P8
Sword/BLX10 Specification-----	P9
Assembly Diagrams-----	P10-P11
Chassiss & Motor & Steering Assembly-----	P10
Swar bar upgrade-----	P11
Assembly Steps-----	P12
Part List-----	P13-P21
Part List-----	P13-P20
Upgrade Part List-----	P21


RH1001 Blade SS (Single Speed)

RH1001 Specs. :

1. Length: 408 mm (MT)
406 mm (ST)
2. Width: 320 mm (MT)
318 mm (ST)
3. Height: 156 mm (MT)
145 mm (ST)
4. Wheelbase: 290/295 mm
5. Gear Ratio: 10.4:1
6. Tyre: $\phi 120 \times 60$ mm (MT)
 $\phi 105 \times 60$ mm (ST)
7. Weight: 2200 g (MT)
1850 g (ST)

Standard Equipments:

1. Steering Servo: 3kg/cm
2. Throttle Servo: 3kg/cm
3. Engine: G0.18 or SH.18
4. Radio: 2CH AM

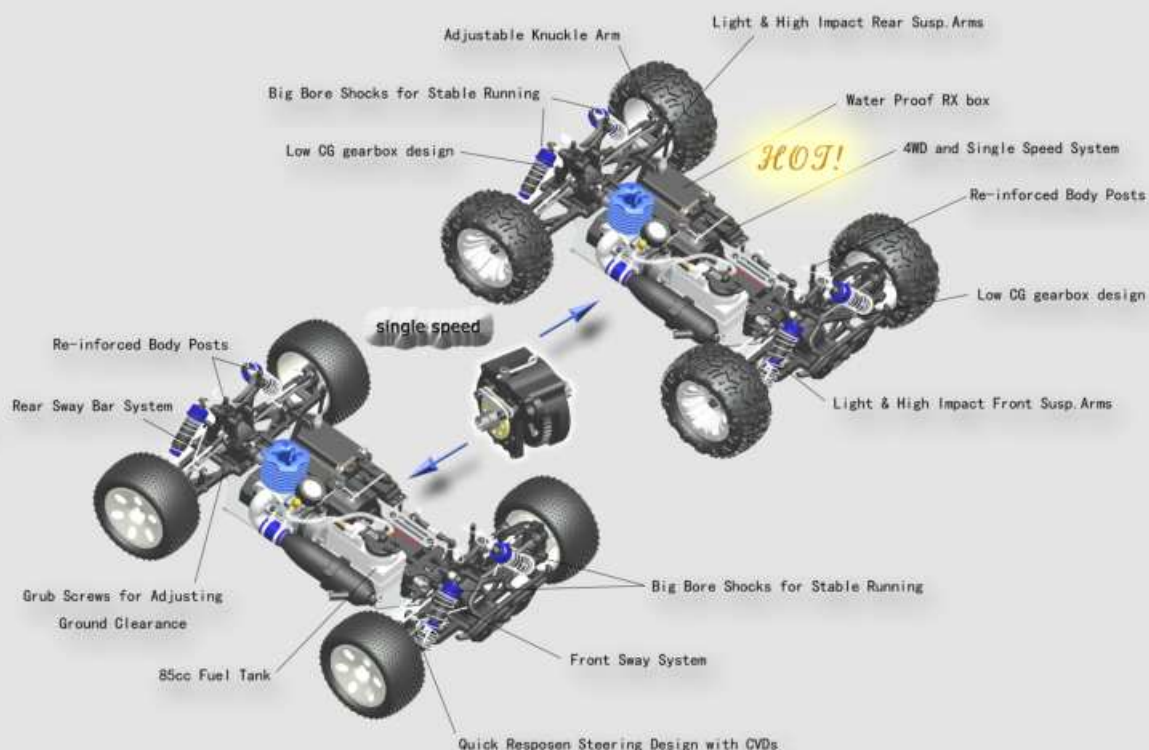


RH1002 Blade TS (Two Speed)

RH1002 Specs. :


1. Length: 408 mm (MT)
406 mm (ST)
2. Width: 320 mm (MT)
318 mm (ST)
3. Height: 156 mm (MT)
145 mm (ST)
4. Wheelbase: 290/295 mm
5. Gear Ratio: 6.9:1 (H)
10.4:1 (L)
6. Tyre: $\phi 120 \times 60$ mm (MT)
 $\phi 105 \times 60$ mm (ST)
7. Weight: 2200 g (MT)
1850 g (ST)

Standard Equipments:

1. Steering Servo: 3kg/cm
2. Throttle Servo: 3kg/cm
3. Engine: G0.18 or SH.18
4. Radio: 2CH AM

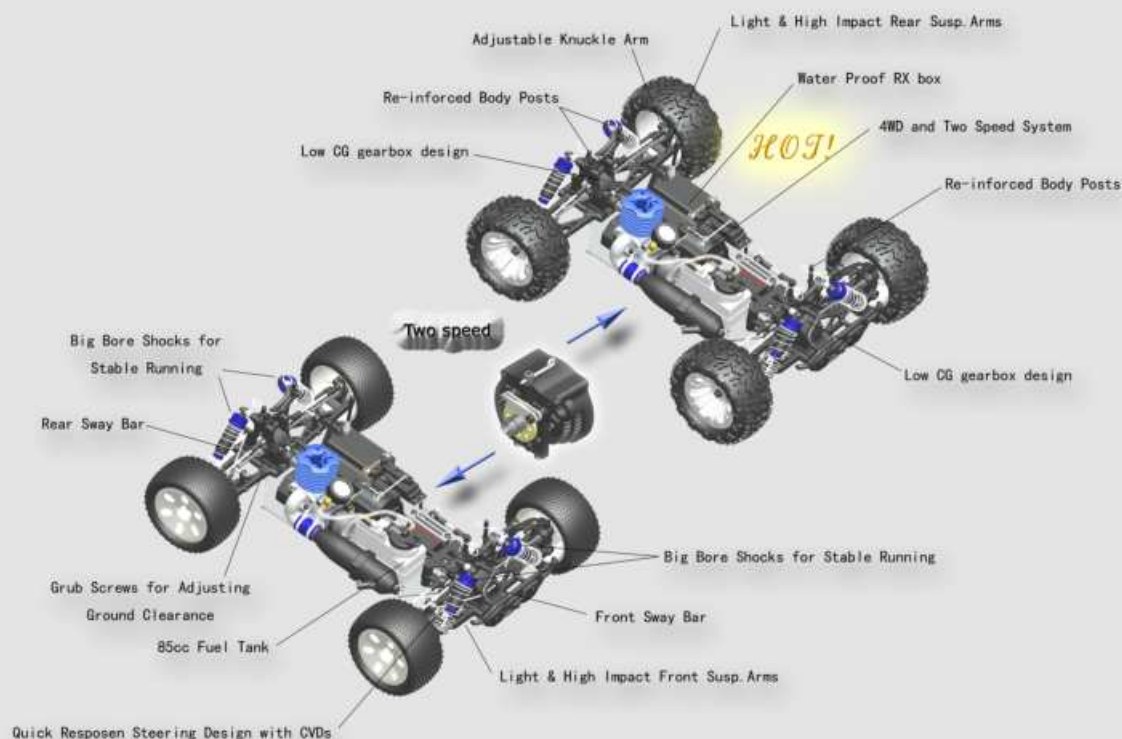


Front Shocks

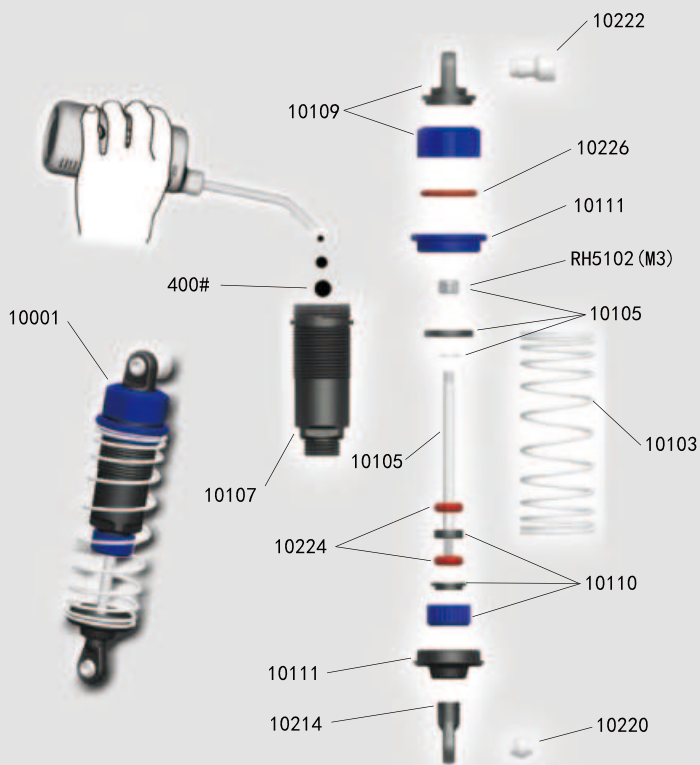


(Dia. 3-1)

Rear Shocks

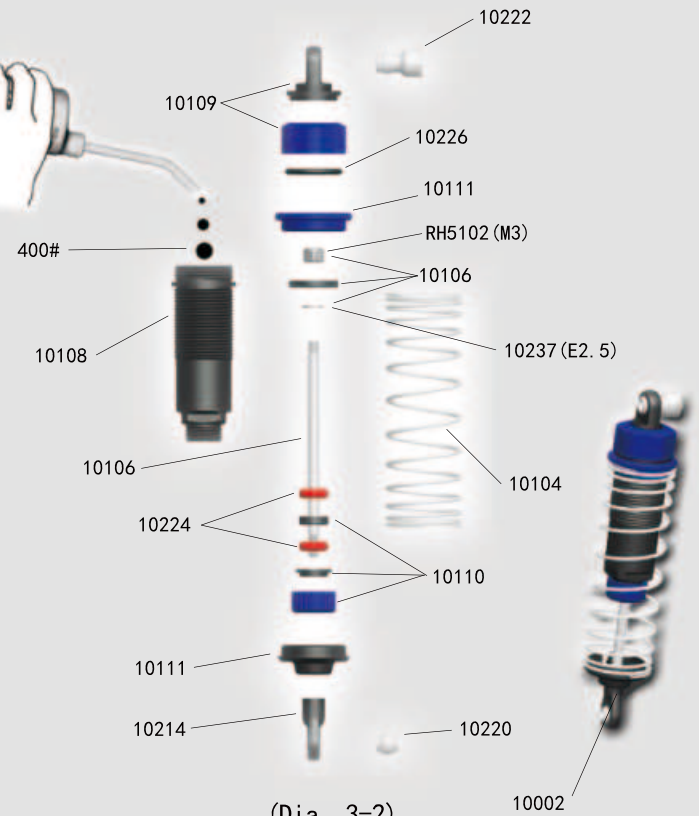

(Dia. 3-2)

Chassis Assembly

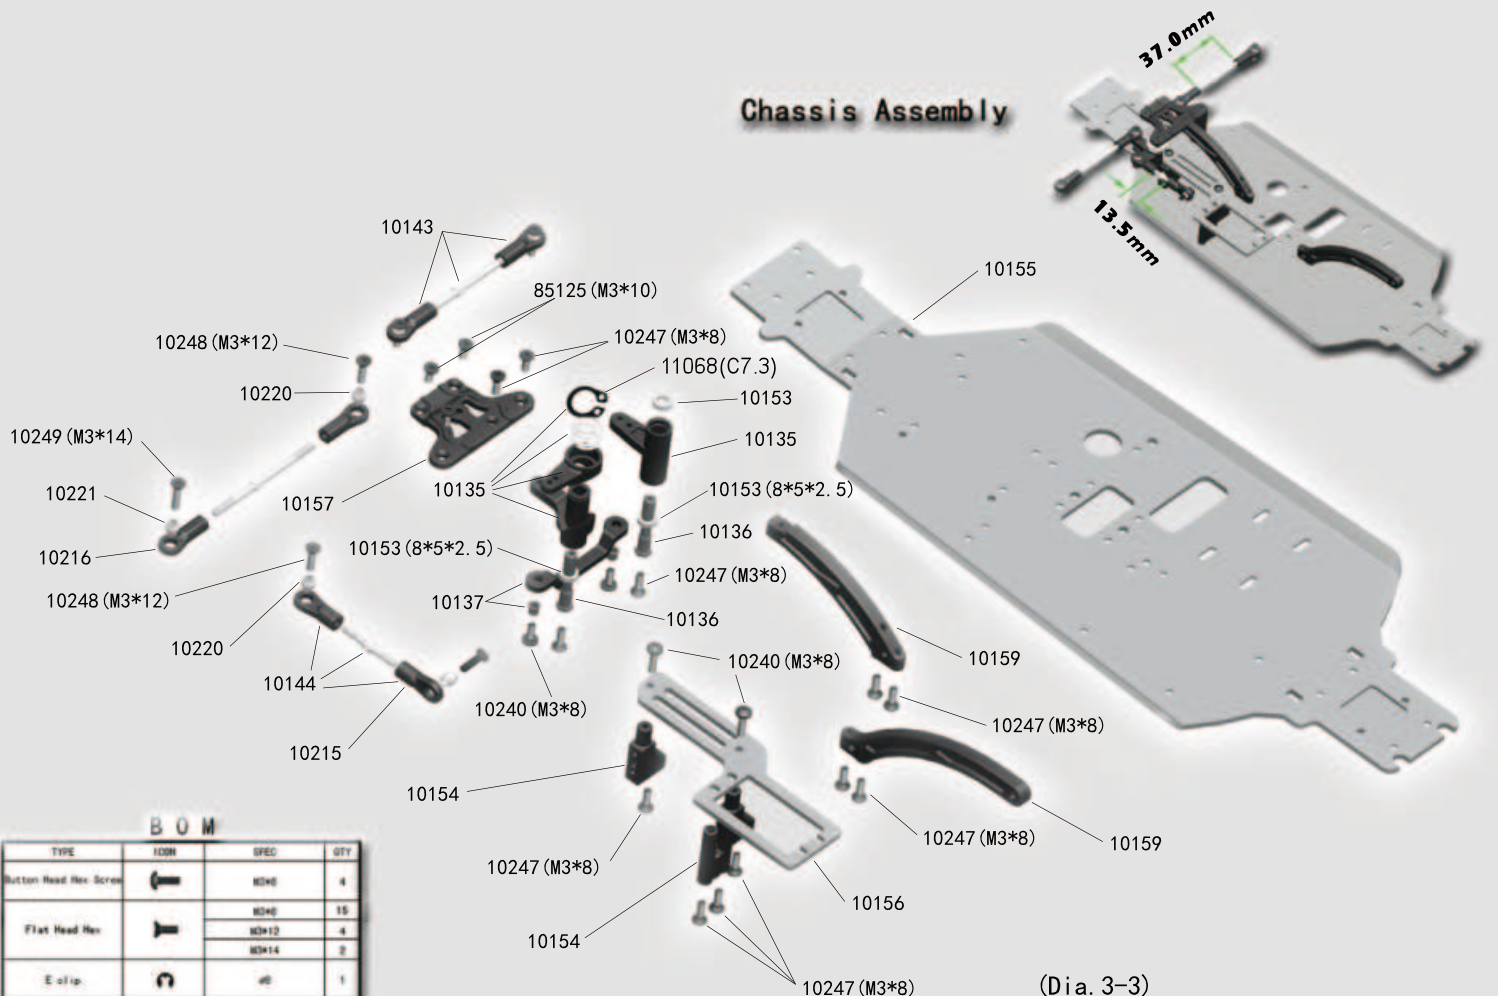

(Dia. 3-3)

B O M

TYPE	ICON	SPEC	QTY
Button Head Hex. Screw		M3*8	4
Flat Head Hex		M3*8	15
		M3*12	4
		M3*14	2
E clip		φ6	1
Ball Bearing		φ6xφ5x2.5	2

13091-Bumper



RH1069/RH1070


(Dia. 4-1)

Gearbox Assembly



(Dia. 4-2)

Diff Box

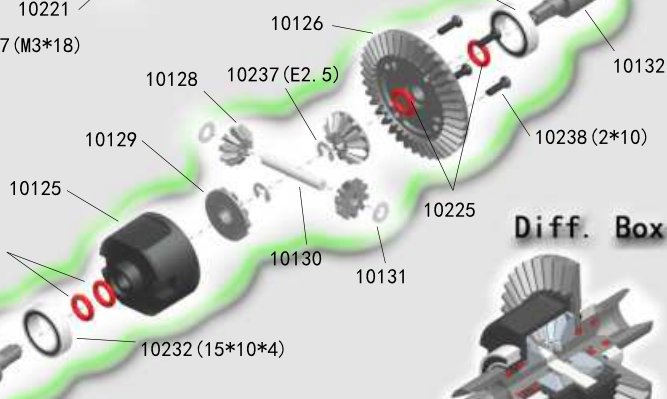


(Dia. 4-3)

Diff. Box




Front Assembly

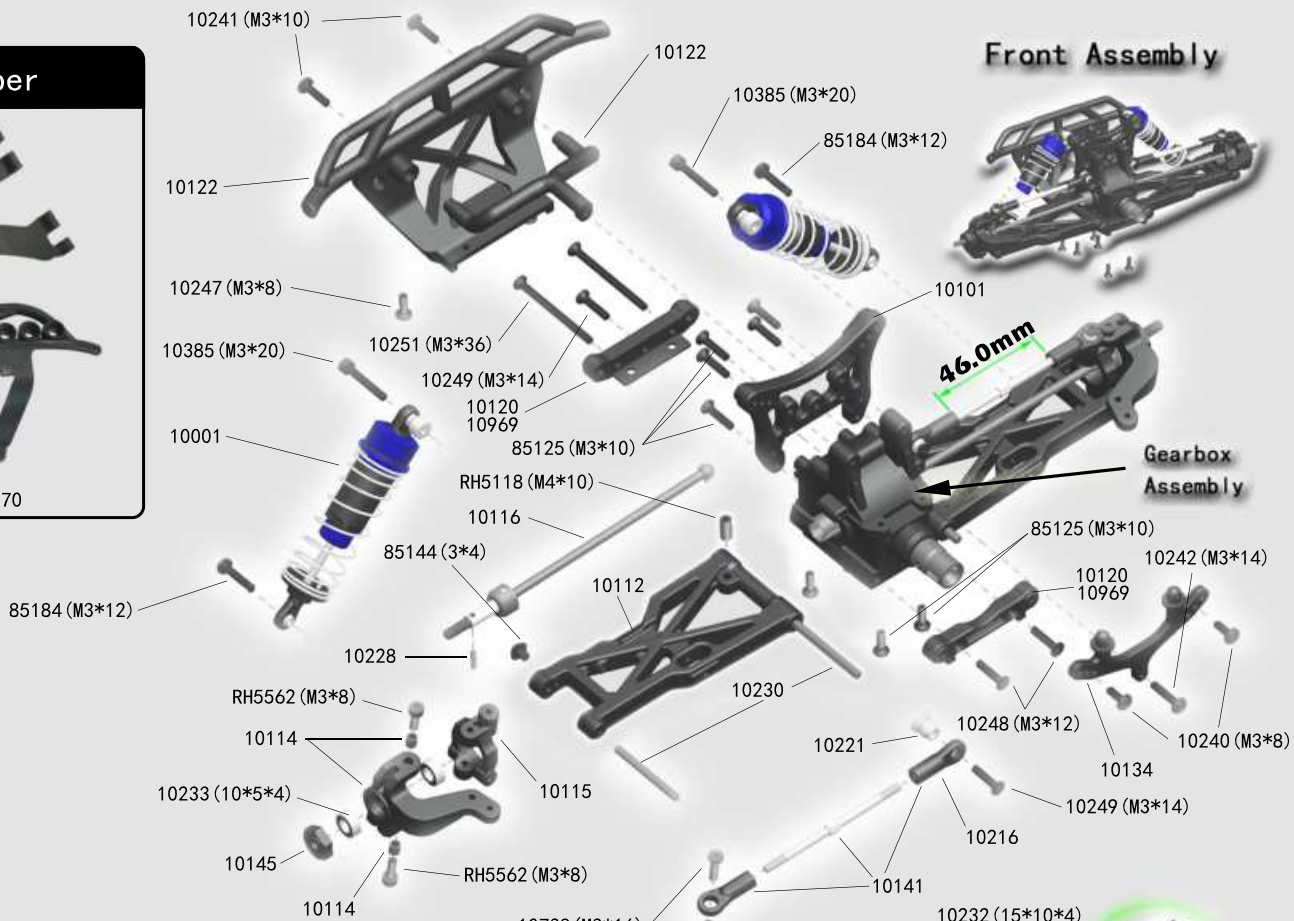

Gearbox Assembly

Rear Assmbeley

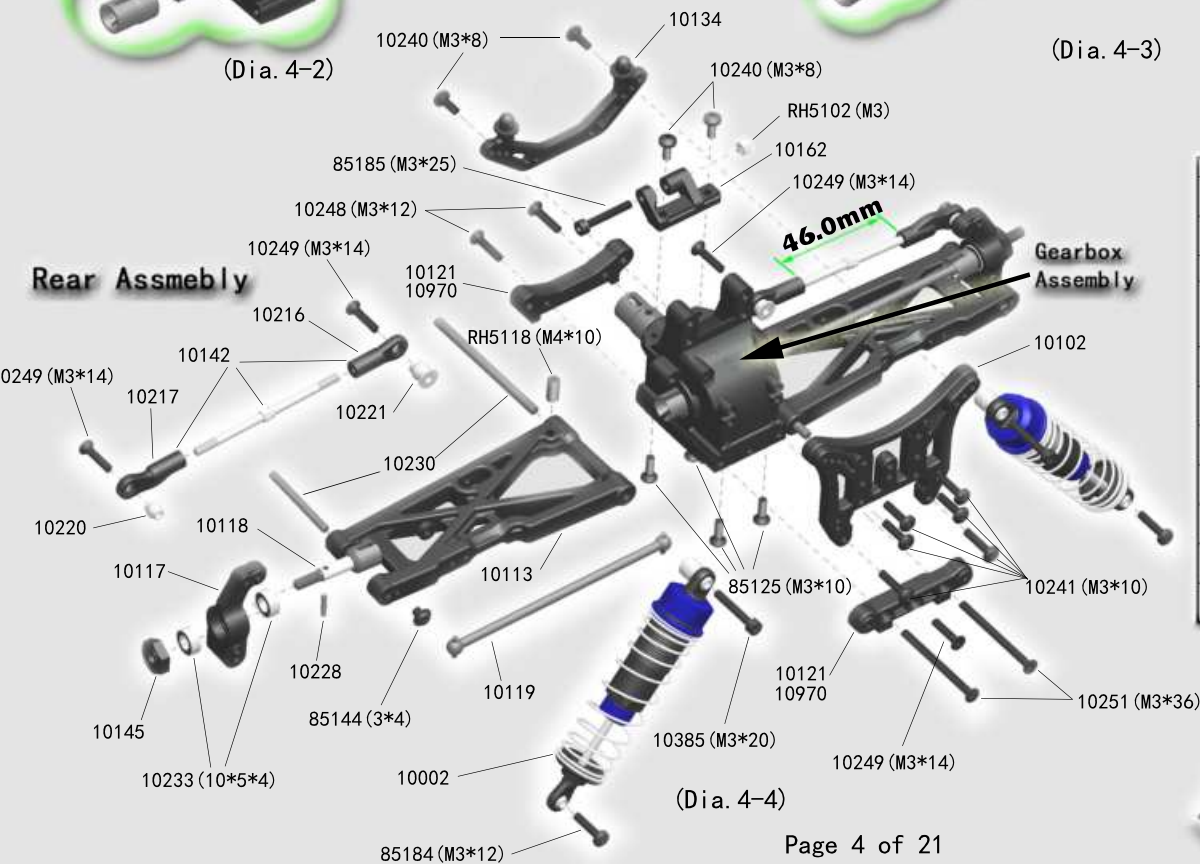

(Dia. 4-4)

Gearbox Assembly

B O M			
TYPE	ICON	SPEC	QTY
Round Head Self Tapping Hex Screw		2x10	4
Button Head Hex Screw		M3x10	6
Cap Head Hex Screw		M3x12	2
Flat Head Hex		M3x18	2
Set Screw		M3x25	1
Ring Self Tapping Screw		M3x10	3
Washer		M3x16	4
Mylon Lock Nut		M3x19	2
E clip		M3x26	2
O'Ring		M4x4	1
Ball Bearing		M4x10	2
		3x4	2
		ø6x3.1x0.2	2
		M3	3
		ø2.5	5
		ø6.05x4.05x1.55	4
		ø6.05x4.05x1.5	2
		ø15.0x12.0x1.5	2
		ø15x10x4	2
		ø10x5x4	6

TYPE	ICON	SPEC	QTY
Round Head Self Tapping Hex Screw		2x6	4
Button Head Hex Screw		M2x6	4
Cap Head Hex Screw		M2x15	2
		M2x20	5
Flat Head Hex		M2x10	1
Set Screw		M2x4	1
Washer		M2x3, 140, 2	1
Nylon Lock Nut		M2	5
O'Ring		OD1* OD2	1
Ball Bearing		ø10xø24	2

TYPE	ICON	SPEC	QTY
Round Head Self Tapping Hex Screw		2x6	4
Button Head Hex Screw		M2x6	4
Cap Head Hex Screw		M2x15	2
		M2x20	5
Flat Head Hex		M2x10	1
Set Screw		M2x4	1
Washer		M2x3, 140, 2	1
Nylon Lock Nut		M2	5
O'Ring		OD1* OD	1
Ball Bearing		ø10xø24	2

Screw		M4x4	1
Nut		M6x0.75x2	1
Nylon Lock Nut		M6	5
O-Ring		OD1 x OD	1
Ball Bearing		ID10xD4	2

P0010 GO .18 Engine w/glow plug
P0011 SH .18 Engine w/glow plug

10170
10195
10169
10151
10167
85035
85087
85045
10171 (single speed)
10131
10172 (Two speed)

85148 (2+6)
10168
10233 (10+5+4)
10168
RH5117 (M4x4)
10168
RH5102 (M3)
10240 (M3x8)
10131
10172 (Two speed)

10246 (M3x28)
85118 (M3x15)
RH5102 (M3)
10173
10240 (M3x8)

(Dia. 5-1)

TYPE	ICON	SPEC	QTY
Cap Head Hex Screw		M6x10	2
Flat Head Hex		M6x5	4
		M6x20	2
Set Screw		M6x2	1
		M6x6	2
E clip		ø4	3
Ball Bearing		ø10x5x4	2

TYPE	ICON	SPEC	QTY
Cap Head Hex Screw		M6x10	2
Flat Head Hex		M6x5	4
		M6x20	2
Set Screw		M6x2	1
		M6x6	2
E clip		ø4	3
Ball Bearing		ø10x5x4	2


[illegible]

TYPE	ICON	SPEC	QTY
Cap Head Hex Screw		M2X10	2
Flat Head Hex		M2X5	4
		M2X20	2
Set Screw		M2X3	1
		SSx6	4
E clip		ø8	1
One Way Bearing		Ø12XØ6, 3K0.4	1
Ball Bearing		ø10xØ4	3

TYPE	ICON	SPEC	QTY
Cap Head Hex Screw		M6x10	2
Flat Head Hex		M6x5	4
		M6x20	2
Set Screw		M6x3	1
		SSx6	4
E clip		ø6	1
One Way Bearing		Ø12xØ6, 3K0.4	1
Ball Bearing		ø10xø5x4	3


Exploded view diagram of the motor assembly (Fig. 5-3) showing various components and their part numbers:

- 10176
- 10243 (M3*10 1/2T)
- 10247 (M3*8)
- 10182
- 10262
- 10181
- RH5190 (E4)
- 10183
- 10180
- (Dia. 5-3)
- RH5117 (M4*4)

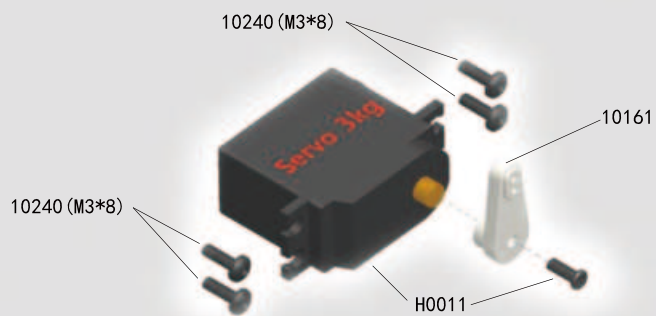


Steering Servo

(Dia. 6-1)

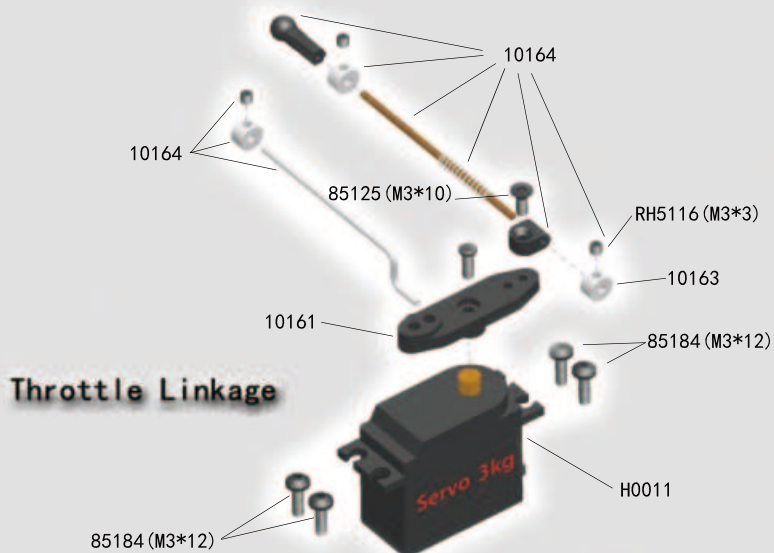

Throttle Linkage

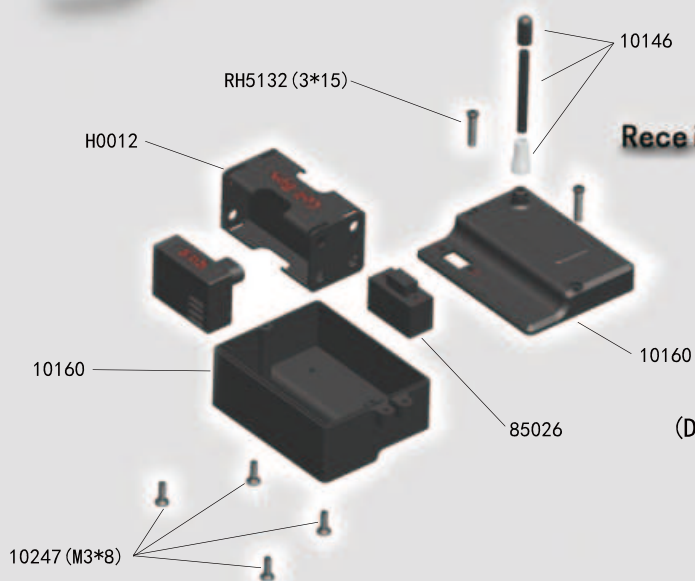

Receiver Assembly

(Dia. 6-3)




(Dia. 6-2)

Fuel Tank



(Dia. 6-6)

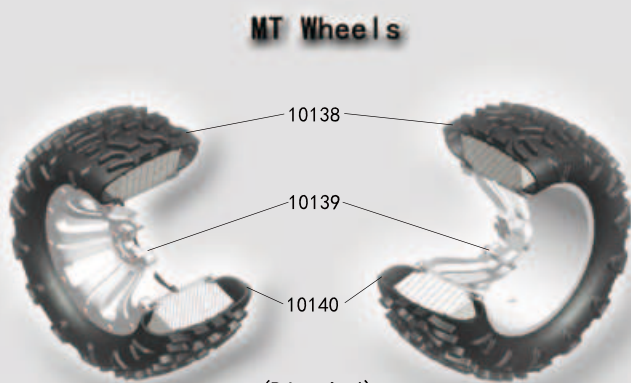


MT Wheels

(Dia. 6-4)





ST Wheels

(Dia. 6-5)

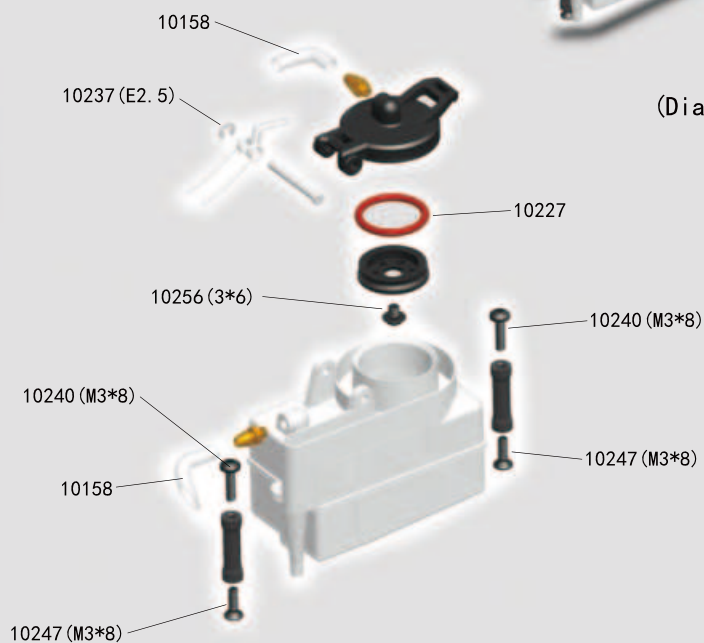

FRONT & REAR SWAY BAR SYSTEM (FOR ST TYRES ONLY)

Blade SS and TS are just different in Center Transmission, please refer to Dia. 5-2 and Dia. 5-3. And when they come with ST tyres, the trucks will have front & rear sway bar system for better performance.

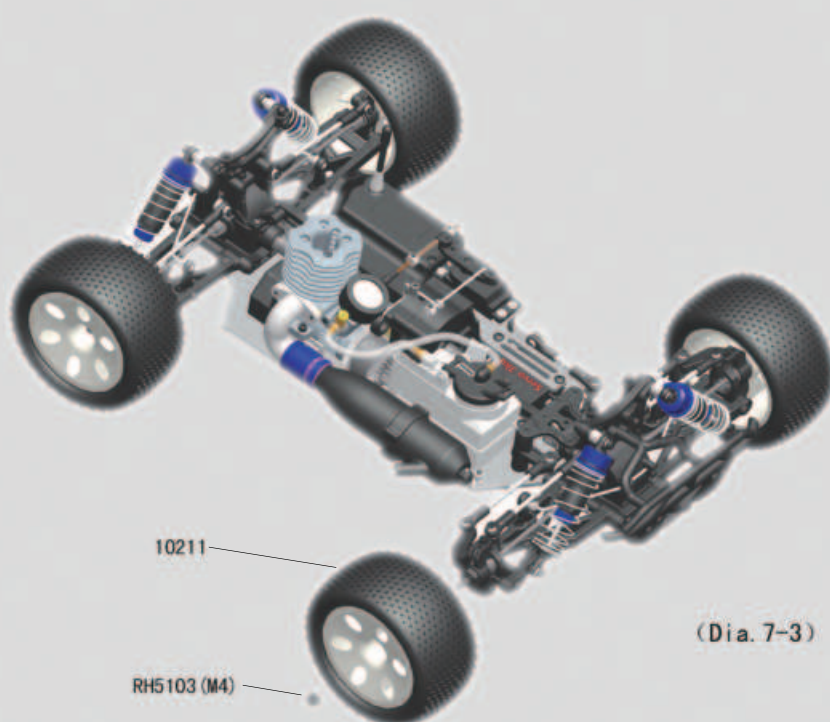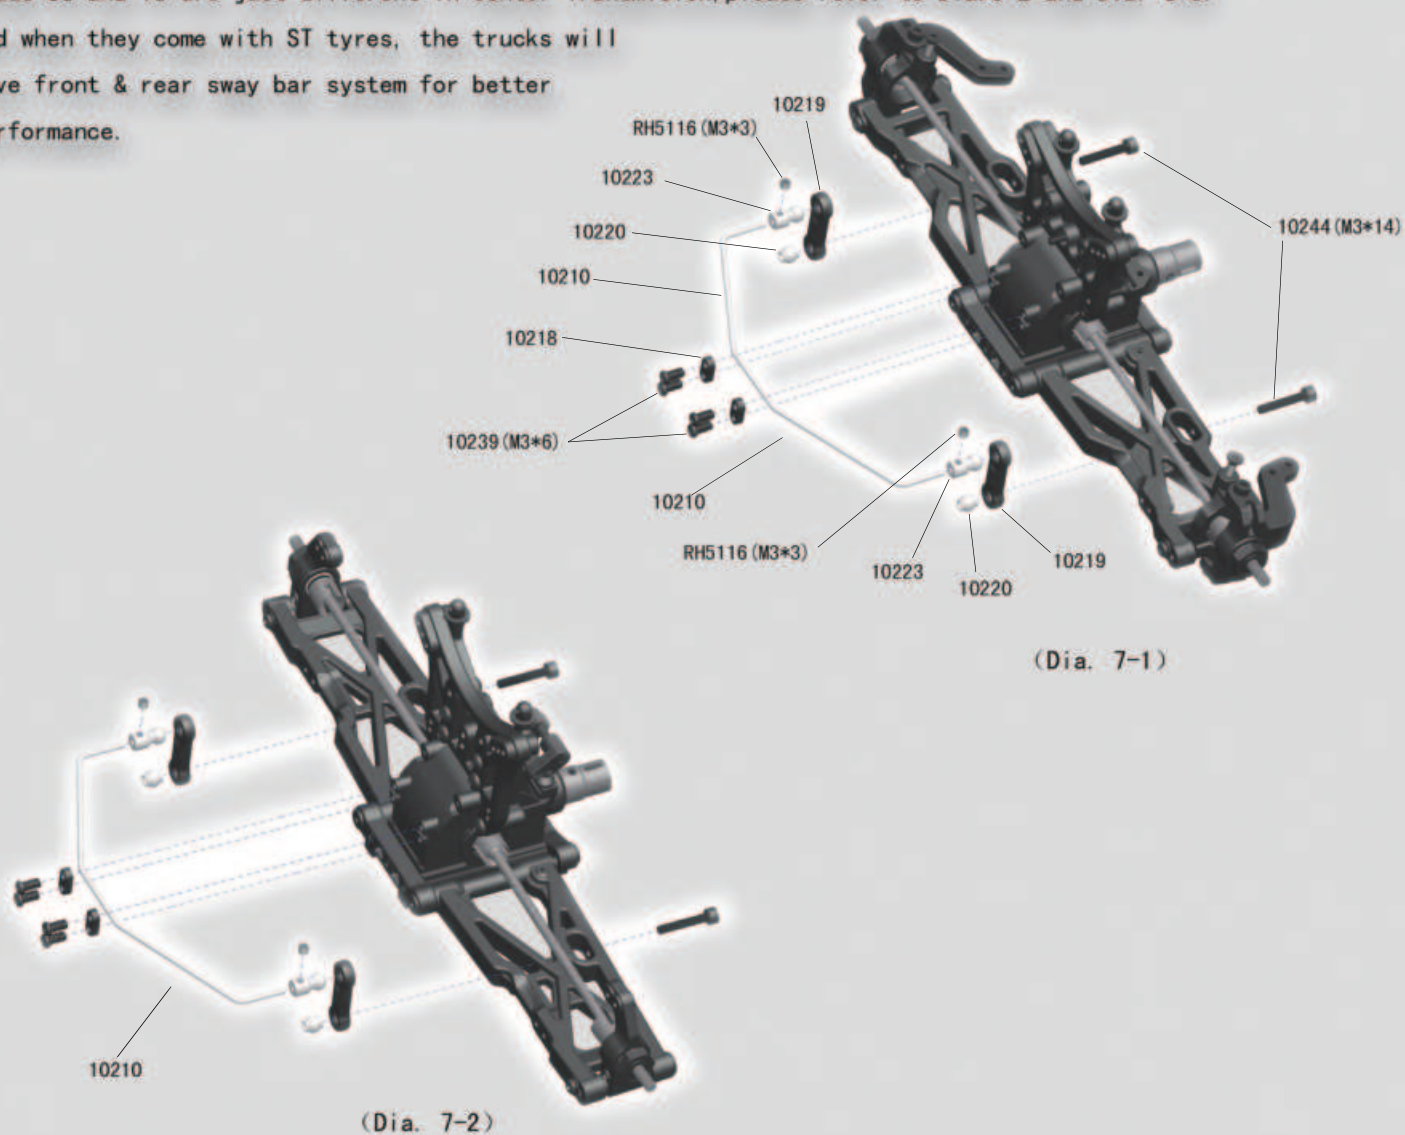


Assembly Steps:

1. Fasten the fuel tank posts to the chassis, then the fuel tank assembly. (See Dia. 6-6)



2. Assemble Chassis. (See Dia. 3-3)

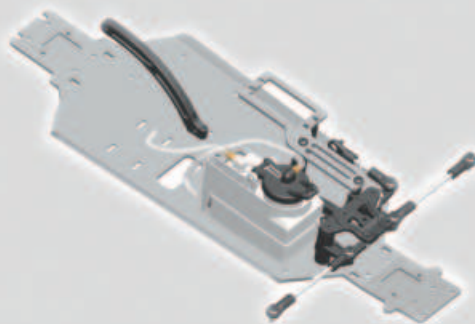


3. Assemble the front assembly to the chassis. (See Dia. 4-1)




4. Assemble the rear assembly to the chassis. (See Dia. 4-4)



5. Tighten the wheels.
(See Dia. 6-4 or 6-5)

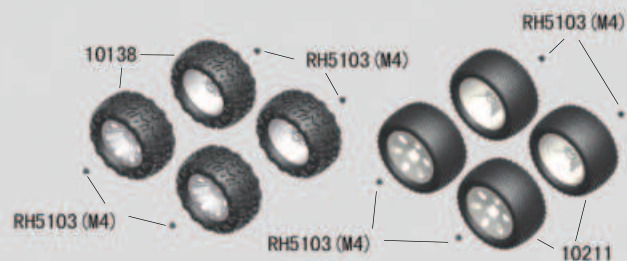

6. Assemble central transmission and rear central drive shaft to the chassis. (See Dia. 5-2 or 5-3)

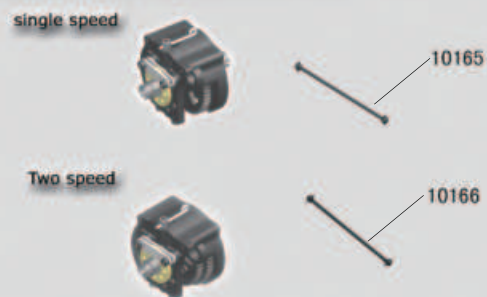


7. Tighten the engine assembly to the chassis. (See Dia. 5-1)



Ready To Run !!!



8. Finally assemble the receiver box assembly, throttle/steering servos assembly to the chassis. Setup the radio system and then assemble the cutted body to the body posts. (See Dia. 6-1, 6-2, 6-3)

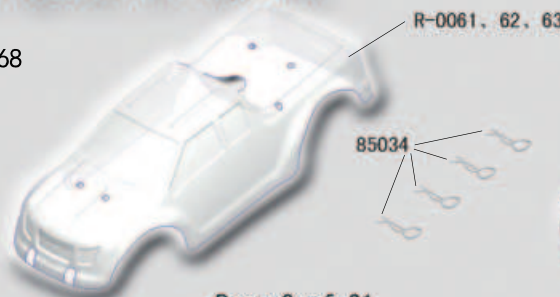


1/10 Scale 4WD Electric Monster Truck

RH1011 Sword (Brushed) RH1013 BLX10 (Brushless)

RH1069 Merak (Brushed) RH1070 Merak (Brushless)


Specifications:

1. Length: 415 mm (MT)
406 mm (ST)
2. Width: 328 mm (MT)
318 mm (ST)
3. Height: 156 mm (MT)
145 mm (ST)
4. Wheelbase: 290/295 mm
5. Gear Ratio: 11.1:1
6. Tyres: $\Phi 120 \times 60$ mm (MT)
 $\Phi 105 \times 52$ mm (ST)
7. Weight: 1900 g (MT)
1550 g (ST)

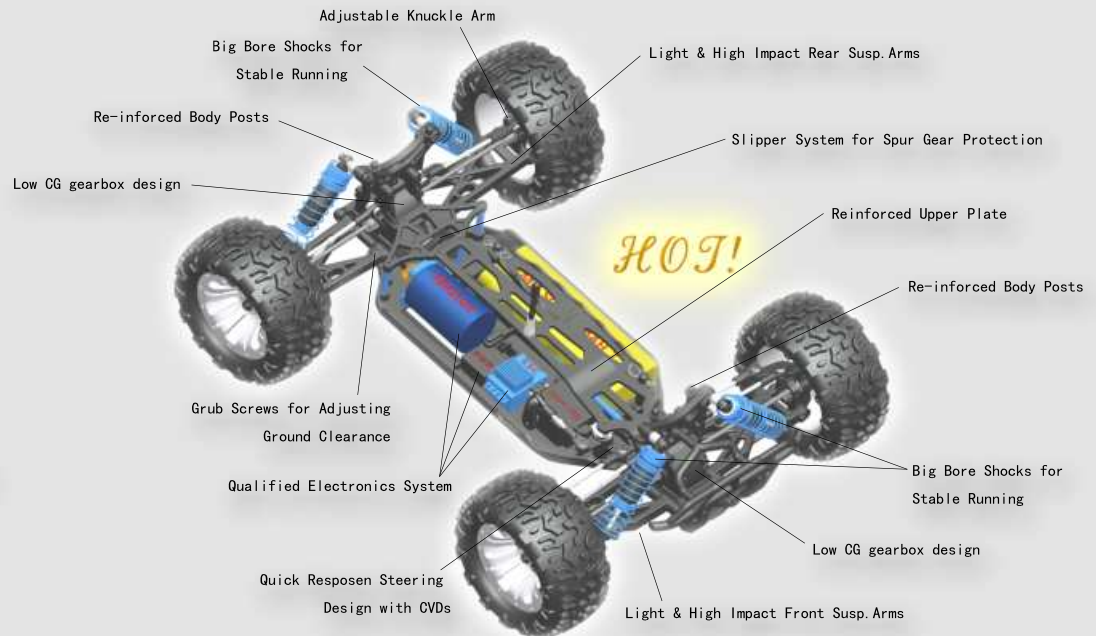

Standard Equipments:

1. Steering Servo: 3kg/cm
2. Motor: 550 (SWORD)
3650 (BLX10)
3. ESC: 60A (SWORD)
300A (BLX10)
4. Battery: Ni-MH SC1800mAh 7.2V (SWORD)
Li-Po 2700mAh 7.4V $\leq 25^\circ\text{C}$ (BLX10)
5. RADIO: 2CH A M (SWORD)
2CH 2.4GHz (BLX10)

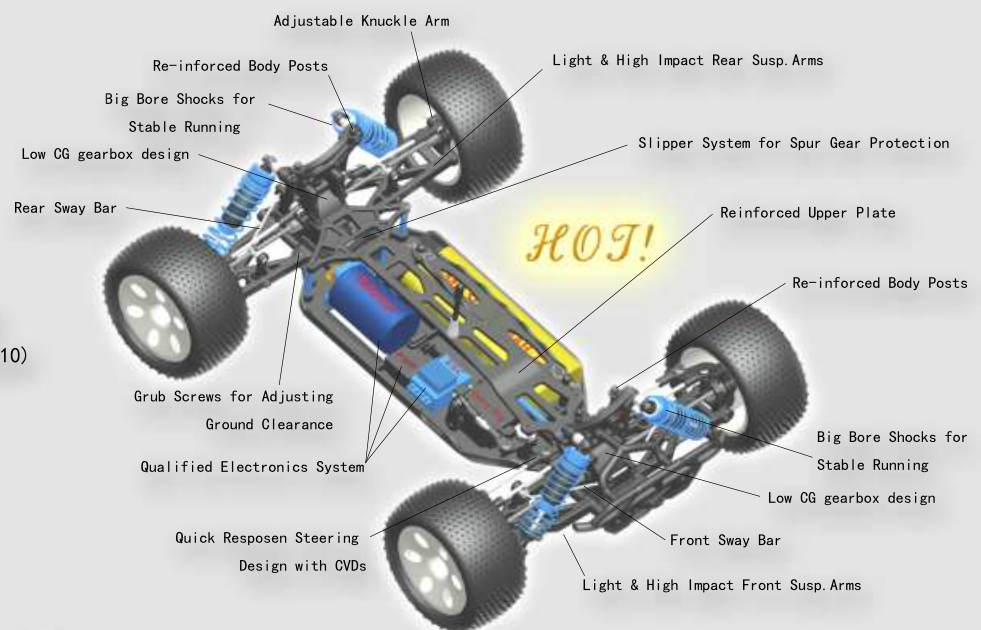

BLX10/Merak Brushless System Set :




Sword/Merak Brushed System Set :



FLASH TR & MT EP are converted from FLASH TR & MT GP, having same front assembly. Please refer to Dia. 4-1. And the rear assbly is all same as GP but without center outdrive cup (see Dia. 10-2)

Attention: FLASH TR & MT EP brushed and brushless are only different in ESC, motor battery, charger and radio.

Central Assembly

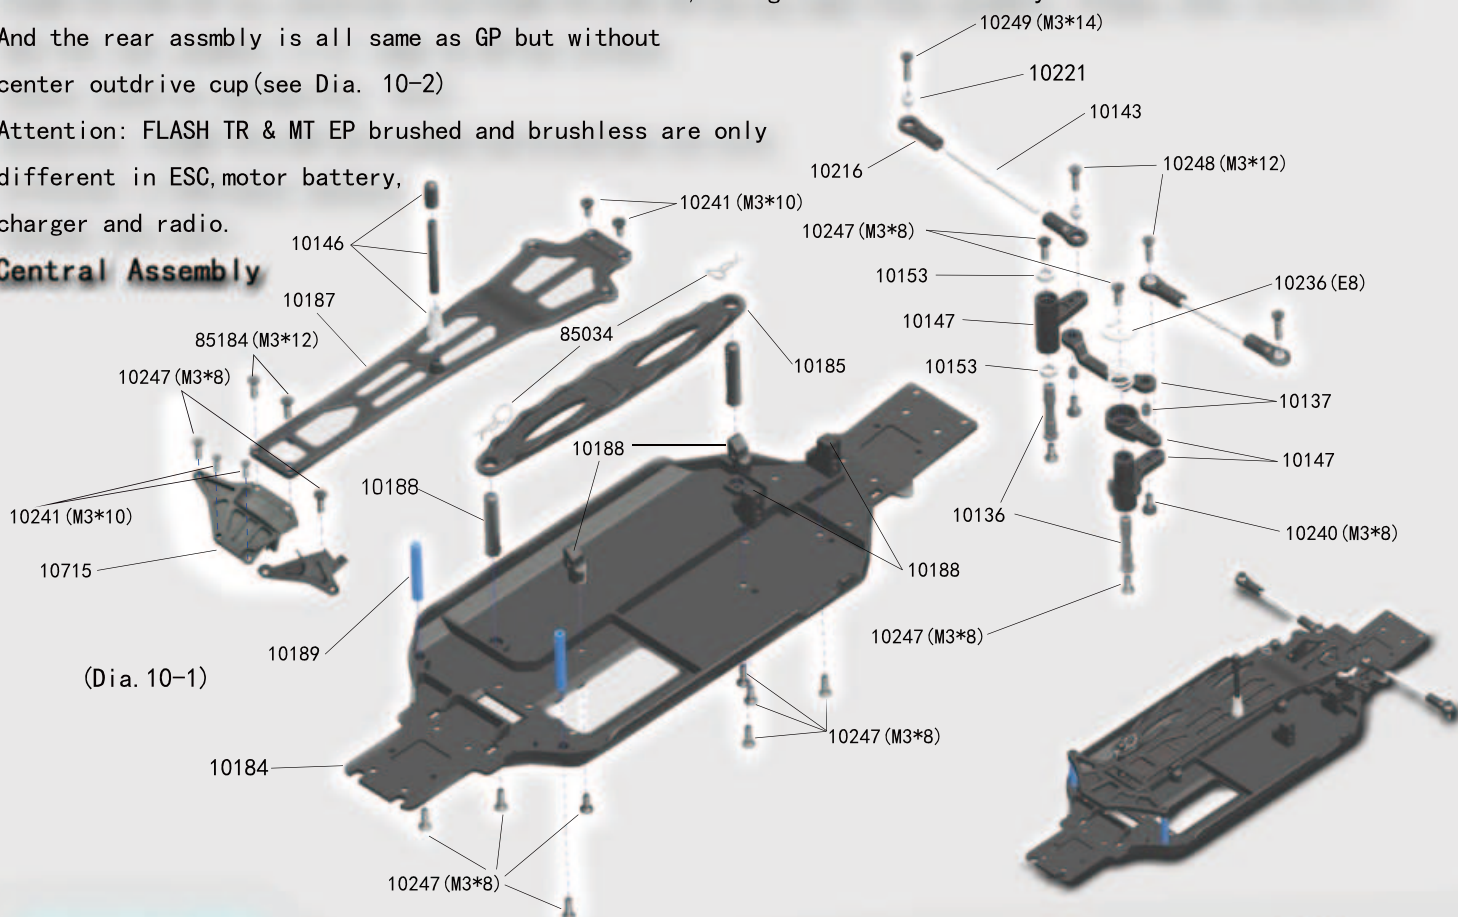

(Dia. 10-1)

Rear Assembly



(Dia. 10-2)

Motor Assembly


Differeial slipper complete is preinstalled in rear assembly, complete.

(Dia. 10-6)


ESC

Steering Assembly

Receiver

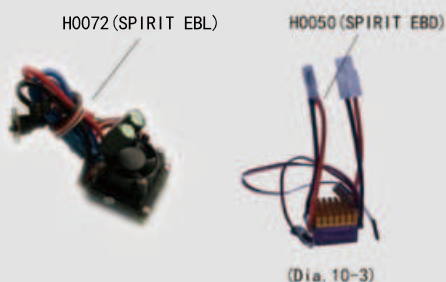

(Dia. 10-3)

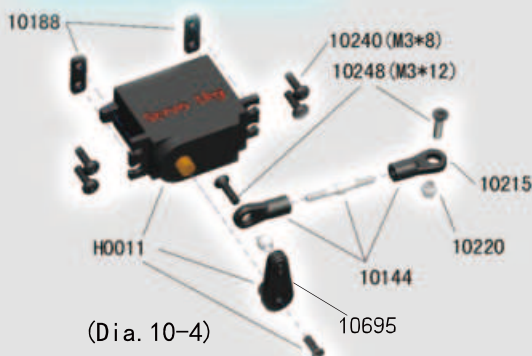



(Dia. 10-4)



(Dia. 10-5)


FRONT & REAR SWAY BAR SYSTEM

FLASH TR & MT EP brushed and brushless are just different in electronics system of motor, ESC, battery, charger and radio. And when FLASH TR & MT EP comes with ST tyres, the trucks will have optional front & rear sway bar system for better performance. Other assemblies Dia please refer to instructions of Page 10 and that of GP version.

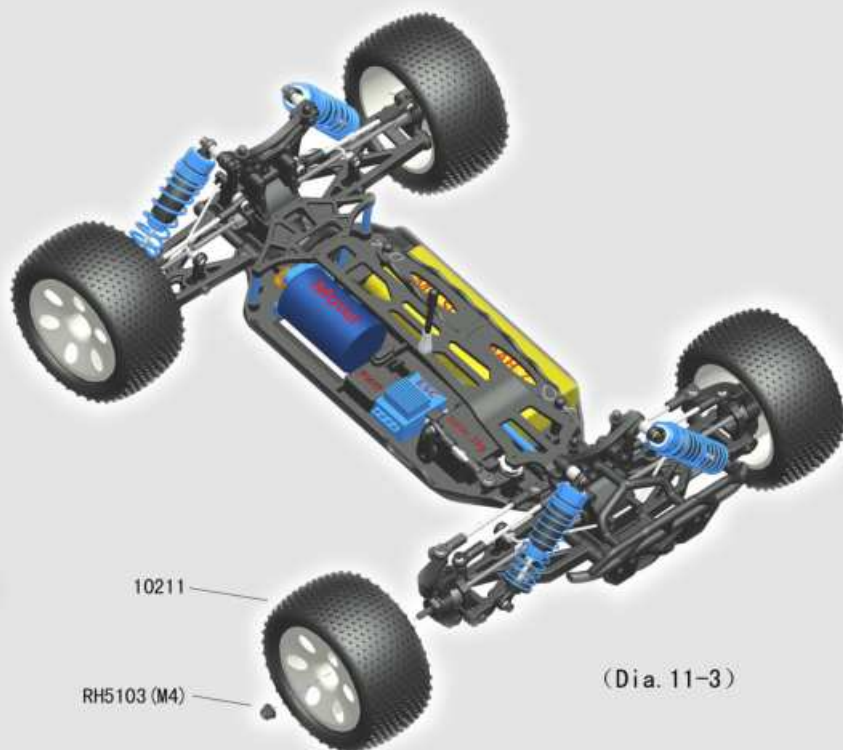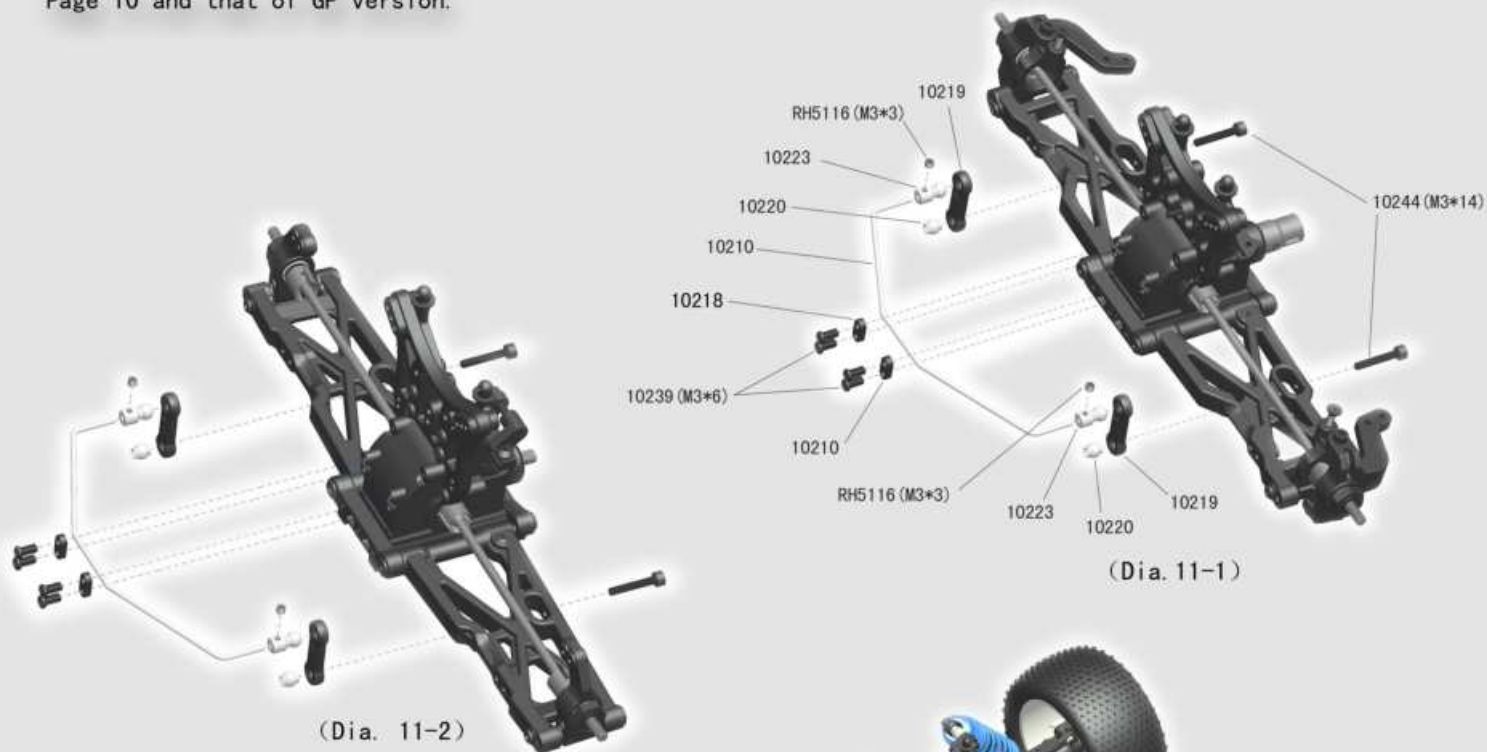

Wheelie Pack:

In order to increase the stability operation under top speed for "Super Player", who plays the car with 3S lipo and running cock-up, we design a wheelie system for option.

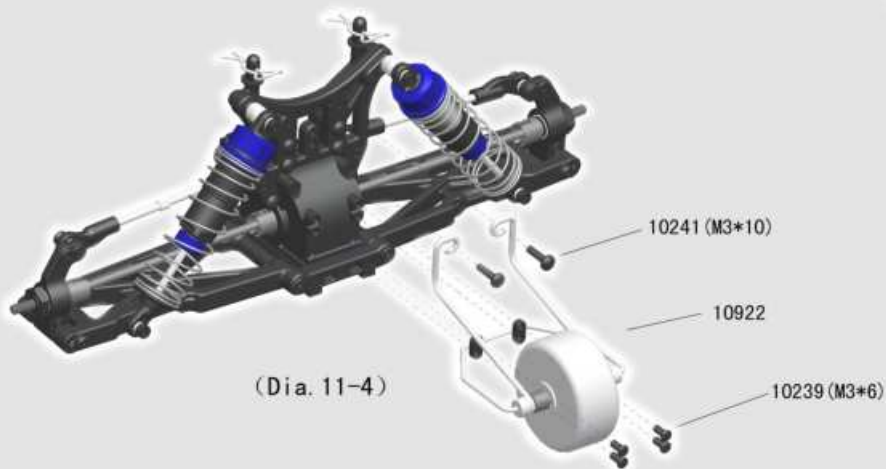

ASSEMBLY STEPS:

1、Assembly center chassis part (See Dia. 10-1)



2、Assemble front assembly to chassis front. (See Dia. 4-1)




3、Assemble rear assembly to chassis rear part. (See Dia. 4-4)



Ready To Run !!!

5、Mount the wheels.
(See Dia. 6-4, 6-5)

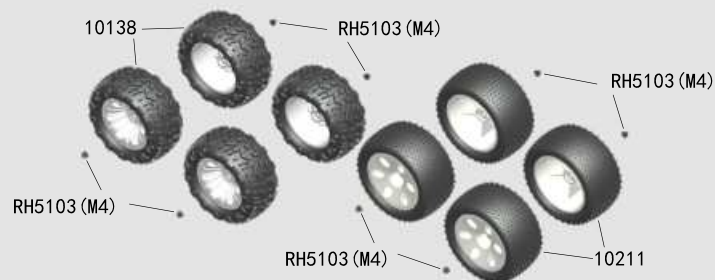

6、Mount the motor assembly and central drive shaft. (See Dia. 10-6)



7、Assemble steering servo and linkage. (See Dia. 10-4)



8、Assemble ESC, receiver, battery and connect them to setup. (See Dia. 10-3, 10-5)


Brushless System:







Brushed system:




R-0061, 62, 63

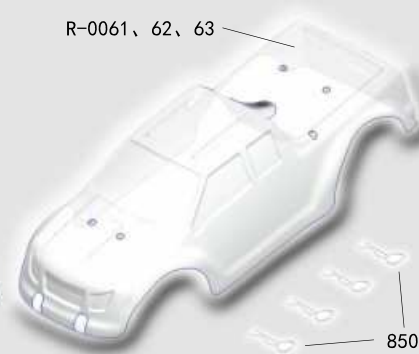


Part List

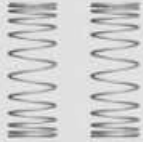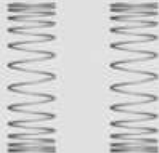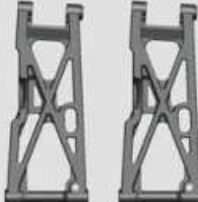10101 - Front Shock Tower 1pc  RH1001/RH1002/RH1011/RH1013	10102 -Rear Shock Tower 1pc  RH1001/RH1002/RH1011/RH1013	10001-Front Shocks 2pc  Alum caps RH1001/RH1002/RH1011/RH1013	10002 - Rear Shock Tower 2pc  Alum caps RH1001/RH1002/RH1011/RH1013
10103-Front Shock Spring 2pc  RH1001/RH1002/RH1011/RH1013	10104-Rear Shock Spring 2pc  RH1001/RH1002/RH1011/RH1013	10105-Front Shock Shaft & Piston Set 2sets  RH1001/RH1002/RH1011/RH1013	10106-Rear Shock Shaft & Piston Set 2sets  RH1001/RH1002/RH1011/RH1013
10107-Front Shock Body 2pc  RH1001/RH1002/RH1011/RH1013	10108-Rear Shock body 2pc  RH1001/RH1002/RH1011/RH1013	10109-Shock Upper Cap 2sets  RH1001/RH1002/RH1011/RH1013	10110-Shock Lower Caps 2sets  RH1001/RH1002/RH1011/RH1013
10111-Shock Lower holder & Adjust Ring 2sets  RH1001/RH1002/RH1011/RH1013	10112-Front Lower Susp. Arm 2pc  RH1001/RH1002/RH1011/RH1013	10113-Rear Lower Susp. Arm 2pc  RH1001/RH1002/RH1011/RH1013	10114-Steering Knuckle Arm 1set  RH1001/RH1002/RH1011/RH1013
10115-Uprights 2pc  RH1001/RH1002/RH1011/RH1013	10116-Front CVD 2pc  RH1001/RH1002/RH1011/RH1013	10117-Rear Hub Carrier 2pc  RH1001/RH1002/RH1011/RH1013	10118-Rear Drive Shaft 2pc  RH1001/RH1002/RH1011/RH1013
10119-Rear Dogbones 2pc  RH1001/RH1002/RH1011/RH1013	10120-Front Susp. Holders 2pc  RH1001/RH1002/RH1011/RH1013	10121-Rear Susp. Holders 2pc  RH1001/RH1002/RH1011/RH1013	10122-Bumper 1Set  RH1001/RH1002/RH1011/RH1013



Part List

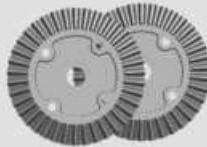10123-Gearbox Housing Set 2pcs  RH1001/RH1002/RH1011/RH1013	RH5526-Diff 16T Gear Washer 6pcs  RH1001/RH1002/RH1011/RH1013	10124-Diff. Drive Gear w/pin 2sets  RH1001/RH1002/RH1011/RH1013	10003-Diff Gearbox Set 1set  RH1001/RH1002/RH1011/RH1013
10125-Diff Case 2pcs  RH1001/RH1002/RH1011/RH1013	10126-Diff Drive Spur Gear 2pcs  RH1001/RH1002/RH1011/RH1013	10127-Diff Drive Gear 2pcs  RH1001/RH1002/RH1011/RH1013	10128-Diff Bevel Gear S. 4pcs  RH1001/RH1002/RH1011/RH1013
10129-Diff Bevel Gear B. 4pcs  RH1001/RH1002/RH1011/RH1013	10130-Diff Pin 2pcs  RH1001/RH1002/RH1011/RH1013	10131-Washer 6pcs  RH1001/RH1002/RH1011/RH1013	10132-Diff Drive Cup 4pcs  RH1001/RH1002/RH1011/RH1013
10133-Center Coupler 3pcs  RH1001/RH1002/RH1011/RH1013	10134-Body Post 2pcs  RH1001/RH1002/RH1011/RH1013	10135-Servo Saver (GP) 1set  RH1001/RH1002	10136-Servo Saver Post 2pcs  RH1001/RH1002/RH1011/RH1013
10137-Steering Ackerman  RH1001/RH1002/RH1011/RH1013	10138-Wheel Complete 2sets  RH1001/RH1002/RH1011/RH1013	10139-Rim 2pcs  RH1001/RH1002/RH1011/RH1013	10140-Tyre w/foam 2sets  RH1001/RH1002/RH1011/RH1013
10141-Front Upper Susp. Arm 2sets  RH1001/RH1002/RH1011/RH1013	10142-Rear Upper Susp. Arm 2sets  RH1001/RH1002/RH1011/RH1013	10143-Steering Arm 2sets  RH1001/RH1002/RH1011/RH1013	10144-Servo Linkage 1pc  RH1001/RH1002/RH1011/RH1013



Part List

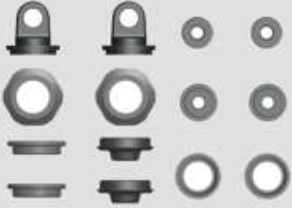10145-Wheel Hub 4pcs  RH1001/RH1002/RH1011/RH1013	10147-Servo Saver (EP) 1set  RH1011/RH1013	10019-Nylon front shock set 1set  Nylon Caps	10020-Nylon rear shock set 1set  Nylon Caps
10528-Nylon shock cap set 1set 	10151-Manifold Gasket 6pc  RH1001/RH1002	10154-Servo & Upper Plate Mounts 1set  RH1001/RH1002	10155-Chassis Plate 1pc  RH1001/RH1002
10156-Upper Plate 1pc  RH1001/RH1002	10157-Upper Steering Plate  RH1001/RH1002	10004-Fuel tank Set 1set  RH1001/RH1002	10158-Fuel Line 2pcs  RH1001/RH1002
10159-Front/Rear Chassis Brace  RH1001/RH1002	10160-Receiver Box 1set  RH1001/RH1002	85026-Switch Cover 2pcs  RH1001/RH1002	10161-Servo Horns  RH1001/RH1002
10162-Chassis Brace mount 1pc  RH1001/RH1002	10163-Stopper 6pcs  RH1001/RH1002	10164-Throttle Linkage 1set  RH1001/RH1002	10165-Central Dongbone F. 1pc  RH1001/RH1002
10166-Central Dongbone R. 1pc  RH1001/RH1002	10167-Air filter 1Set  RH1001/RH1002	10168-Tuned Pipe 1Set  RH1001/RH1002	10169-Silicone Coupler 1Set  RH1001/RH1002


Part List

P0014-FC18 Engine 1pc  RH1001/RH1002	85195-Zip Tie 6pcs  RH1001/RH1002/RH1011/RH1013	10170-Manifold 1Set  RH1001/RH1002	85035-Flywheel 1pc  RH1001/RH1002
85045-Clutch Shoes & Springs  RH1001/RH1002	85087-Clutch Nut 2pcs  RH1001/RH1002	10173-Engine mount 2pcs  RH1001/RH1002	10005-Central Transmission Complete 1Set (Single Speed)  RH1001
10006-Central Transmission Complete 1Set (Two Speed)  RH1002	10171-Clutch Bell (14T) 1pc  RH1001	10172-Clutch Bell (two speed) 1pc  RH1002	10174-Central Transmission Bulkheads 2pcs  RH1001/RH1002
10175-Brake Post 1Set  RH1001/RH1002	10176-Brake Set 1set  RH1001/RH1002	10177-Brake Cup 2pcs  RH1001/RH1002	10178-Single Speed Shaft w/pin  RH1001
10179-50T Gear (Single Speed) 1pc  RH1001	10180-Two Speed Clutch 1Set  RH1002	10181-Two Speed Shaft 1pc  RH1002	10182-50T Two Speed Gear 1pc  RH1002
10183-45T Two Speed Gear 1pc  RH1002	13091-Bumper 1Set  RH1069/RH1070	10969-Front Susp. Holders (Alloy) 1Set  RH1069/RH1070	10970-Rear Susp. Holders (Alloy) 1Set  RH1069/RH1070






Part List

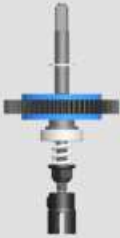10184-EP Chassis Plate 1pc  RH1011/RH1013	10185-Battery Cover (EP) 1pc  RH1011/RH1013	10715-Rear Spur Gear Cover (EP) 1pc  RH1011/RH1013	10187-Upper Plate (EP) 1pc  RH1011/RH1013
10188-Battery Post 2sets  RH1011/RH1013	10189-Post for Rear Spur Gear Cover 2pc  RH1011/RH1013	10190-Motor Mount (EP) 1pc  RH1011/RH1013	10191-Slipper Complete (EP) 1set  RH1011/RH1013
10192-Slipper Pad (EP) 2pc  RH1011/RH1013	10193-Slipper Gasket (EP) 2pc  RH1011/RH1013	10194-65T Spur Gear (EP) 1pc  RH1011/RH1013	10195 - Slipper Shaft (EP) 1pc  RH1011/RH1013
10196-Slipper Spring Bracket (EP) 1pc  RH1011/RH1013	10197-Slipper Spring (EP) 1pc  RH1011/RH1013	10199-Slipper Drive Cup 1pc  10200-BEARING BRACKET (EP) 1pc  RH1011/RH1013	10201-Pinion Gear 17T (EP) 1pc  RH1011/RH1013
10202-Center Drive Shaft (EP) 1pc  RH1011/RH1013	10210-Sway Bar 2Sets  RH1001/RH1002/RH1011/RH1013	10211-Wheel Complete 2sets  RH1001/RH1002/RH1011/RH1013	10212-Tyre & Foam Set 2sets  RH1001/RH1002/RH1011/RH1013
10213-Rim 2pcs  RH1001/RH1002/RH1011/RH1013	10589-Wheel Complete 2sets  RH1011M/RH1013M	10741-Wheel Complete 2sets  RH1069/RH1070	10742-Wheel Complete 2sets  RH1069/RH1070


Part List

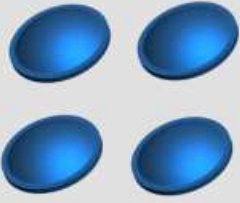85034-Body Clip(Medium Size) 6pcs 	85029-Body Clip(Small Size) 6pcs 	10214-Shock Ball End 6pcs 	10215-Servo Link Ball End 6pcs 
10216-Steering Linkage Ball End 6pcs 	10217-Rear Upper Linkage Ball End 6pcs 	10218-Sway Bar Fix Plate 6pcs 	10219-Sway Bar Holders 6pcs 
10220-Ball A 6pcs 	10221-Ball B 6pcs 	10222-Ball C 6pcs 	10223-Ball D 6pcs 
10224-Shock O-ring(Lower) 6pcs 	10225-Diff O-ring Seal 6pcs 	10226-Shock Seal Cover 4pcs 	10227-Tuned Pipe Seal & Fuel Tank Seal 1set 
10228-Pin ϕ 2*10 6pcs 	10229-Pin ϕ 2*11 6pcs 	10230-Hinge Pins(long & short) 2sets 	10231-One Way Bearing 3pcs 
10232-Ball Bearing 15*10*4 6pcs 	10233-Ball Bearing 10*5*4 6pcs 	10235-Ball Bearing 8*5*2.5 6pcs 	11068-C clip-7.3mm 4pc 

Part List

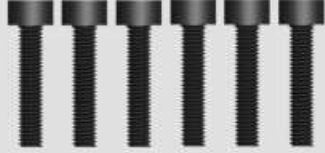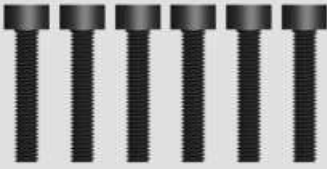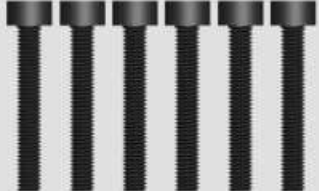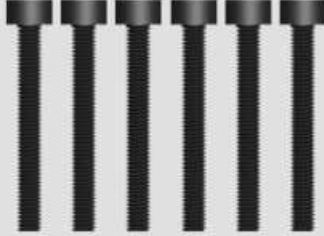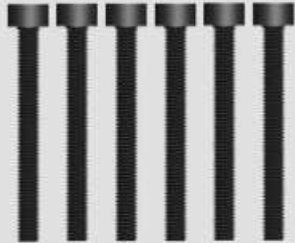RH5190-E clip-4mm 6pc 	10237-E clip-2.5mm 6pc 	RH5102-Nylon Lock Nut M3 6pc 	RH5103-Nylon Lock Nut-M4 6pc 
85148-Round Head Self Tapping Hex Screw 2*6 4pcs 	10238-Round Head Self Tapping Hex Screw 2*10 6pc 	85179-Round Head Self Tapping Hex Screw 3*15 8pc 	85144-Ring Self Tapping Screw 3*4 4pc 10256-Ring Self Tapping Screw 3*6 6pc 
10239-Round Head Self Tapping Hex Screw M3*6 6pc 	10240-Button Head Hex Screw M3*8 6pc 	10241-Button Head Hex Screw M3*10 6pc 	85184-Button Head Hex Screw M3*12 6pc 
10242-Button Head Hex Screw M3*14 6pc 	RH5116-Set Screw M3*3 6pc 	RH5117-Set Screw M4*4 6pc 	RH5118-Button Head Hex Screw M4*10 6pc 
RH5562-Cap Head Hex Screw M3*8 6pc 	10243-Cap Head Hex Screw M3*10 6pc 	85182-Cap Head Hex Screw M3*10 6pc 	10244-Cap Head Hex Screw M3*14 6pc 
85118-Cap Head Hex Screw M3*15 6pc 	10245-Cap Head Hex Screw M3*18 6pc 	85185-Cap Head Hex Screw M3*25 6pc 	10246-Cap Head Hex Screw M3*28 6p 

Part List

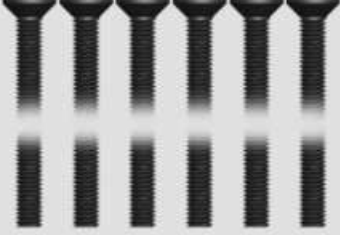10247-Flat Head Hex M3*8 6pc 	85125-Flat Head Hex Screw M3*10 8p 	10248-Flat Head Hex Screw M3*12 6p 	10249-Flat Head Hex Screw M3*14 6p 
85127-Flat Head Hex Screw M3*18 3p 	10250-Flat Head Hex Screw M3*20 6p 	10251-Flat Head Hex Screw M3*36 6p 	H0138 - MG4 Transmitter 1pc 
H0072 - Brushless ESC 1pc 	H0050-40A ESC 1pc 	H0028 - 3650 Brushless Motor 1pc 	H0029 - 550 Brushed Motor 1pc 
H0030 - Ni-MH 7.2V 1800mAh 1pc H0031 - Ni-MH 7.2V 3000mAh 1pc 	85274-Li-Po 3300mAh 7.4V 1pc 	H0011 - 3kg/cm Servo 1pc 	H0012 - Battery Case 1pc RH5189 - Receiver Switch 1pc 
10253 - 1/10 Charger CE 1pc 10254 - 1/10 Charger UL 1pc 10255 - 1/10 Charger BS 1pc 	R0306-MT Printed Body 1pc 	R0308-MT Printed Body 1pc 	R0355-MT Printed Body 1pc 
R0361-ST Printed Body 1pc 	R0362-ST Printed Body 1pc 		

Upgrade Parts List

10900-Chassis Plate (AL) 1Set 10901-Chassis Plate (AL+Carbon) 1Set  RH1011/RH1013	10902 - Front Shock Plate (Carbon) 1Set  RH1001/RH1002/RH1011/RH1013	10903 - Rear Shock Plate (Carbon) 1Set  RH1001/RH1002/RH1011/RH1013	10904-Upper Plate (Carbon) 1pc  RH1011/RH1013
10905-Battery Cover (Carbon) 1set  RH1011/RH1013	10906-Body Post (AL) 2pc  RH1011/RH1013	10907-Front Shocks (AL) 2pc  RH1001/RH1002/RH1011/RH1013	10908-Rear Shocks (AL) 2pc  RH1001/RH1002/RH1011/RH1013
10909 - Front Lower Susp. Arm (AL) 2pc  RH1001/RH1002/RH1011/RH1013	10910 -Rear Lower Susp. Arm (AL) 2pc  RH1001/RH1002/RH1011/RH1013	10911 - Steering Ackerman (AL) 1pc  RH1001/RH1002/RH1011/RH1013	10912 - Front Susp. Holders (AL) 1Set  RH1001/RH1002/RH1011/RH1013
10913 - Front & Rear Brace(AL) 1Set  RH1001/RH1002	10914 - Rear Susp. Holders (AL) 1Set  RH1001/RH1002/RH1011/RH1013	10915 - Rear Hub Carrier(AL) 2pc  RH1001/RH1002/RH1011/RH1013	10916-Front Top Plate (Carbon) 1pc  RH1001/RH1002
10917 - Steering Knuckle Arm (AL) 2Set  RH1001/RH1002/RH1011/RH1013	10918 - Wheel Hub (AL) 4pc  RH1001/RH1002/RH1011/RH1013	10919 - Upper Plate(AL) 1pc  RH1001/RH1002	10920 - Tuned Pipe(AL) 1Set  RH1001/RH1002
10921 - Chassis Brace mount (AL) 1pc  RH1001/RH1002	10922 - Wheelie Set 1Set  RH1001/RH1002/RH1011/RH1013	10923 - Alum Steering Arm 2pc  RH1001/RH1002/RH1011/RH1013	10924 - Alum Knuckle Arm 2pc  RH1001/RH1002/RH1011/RH1013
85265 - Heatsink 1pc  RH1011/RH1013			