

INSTRUCTION MANUAL

1/10 Scale 4WD RC Nitro & Electric Powered Car



Spirit N1/N2

RH1006 - N1 (Single Speed)

RH1007 - N2 (Two Speed)



Spirit EBD/EBL

RH1016 - EBD (Brushed)

RH1017 - EBL (Brushless)

V18.12

Index

Spirit N1/N2 Specification-----P2

Assembly Diagrams-----P3-P7

Shocks & Chassiss Assembly-----P3

Front & Rear Assembly-----P4

Engine & Central Tranmssion Assembly-----P5

Others-----P6

Swar bar upgrade-----P7

Assembly Steps-----P8

Spirit EBD/EBL Specification-----P9

Assembly Diagrams-----P10-P11

Chassiss & Motor & Steering Assemby-----P10

Swar bar upgrade-----P11

Assembly Steps-----P12

Part List-----P13-P21

Part List-----P13-P20

Upgrade Part List-----P21

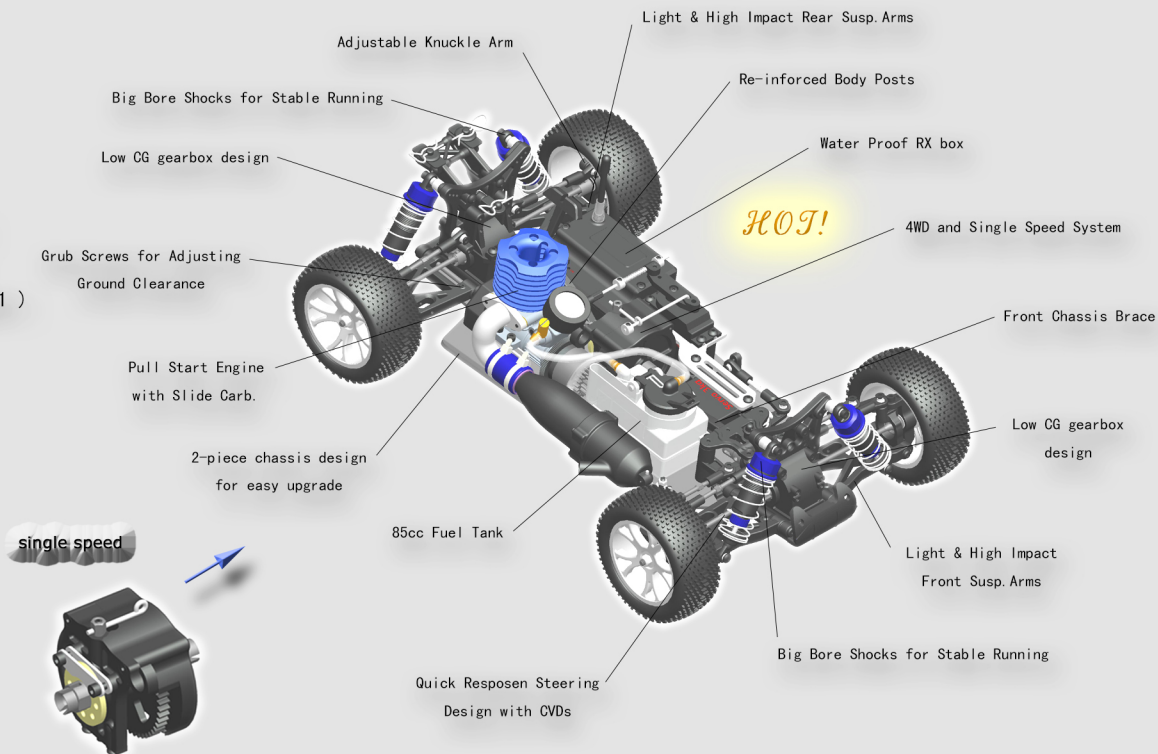
RH1006 SPIRIT N1 (Single Speed)

RH1006 Specs. :

- 1、Length: 415 mm
- 2、Width: 255 mm
- 3、Height: 142 mm
- 4、Wheelbase: 275/280 mm
- 5、Gear Ratio: 9.1:1
- 6、Tyre: $\phi 88 \times 34$ mm (FRONT)
 $\phi 88 \times 39$ mm (REAR)
- 7、Weight: 1840 g (SPIRIT N1)

Standard Equipments:

- 1、Steering Servo: 3kg/cm
- 2、Throttle Servo: 3kg/cm
- 3、Engine: G0.18 or SH.18
- 4、Radio: 2CH AM




RH1007 SPIRIT N2 (Two Speed)

RH1007 Specs. :

- 1、Length: 415 mm
- 2、Width: 255 mm
- 3、Height: 142 mm
- 4、Wheelbase: 275/280 mm
- 5、Gear Ratio: 6.1:1 (H)
9.1:1 (L)
- 6、Tyre: $\phi 88 \times 34$ mm (FRONT)
 $\phi 88 \times 39$ mm (REAR)
- 7、Weight: 1900 g (SPIRIT N2)


Standard Equipments:

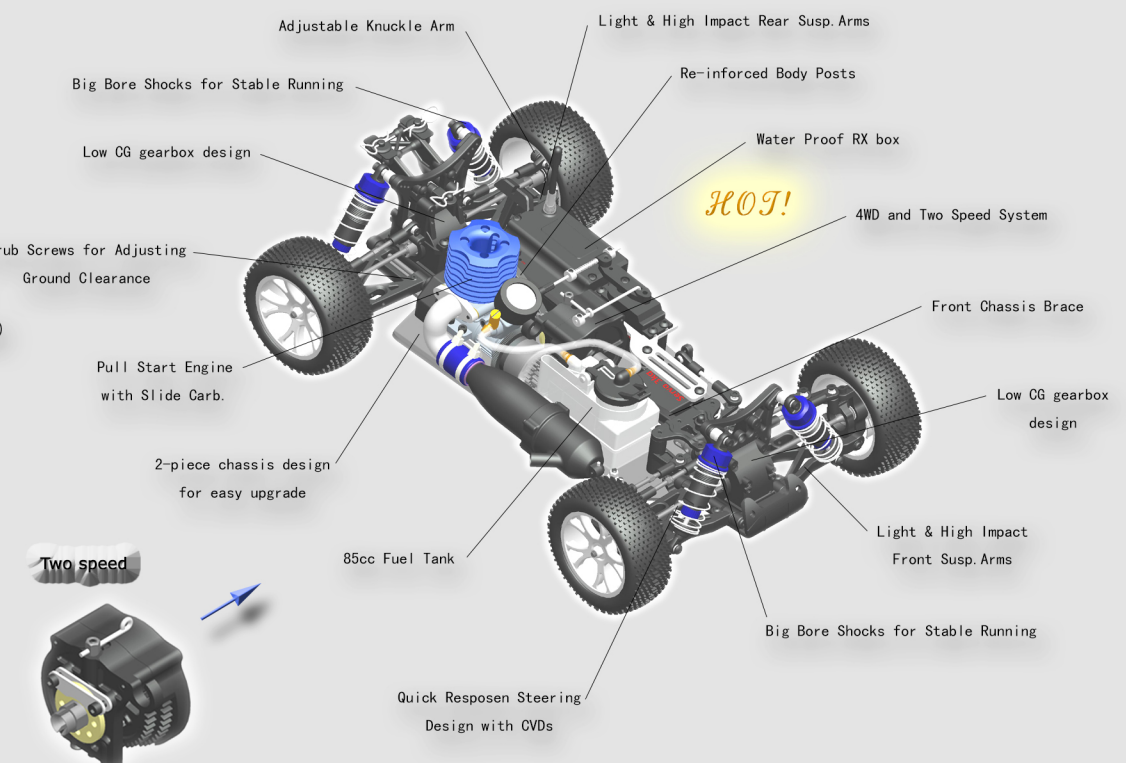- 1、Steering Servo: 3kg/cm
- 2、Throttle Servo: 3kg/cm
- 3、Engine: G0.18 or SH.18
- 4、Radio: 2CH AM




FRONT & REAR SHOCK ASSEMBLY

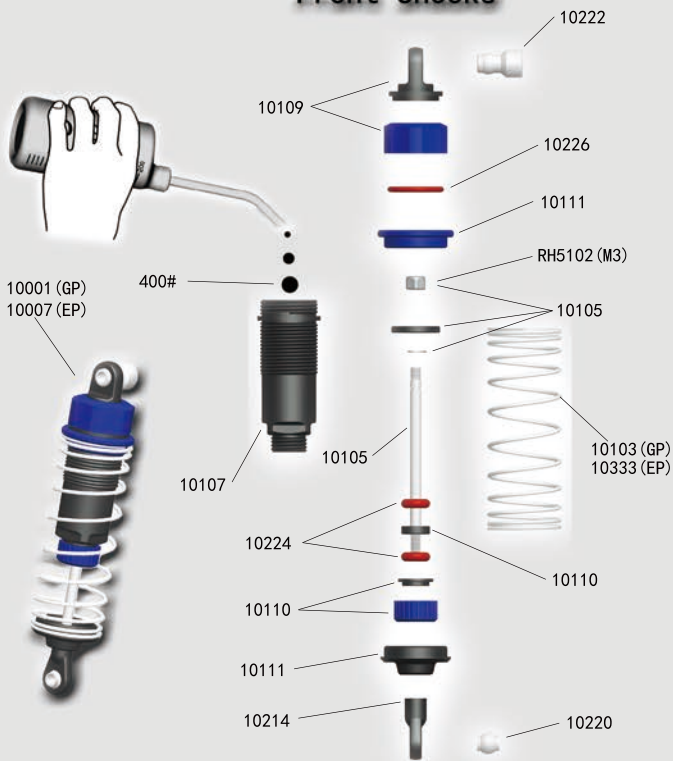Front Shocks




(Dia. 3-1)

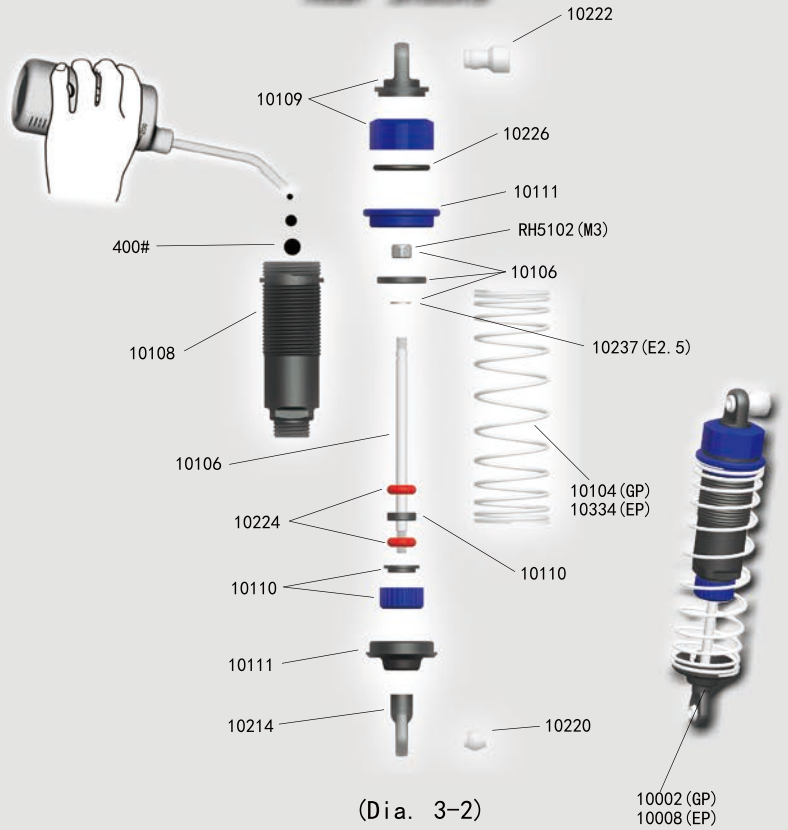Rear Shocks



(Dia. 3-2)

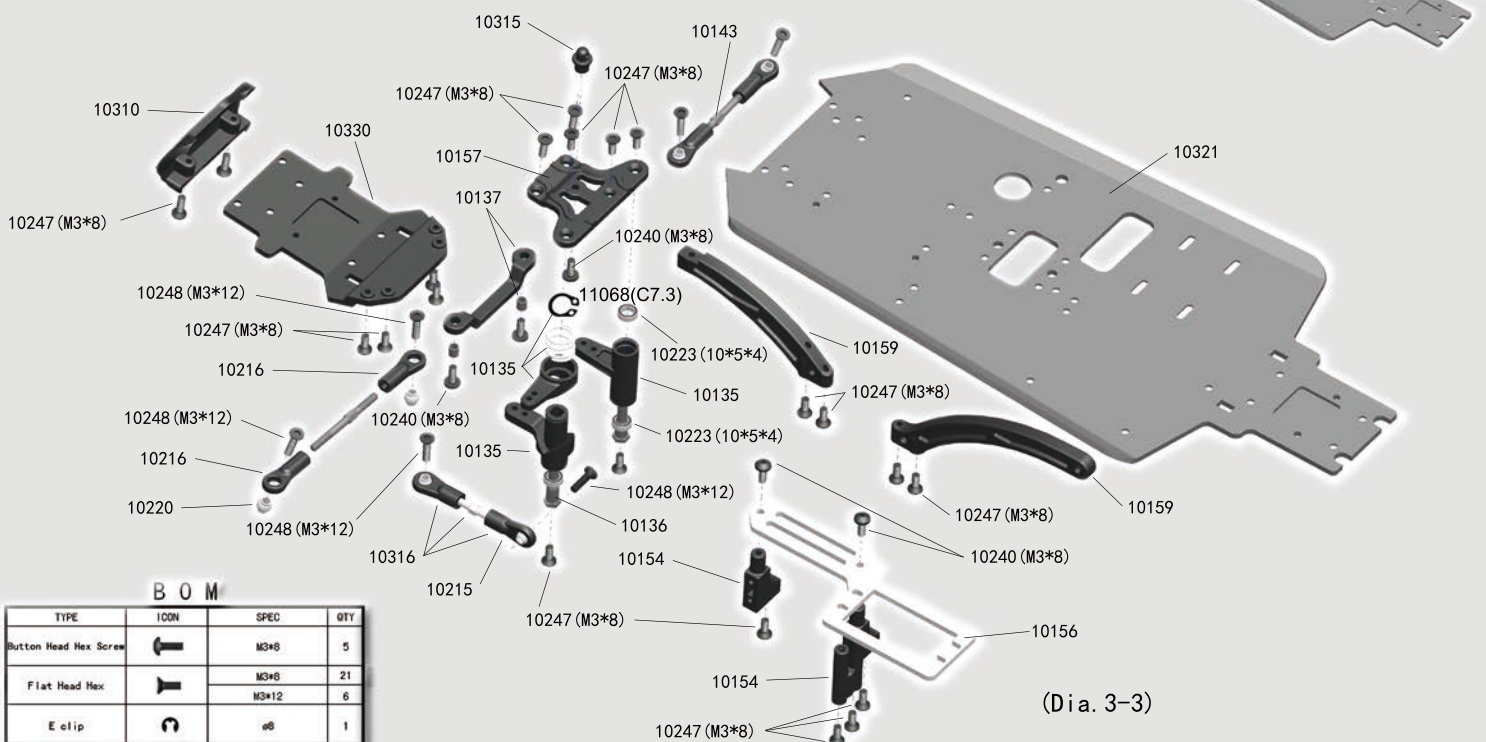
Chassis Assembly




(Dia. 3-3)

B O M


TYPE	ICON	SPEC	QTY
Round Head Self Tapping Hex Screw		2*10	4
Button Head Hex Screw		M3*12	2
Cap Head Hex Screw		M3*8	4
		M3*18	2
		M3*10	10
		M3*12	3
Flat Head Hex		M3*14	4
		M3*18	2
		M3*36	2
Set Screw		M3*3	2
		M4*4	1
		M4*10	2
Ring Self Tapping Screw		3*4	2
Washer		ø6*ø3.1*0.2	2
Nylon Lock Nut		M3	2
E clip		ø2.5	5
O'Ring		ø8.05*ø4.95*ø1.55	4
		ø8*ø3*ø2.5	4
		ø15.6*ø12.6*ø1.5	2
Ball Bearing		ø15*ø10*4	2
		ø10*ø5*4	6

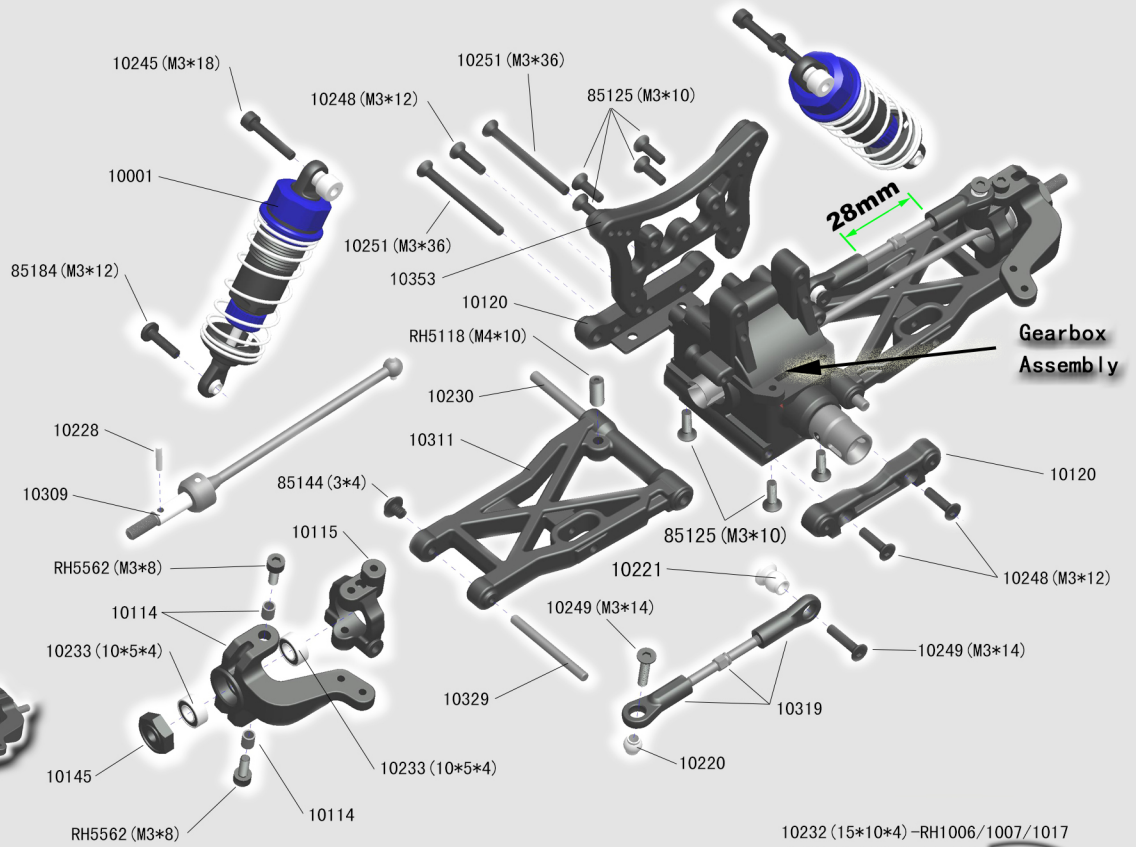


Front Assembly

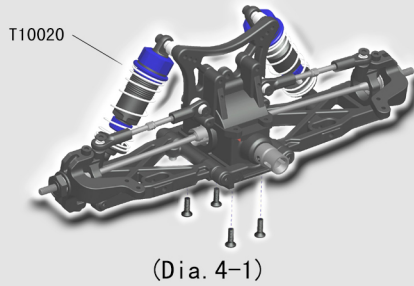


Gearbox Assembly

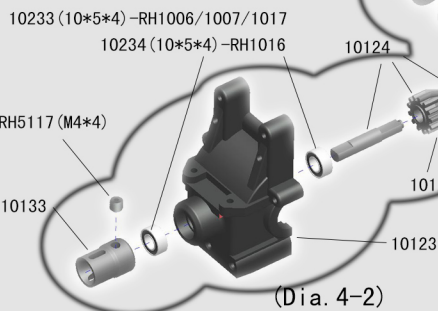


Diff Box

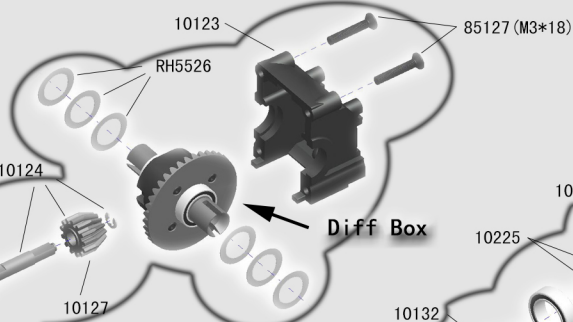

Diff. Box

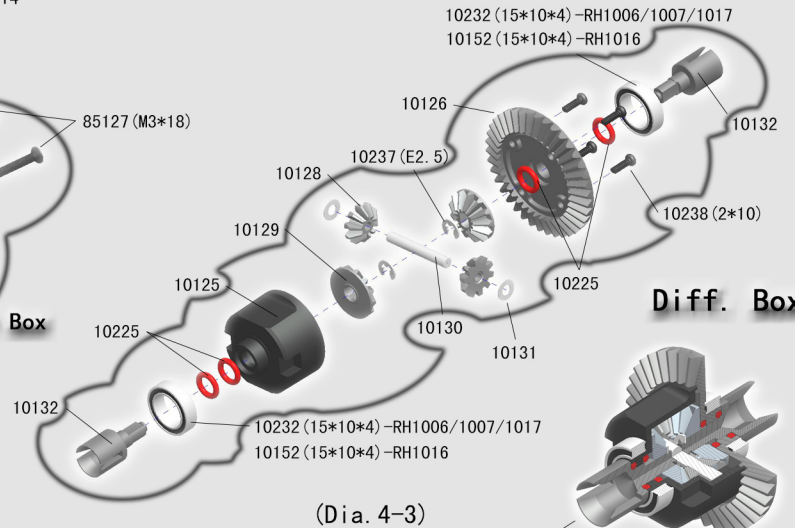


Rear Assmely

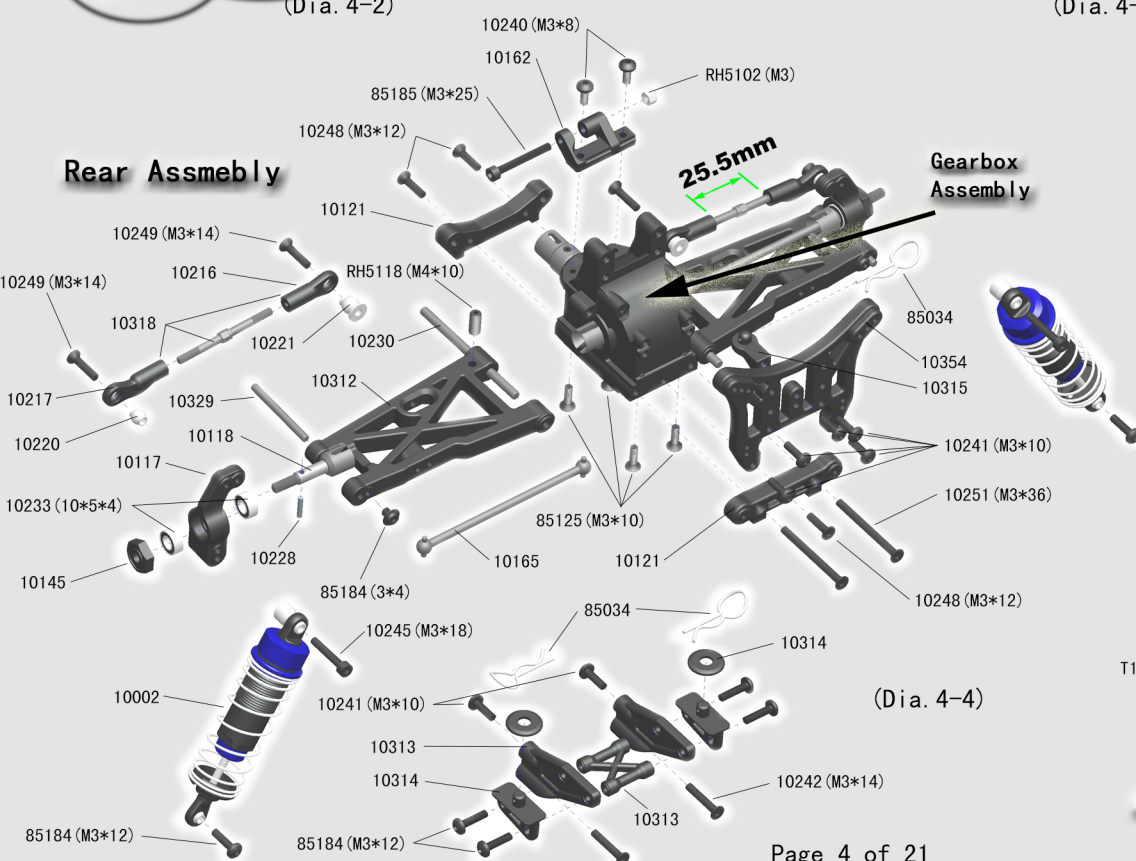


Gearbox Assembly

B O M


TYPE	ICON	SPEC	QTY
Round Head Self Tapping Hex Screw		2*10	4
Button Head Hex Screw		M3*8	2
		M3*10	7
		M3*12	6
		M3*18	2
Cap Head Hex Screw		M3*25	1
		M3*10	4
		M3*12	3
		M3*14	4
		M3*18	4
		M3*36	2
		M4*4	1
Set Screw		M4*10	2
Ring Self Tapping Screw		3*4	2
Washer		ø6*ø3.1*0.2	2
Nylon Lock Nut		M3	3
E clip		ø2.5	5
O'Ring		ø8.05*ø4.95*ø1.55	4
		ø8*ø3*ø2.5	4
		ø15.6*ø12.6*ø1.5	2
Ball Bearing		ø15*ø10*4	2
		ø10*ø5*4	6

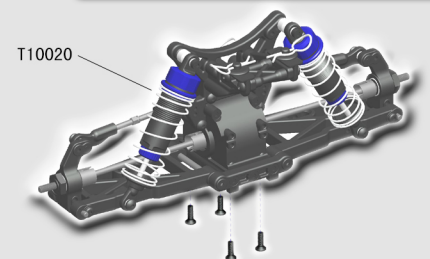


TYPE	ICON	SPEC	QTY
Round Head Self Tapping Hex Screw		2*6	4
Button Head Hex Screw		M3*8	4
Cap Head Hex Screw		M3*15	2
		M3*28	5
Flat Head Hex		M3*10	1
Set Screw		M4*4	1
Washer		ø6*ø3.1*0.2	1
Nylon Lock Nut		M3	5
O'Ring		Ø31* Ø2	1
Ball Bearing		ø10*ø24	2




TYPE	ICON	SPEC	QTY
Cap Head Hex Screw		M3*10	2
Flat Head Hex		M3*8	4
		M3*20	2
Set Screw		M3*3	1
		M4*4	2
E clip		#4	3
Ball Bearing		#10x5x4	2



TYPE	ICON	SPEC	QTY
Cap Head Hex Screw		M3*10	2
Flat Head Hex		M3*8	4
		M3*20	2
Set Screw		M3*3	1
		M4*4	4
E clip		ø4	1
One Way Bearing		Ø12*Ø6.3*8.4	1
Ball Bearing		ø10*ø5*4	3




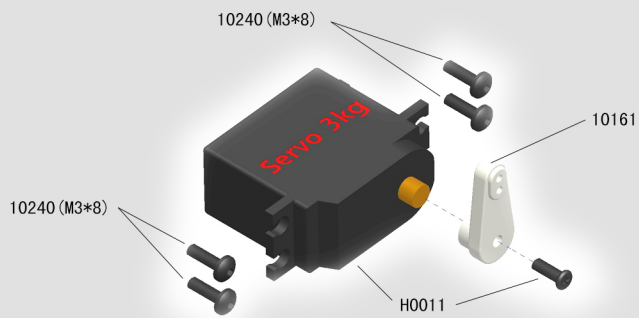


Steering Servo



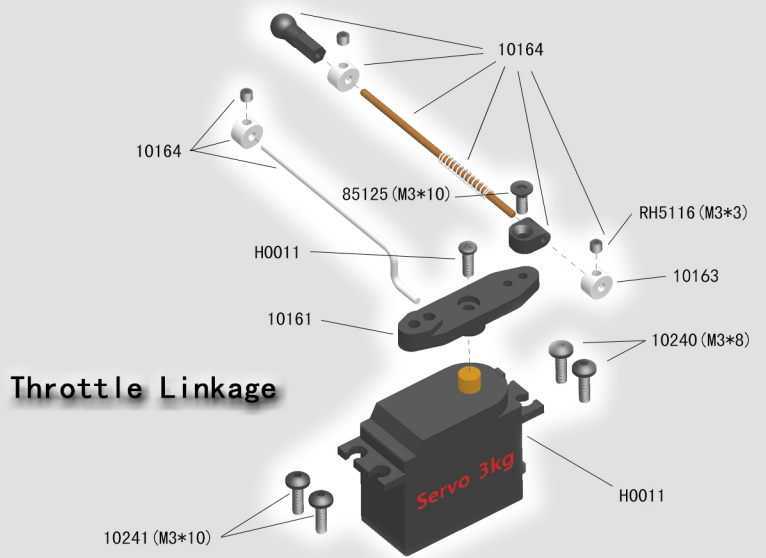
(Dia. 6-1)



Throttle Linkage

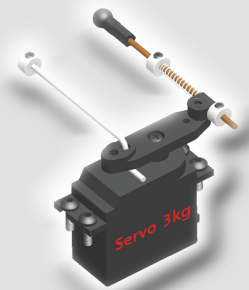

(Dia. 6-2)

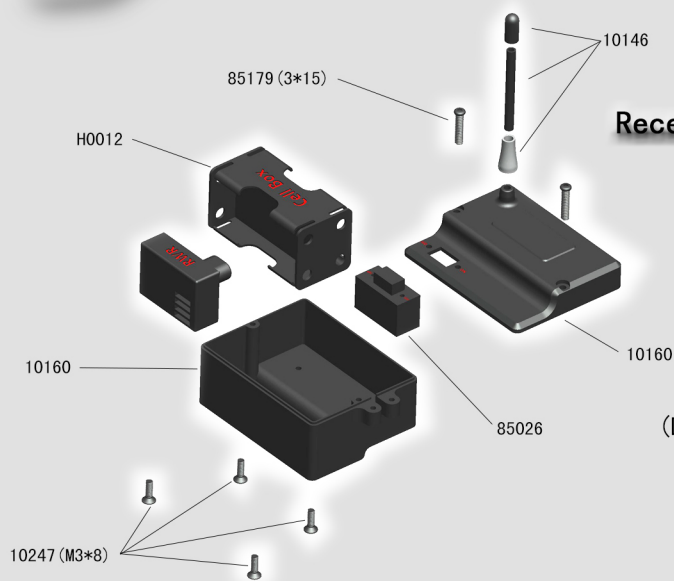


Receiver Assembly




(Dia. 6-3)

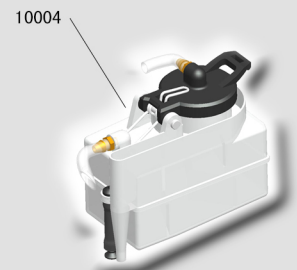Fuel Tank




(Dia. 6-6)

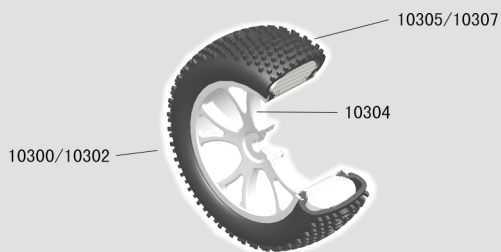Front Tyres




(Dia. 6-4)

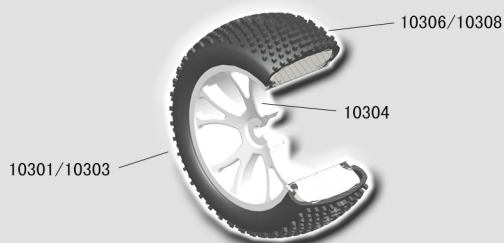Rear Tyres




(Dia. 6-5)

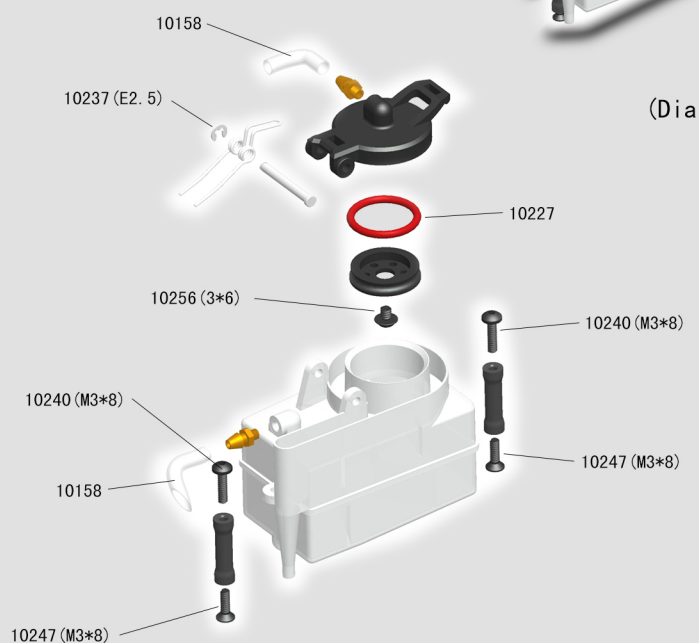


Spirit N1 and N2 are almost in structure but the central transmission(Diagram 5-2 and 5-3).

For hobbyists, we have optional front and rear sway bar for upgrade,which adds higer racing performance,

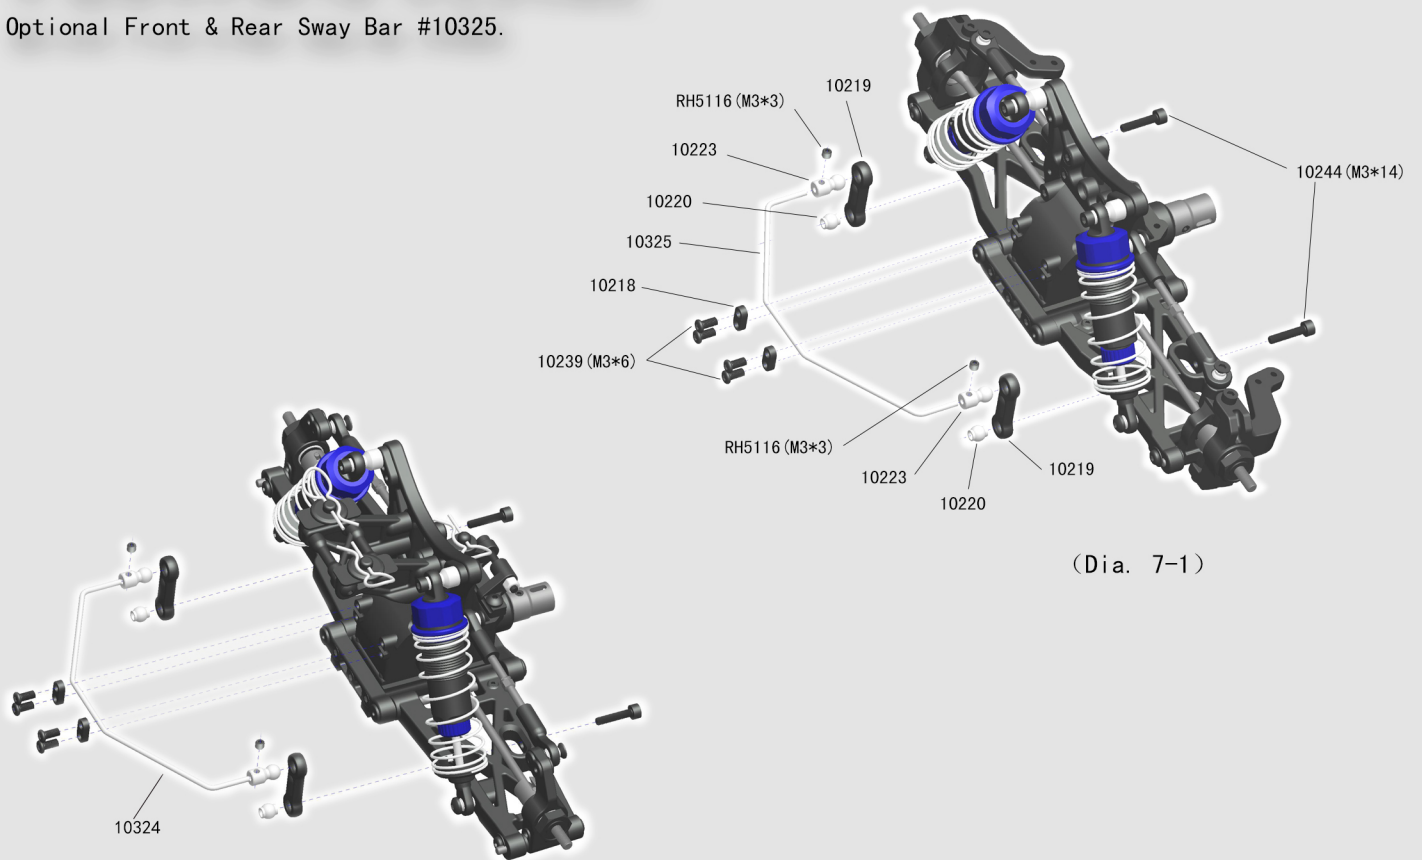Optional Front & Rear Sway Bar #10325.




(Dia. 7-2)

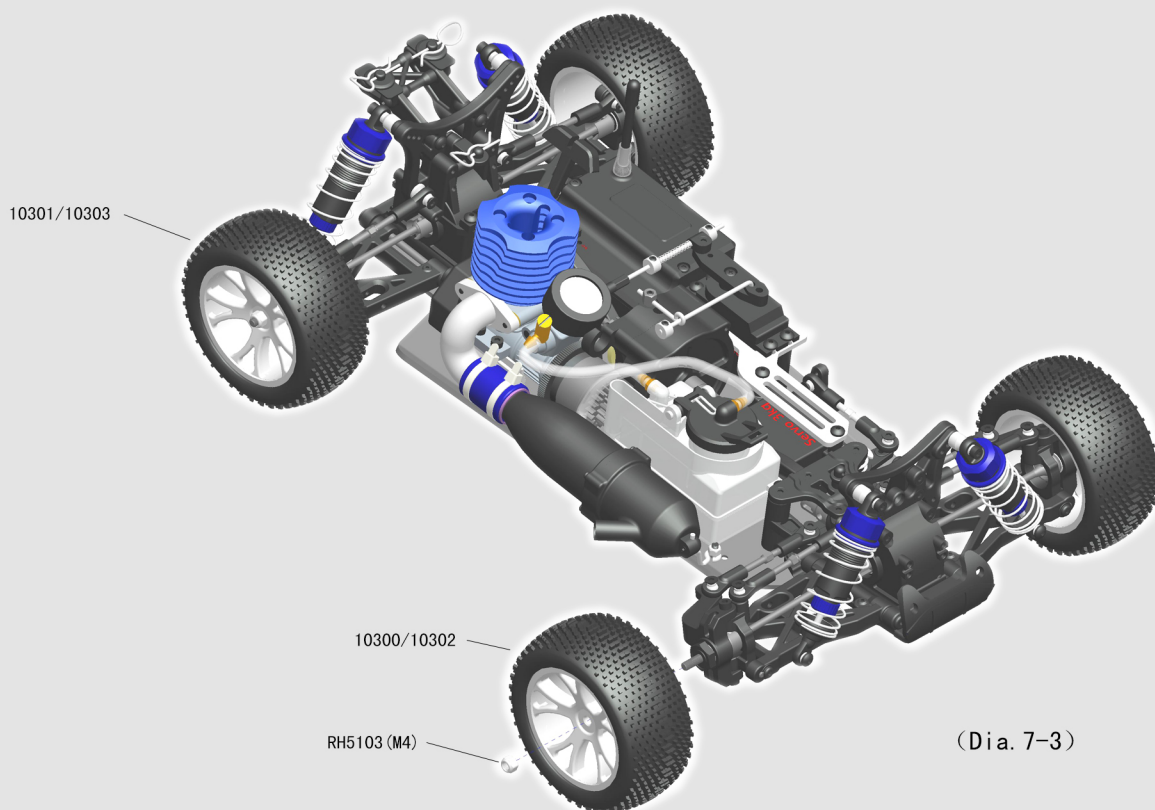


(Dia. 7-3)

Assembly Steps:

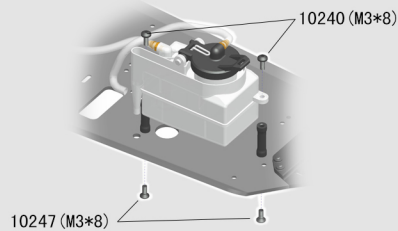
1. Fasten the fuel tank posts to the chassis, then the fuel tank assembly. (See Dia. 6-6)



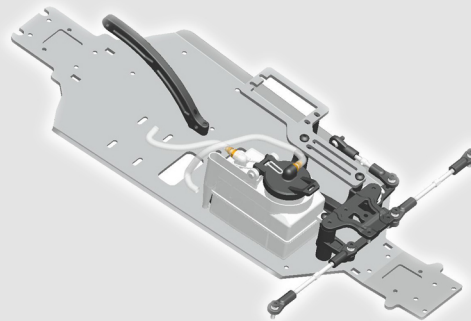
2. Assemble Chassis. (See Dia. 3-3)



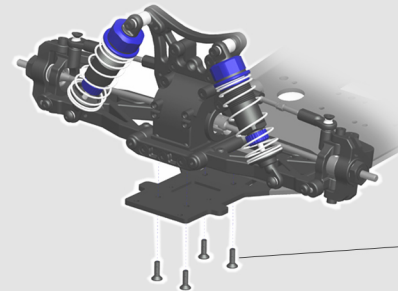
3. Assemble the front assembly to the chassis. (See Dia. 4-1)



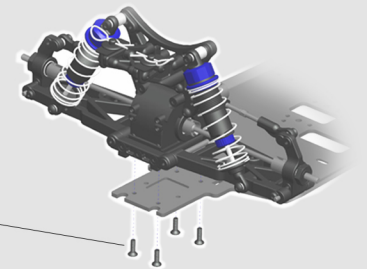
4. Assemble the rear assembly to the chassis. (See Dia. 4-4)



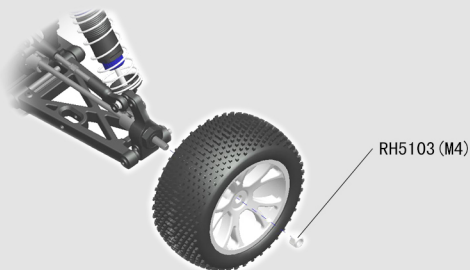
5. Tighten the wheels. (See Dia. 6-4 or 6-5)




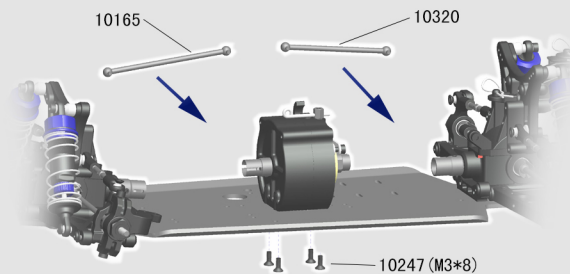
6. Assemble central transmission and rear central drive shaft to the chassis. (See Dia. 5-2 or 5-3)



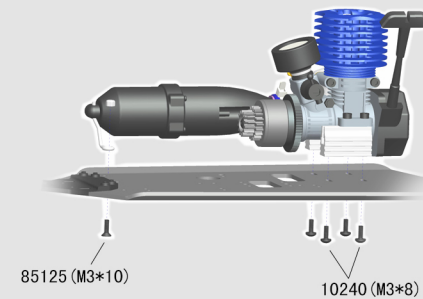7. Tighten the engine assembly to the chassis. (See Dia. 5-1)



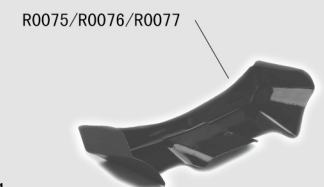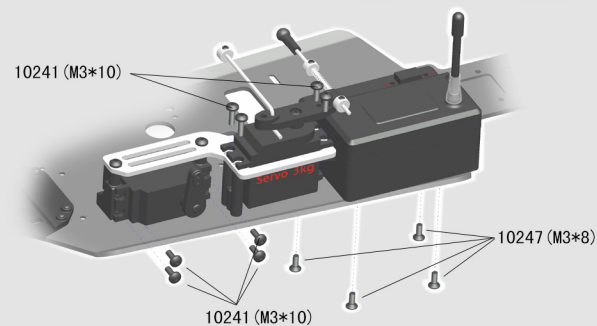8. Finally assemble the receiver box assembly, throttle/steering servos assembly to the chassis. Setup the radio system and then assemble the cutted body to the body posts. (See Dia. 6-1, 6-2, 6-3)




RH1016 SPIRIT EBD (Brushed)

RH1017 SPIRIT EBL (Brushless)

Specs. :

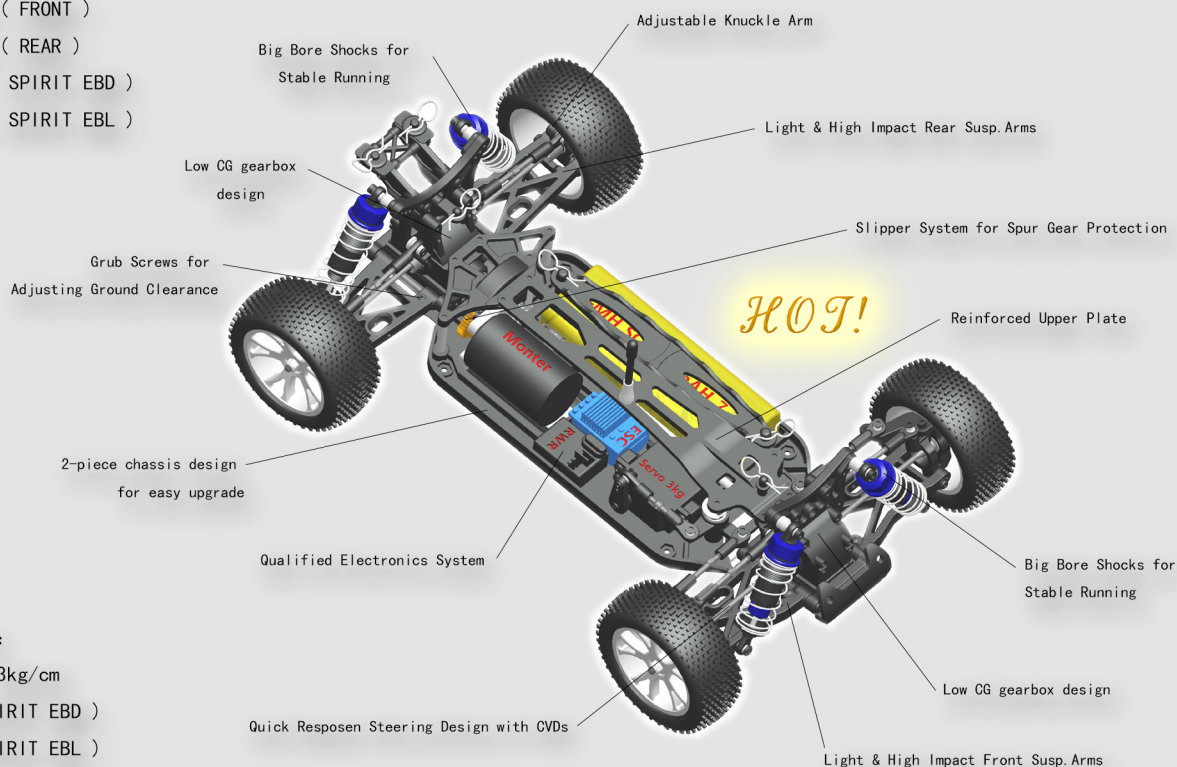- 1、Length: 415 mm
- 2、Width: 255 mm
- 3、Height: 142 mm
- 4、Wheelbase: 275/280 mm
- 5、Gear Ratio: 8.3:1
- 6、Tyre: $\varnothing 88 \times 34$ mm (FRONT)
 $\varnothing 88 \times 39$ mm (REAR)
- 7、Weight: 1710g (SPIRIT EBD)
1650g (SPIRIT EBL)




Standard Equipments:

- 1、Steering Servo: 3kg/cm
- 2、Motor: 550 (SPIRIT EBD)
3650 (SPIRIT EBL)
- 3、ESC: 300A (SPIRIT EBD)
60A (SPIRIT EBL)
- 4、Battery: Ni-MH SC1800mAh 7.2V (SPIRIT EBD)
Li-Po 2700mAh 7.4V $\leq 25^{\circ}\text{C}$ (SPIRIT EBL)
- 5、RADIO: 2CH A M (SPIRIT EBD)
2CH 2.4GHz (SPIRIT EBL)

SPIRIT EBL Brushless System Set:



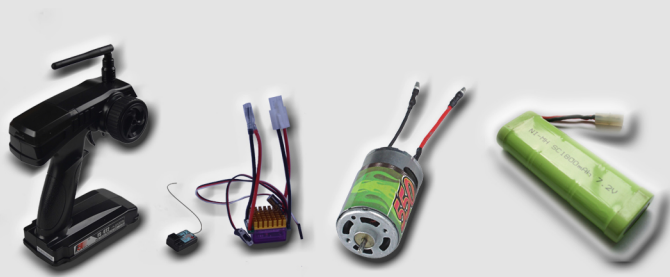SPIRIT EBD Brushed System Set:



Attention: SPIRIT EBD and SPIRIT EBL are only different in ESC, motor battery, charger and radio.

[illegible]

T10024/T10025


(Dia. 7-2)

10233

10127

10237 (E2.5)

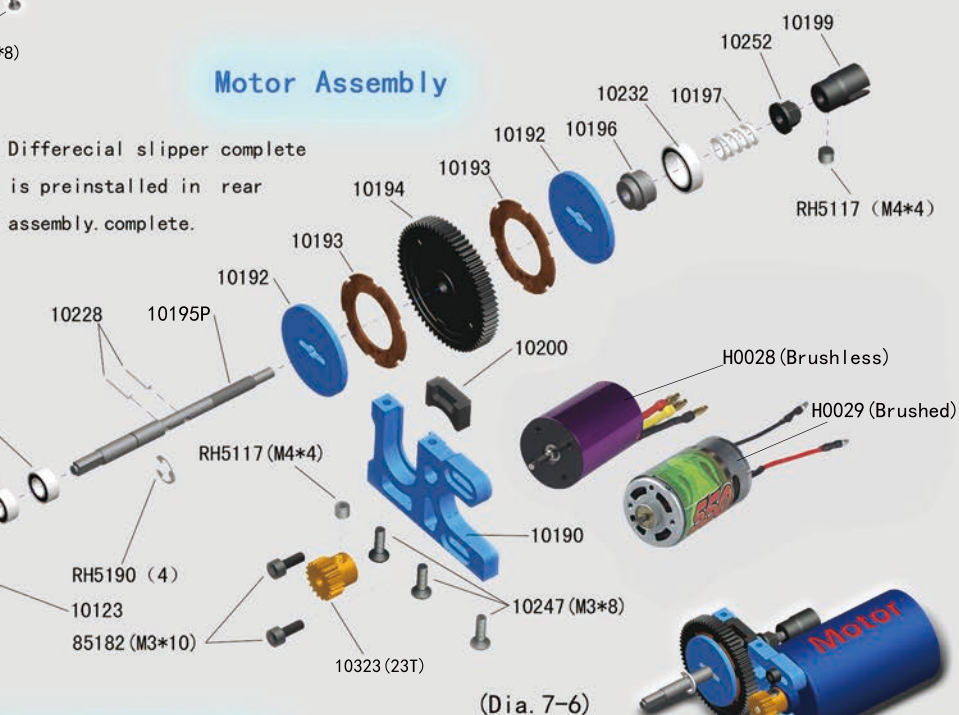Differential slipper complete
is preinstalled in rear
assembly. complete.



The image shows two electronic components. On the left is the H0026 (SPIRIT EBL), which is a small black PCB with a green potentiometer, a black fan, and several colored wires (red, blue, black, green). On the right is the H0050 (SPIRIT EBD), which is a purple component with a multi-pin connector and two blue ribbon cables. Below the components is the text (Dia. 10-3).


H0068RX

(Dia. 10-5)

Spirit EBD and EBL is almost same but in electronics. Spirit EBD comes with brushed system and Spirit EBL with brushless system. For hobbyists, we have optional front and rear sway bar for upgrade, which adds higher racing performance.

Other assemblies please refer to Page 10 and Spirit N1 instructions,


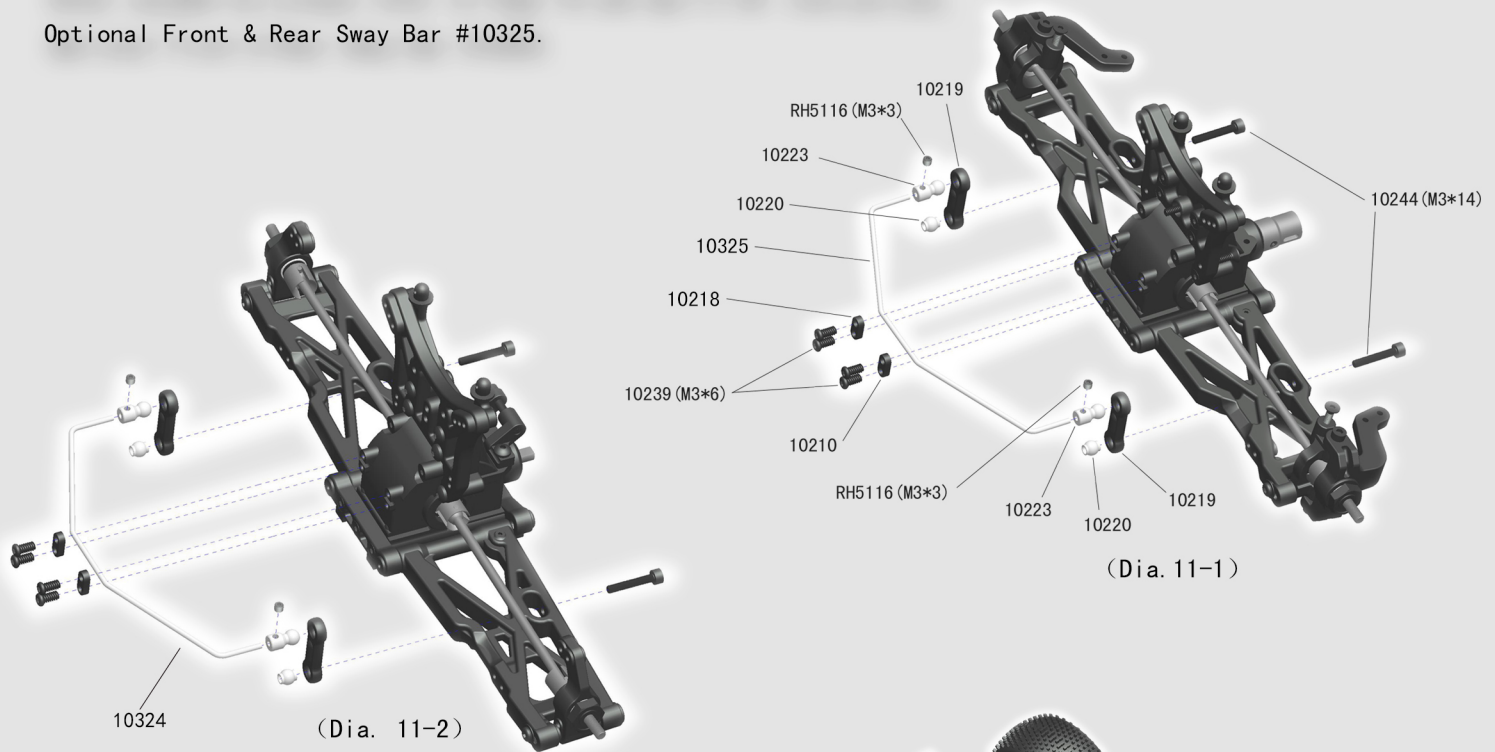
Optional Front & Rear Sway Bar #10325.



Wheelie Pack:


In order to increase the stability operation under top speed for "Super Player", who plays the car with 3S lipo and running cock-up, we design a wheelie system for option,

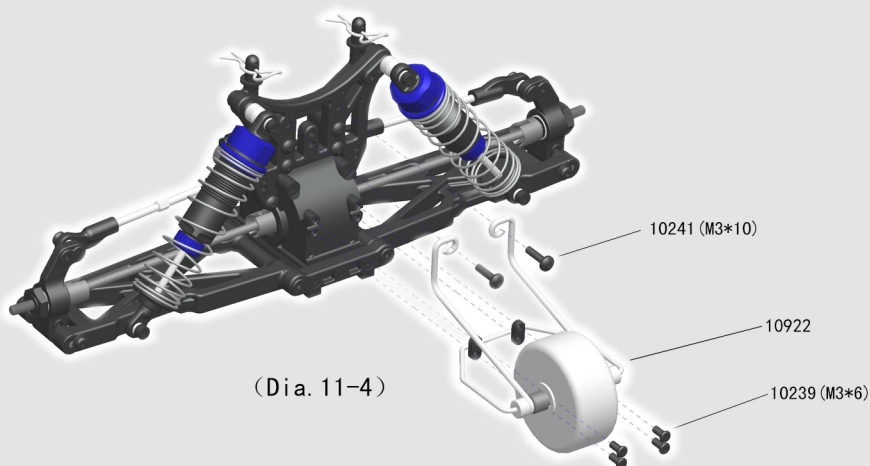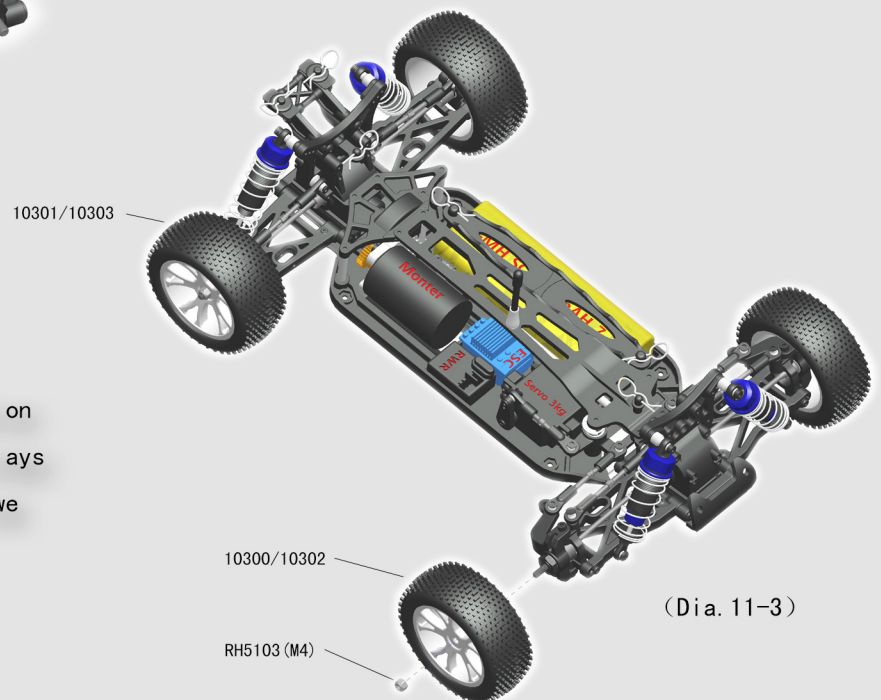Optional Front & Rear Sway Bar #10922.




ASSEMBLY STEPS:

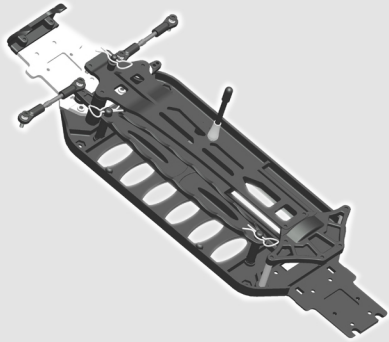
1、Assembly center chassis part (See Dia. 10-1)



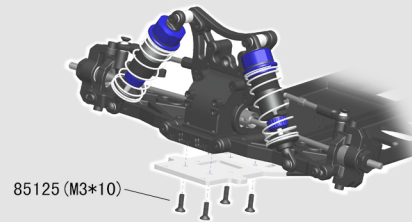
2、Assemble front assembly to chassis front. (See Dia. 4-1)



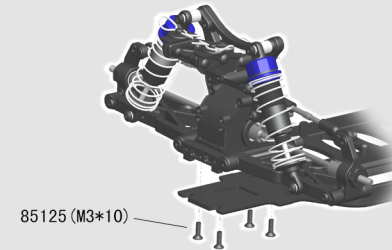
3、Assemble rear assembly to chassis rear part. (See Dia. 4-4)




5、Mount the wheels.
(See Dia. 6-4, 6-5)

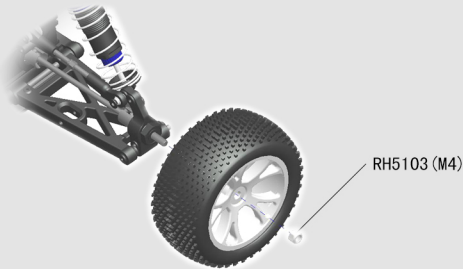

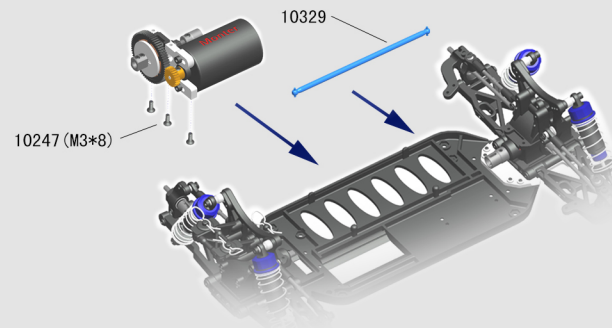6、Mount the motor assembly and central drive shaft. (See Dia. 10-6)




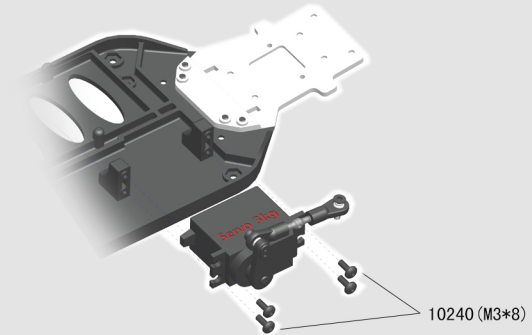7、Assemble steering servo and linkage. (See Dia. 10-4)



8、Assemble ESC, receiver, battery and connect them to setup. (See Dia. 10-3, 10-5)

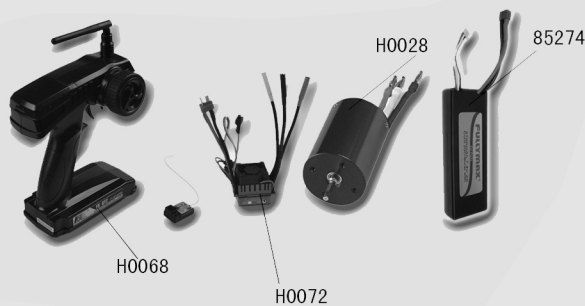
Brushless System:




Brushed system:













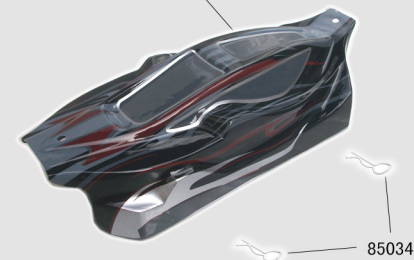
R0069/R0072/R0073








R0075/R0076/R0077

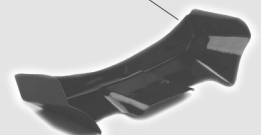







Common Part List

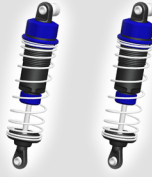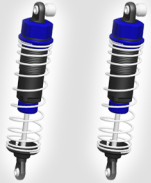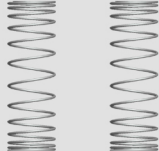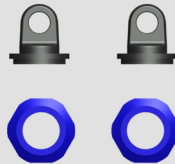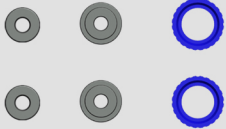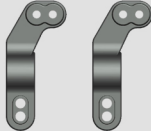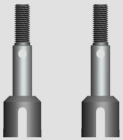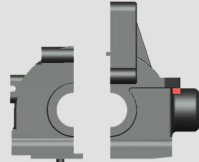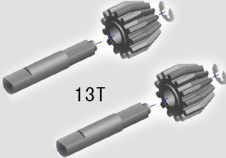10353 - Front Shock Tower 1pc  RH1006/RH1007/RH1016/RH1017	10354 -Rear Shock Tower 1pc  RH1006/RH1007/RH1016/RH1017	10001-Front Shocks 2pc (Alum Caps) 10019-Front Shocks 2pc (Nylon Caps)  RH1006/RH1007/RH1016/RH1017	10002-Rear shock tower 2pc(Alum caps) 10020-Rear shock tower 2pc(Nylon caps)  RH1006/RH1007/RH1016/RH1017
10103-Front Shock Spring 2pc  RH1006/RH1007/RH1016/RH1017	10104-Rear Shock Spring 2pc  RH1006/RH1007/RH1016/RH1017	10105-Front Shock Shaft & Piston Set 2sets  RH1006/RH1007/RH1016/RH1017	10106-Rear Shock Shaft & Piston Set 2sets  RH1006/RH1007/RH1016/RH1017
10107-Front Shock Body 2pc  RH1006/RH1007/RH1016/RH1017	10108-Rear Shock body 2pc  RH1006/RH1007/RH1016/RH1017	10109-Shock Upper Cap 2sets  RH1006/RH1007/RH1016/RH1017	10110-Shock Lower Caps 2sets  RH1006/RH1007/RH1016/RH1017
10111-Shock Lower holder & Adjust Ring 2sets  RH1006/RH1007/RH1016/RH1017	10114-Steering Knuckle Arm 1set  RH1006/RH1007/RH1016/RH1017	10115-Uprights 2pc  RH1006/RH1007/RH1016/RH1017	10117-Rear Hub Carrier 2pc  RH1006/RH1007/RH1016/RH1017
10118-Rear Drive Shaft 2pc  RH1006/RH1007/RH1016/RH1017	10120-Front Susp. Holders 2pc  RH1006/RH1007/RH1016/RH1017	10121-Rear Susp. Holders 2pc  RH1006/RH1007/RH1016/RH1017	10123-Gearbox Housing Set 2pcs  RH1006/RH1007/RH1016/RH1017
RH5526-Diff 16T Gear Washer 6pcs  RH1006/RH1007/RH1016/RH1017	10124-Diff. Drive Gear w/pin 2sets  RH1006/RH1007/RH1016/RH1017	10003-Diff Gearbox Set 1set  RH1006/RH1007/RH1016/RH1017	10125-Diff Case 2pcs  RH1006/RH1007/RH1016/RH1017

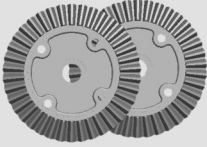


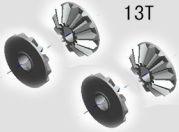

Common Part List

10126-Diff Drive Spur Gear 2pcs  38T RH1006/RH1007/RH1016/RH1017	10127-Diff Drive Gear 2pcs  13T RH1006/RH1007/RH1016/RH1017	10128-Diff Bevel Gear S. 4pcs  10T RH1006/RH1007/RH1016/RH1017	10129-Diff Bevel Gear B. 4pcs  13T RH1006/RH1007/RH1016/RH1017
10130-Diff Pin 2pcs  RH1006/RH1007/RH1016/RH1017	10131-Washer 6pcs  RH1006/RH1007/RH1016/RH1017	10132-Diff Drive Cup 4pcs  RH1006/RH1007/RH1016/RH1017	10133-Center Coupler 3pcs  RH1006/RH1007/RH1016/RH1017
10135-Servo Saver (GP) 1set  RH1006/RH1007	10136-Servo Saver Post 2pcs  RH1006/RH1007/RH1016/RH1017	10137-Steering Ackerman  RH1006/RH1007/RH1016/RH1017	10145-Wheel Hub 4pcs  RH1006/RH1007/RH1016/RH1017
10146-Antenna Pipe Set 2sets  RH1006/RH1007/RH1016/RH1017	10147-Servo Saver (EP) 1set  RH1016/RH1017	10300-Front buggy tyre set 2sets  RH1006/RH1007/RH1016/RH1017	10301-Rear buggy tyre set 2sets  RH1006/RH1007/RH1016/RH1017
10302-Front buggy tyre set 2sets  RH1006/RH1007/RH1016/RH1017	10303-Rear buggy tyre set 2sets  RH1006/RH1007/RH1016/RH1017	10304-Front Rim 2pcs 10332-Rear Rim 2pcs  RH1006/RH1007/RH1016/RH1017	10305-Front tyres & inner foams 2sets  RH1006/RH1007/RH1016/RH1017
10306-Rear tyres & inner foams 2sets  RH1006/RH1007/RH1016/RH1017	10307-Front tyres & inner foams 2sets  RH1006/RH1007/RH1016/RH1017	10308-Rear tyres & inner foams 2sets  RH1006/RH1007/RH1016/RH1017	10309-Front CVD 2sets  RH1006/RH1007/RH1016/RH1017




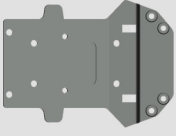
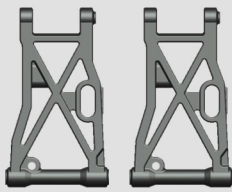
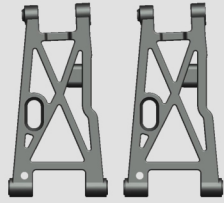

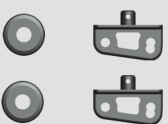

Part List

10330-Chassis Front Part 1pc  RH1006/RH1007/RH1016/RH1017	10310-Front Bumper buggy 1pc  RH1006/RH1007/RH1016/RH1017	10311-Front Lower Susp. Arm 2pc  RH1006/RH1007/RH1016/RH1017	10312-Rear Lower Susp. Arm 2pc  RH1006/RH1007/RH1016/RH1017
10313-Wing Bracket 1set  RH1006/RH1007/RH1016/RH1017	10314-Wing Holder 1set  RH1006/RH1007/RH1016/RH1017	10315-Buggy Body Mount 1set  RH1006/RH1007/RH1016/RH1017	10316-Servo Linkage 1pc  10317-Front Upper Susp. Arm 2sets  RH1006/RH1007/RH1016/RH1017
10318-Rear Upper Susp. Arm 2sets  RH1006/RH1007/RH1016/RH1017	10319-Steering Arm 2sets  RH1006/RH1007/RH1016/RH1017	10320-Central Dongbone R. 1pc  RH1006/RH1007/RH1016/RH1017	10321-Chassis Plate Rear Part 1pc  RH1006/RH1007
10151-Manifold Gasket 6pc  RH1006/RH1007	10152-Metal Bushing 15*10*4 6pc 	10153-Metal Bushing 8*5*2.5 6pc 	10154-Servo & Upper Plate Mounts 1set  RH1006/RH1007
10156-Upper Plate 1pc  RH1006/RH1007	10157-Upper Steering Plate  RH1006/RH1007	10004-Fuel tank Set 1set  RH1006/RH1007	10158-Fuel Line 2pcs  RH1006/RH1007
10159-Front/Rear Chassis Brace  RH1006/RH1007	10160-Receiver Box 1set  RH1006/RH1007	85026-Switch Cover 2pcs  RH1006/RH1007	10161-Servo Horns  RH1006/RH1007











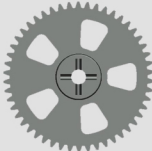
Part List

10162-Chassis Brace mount 1pc  RH1006/RH1007	10163-Stopper 6pcs  RH1006/RH1007	10164-Throttle Linkage 1set  RH1006/RH1007	10165-Central Dongbone F. 1pc  RH1006/RH1007
P0010-G0.18 engine 1pc P0011-SH.18 Engine 1pc  RH1006/RH1007	10167-Air filter 1Set  RH1006/RH1007	10168-Tuned Pipe 1Set  RH1006/RH1007	10169-Silicone Coupler 1Set  RH1006/RH1007
85195-Zip Tie 6pcs  RH1001/RH1002/RH1011/RH1013	10170-Manifold 1Set  RH1006/RH1007	85035-Flywheel 1pc  RH1006/RH1007	85087-Clutch Nut 2pcs  RH1006/RH1007
85045-Clutch Shoes & Springs  RH1006/RH1007	10173-Engine mount 2pcs  RH1006/RH1007	10331-Clutch Bell (16T) 1pc  RH1006	10322-Clutch Bell (21T) 1pc  RH1007
10005-Central Transmission Complete 1Set (Single Speed)  RH1006	10174-Central Transmission Bulkheads 2pcs  RH1006/RH1007	10175-Brake Post 1Set  RH1006/RH1007	10176-Brake Set 1set  RH1006/RH1007
10177-Brake Cup 2pcs  RH1006/RH1007	10178-Single Speed Shaft w/pin  RH1006	10179-50T Gear (Single Speed) 1pc  RH1006	10006-Central Transmission Complete 1Set (Two Speed)  RH1007

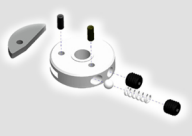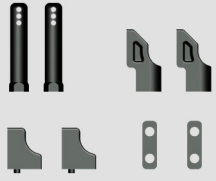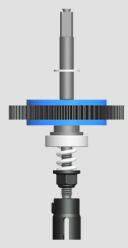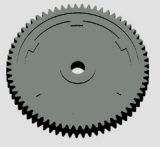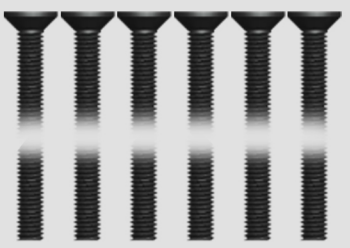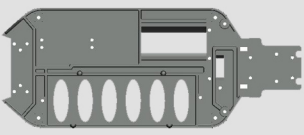
Part List

10180-Two Speed Clutch 1Set  RH1007	10181-Two Speed Shaft 1pc  RH1007	10182-50T Two Speed Gear 1pc  RH1007	10183-45T Two Speed Gear 1pc  RH1007
10185-Battery Cover (EP) 1pc  RH1016/RH1017	10188-Battery Post 2sets  RH1016/RH1017	10189-Post for Rear Spur Gear Cover 2pc  RH1016/RH1017	10190-Motor Mount (EP) 1pc  RH1016/RH1017
10191-Slipper Complete (EP) 1set  RH1016/RH1017	10192-Slipper Pad (EP) 2pc  RH1016/RH1017	10193-Slipper Gasket (EP) 2pc  RH1016/RH1017	10194-65T Spur Gear (EP) 1pc  RH1016/RH1017
10195P-Slipper Shaft (EP) 1pc  RH1016/RH1017	10196-Slipper Spring Bracket (EP) 1pc  RH1016/RH1017	10197-Slipper Spring (EP) 1pc  RH1016/RH1017	10251-Flat Head Hex Screw M3*36 6p 
10199-Slipper Drive Cup 1pc  RH1016/RH1017	10200-BEARING BRACKET (EP) 1pc  RH1016/RH1017	10323-Pinion Gear 23T (EP) 1pc  RH1016/RH1017	10324-Sway Bar 2Sets  RH1006/RH1007/RH1016/RH1017
10325-EP Chassiss plate 1pc  RH1016/RH1017	10716-Rear Spur Gear(EP) 1pc  RH1016/RH1017	10327-Upper plate(EP) 1pc  RH1016/RH1017	10328-Center Drive Shaft (EP) 1pc  RH1016/RH1017

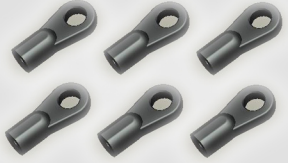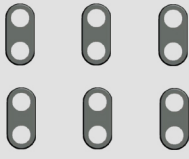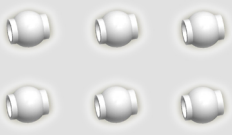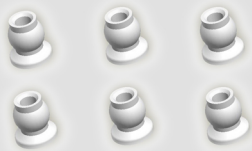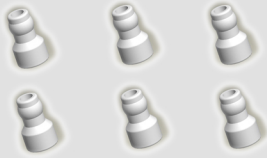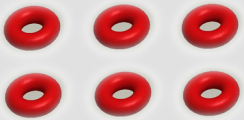
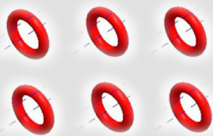
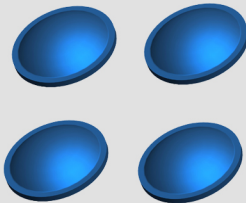
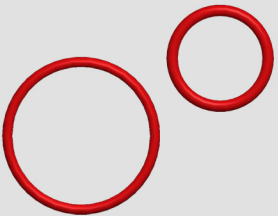
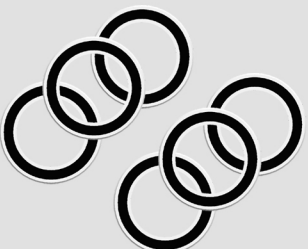
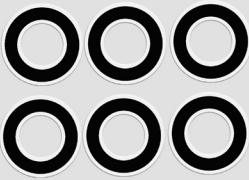
Part List

85034-Body Clip (Medium Size) 6pcs 	85029-Body Clip (Small Size) 6pcs 	10214-Shock Ball End 6pcs 	10215-Servo Link Ball End 6pcs 
10216-Steering Linkage Ball End 6pcs 	10217-Rear Upper Linkage Ball End 6pcs 	10218-Sway Bar Fix Plate 6pcs 	10219-Sway Bar Holders 6pcs 
10220-Ball A 6pcs 	10221-Ball B 6pcs 	10222-Ball C 6pcs 	10223-Ball D 6pcs 
10224-Shock O-ring (Lower) 6pcs 	10225-Diff O-ring Seal 6pcs 	10226-Shock Seal Cover 4pcs 	10227-Tuned Pipe Seal & Fuel Tank Seal 1set 
10228-Pin ϕ 2*10 6pcs 	10229-Pin ϕ 2*11 6pcs 	10329-Hinge Pins (long & short) 1sets 	10231-One Way Bearing 3pcs 
10232-Ball Bearing 15*10*4 6pcs 	10233-Ball Bearing 10*5*4 6pcs 	10234-Metal Bushing 10*5*4 6pcs 	10235-Ball Bearing 8*5*2.5 6pcs 





Part List

11068-C clip-7.3mm 4pc 	RH5190-E clip-4mm 6pc 	10237-E clip-2.5mm 6pc 	RH5102-Nylon Lock Nut M3 6pc 
RH5103-Nylon Lock Nut-M4 6pc 	85148-Round Head Self Tapping Hex Screw 2*6 4pcs 	10238-Round Head Self Tapping Hex Screw 2*10 6pc 	85179-Round Head Self Tapping Hex Screw 3*15 8pc 
10239-Round Head Self Tapping Hex Screw M3*6 6pc 	10240-Button Head Hex Screw M3*8 6pc 	10241-Button Head Hex Screw M3*10 6pc 	85184-Button Head Hex Screw M3*12 6pc 
10242-Button Head Hex Screw M3*14 6pc 	85144-Ring Self Tapping Screw 3*4 4pc 10256-Ring Self Tapping Screw 3*6 6pc 	RH5116-Set Screw M3*3 6pc 	RH5117-Set Screw M4*4 6pc 
RH5118-Button Head Hex Screw M4*10 6pc 	RH5562-Cap Head Hex Screw M3*8 6pc 	10243-Cap Head Hex Screw M3*10 6pc 	85182-Cap Head Hex Screw M3*10 6pc 
10244-Cap Head Hex Screw M3*14 6pc 	85118-Cap Head Hex Screw M3*15 6pc 	10245-Cap Head Hex Screw M3*18 6pc 	85185-Cap Head Hex Screw M3*25 6pc 

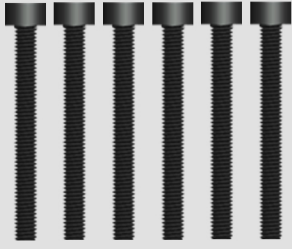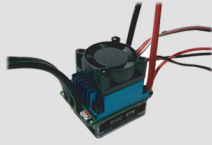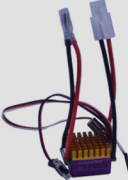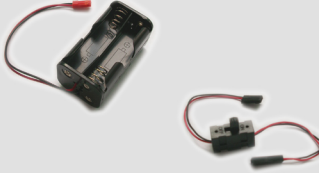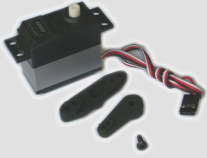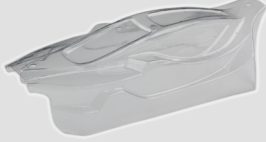Part List

10246-Cap Head Hex Screw M3*28 6p 	10247-Flat Head Hex M3*8 6pc 	85125-Flat Head Hex Screw M3*10 8p 	10248-Flat Head Hex Screw M3*12 6p 
10249-Flat Head Hex Screw M3*14 6p 	85127-Flat Head Hex Screw M3*18 3p 	10250-Flat Head Hex Screw M3*20 6p 	10253 - 1/10 Charger CE 1pc 10254 - 1/10 Charger UL 1pc 10255 - 1/10 Charger BS 1pc 
85274-Li-Po 2700mAh 7.4V 1pc 	H0068 - 2.4GHz Transmitter 1pc 	H0026 - Brushless ESC 1pc 	H0050-40A ESC 1pc 
H0028 - 3650 Brushless Motor 1pc 	H0029 - 550 Brushed Motor 1pc 	H0030 - Ni-MH 7.2V 1800mAh 1pc H0031 - Ni-MH 7.2V 3000mAh 1pc 	H0012 - Battery Case 1pc RH5189 - Receiver Switch 1pc 
H0011 - 3kg/cm Servo 1pc 	R0068- Clear Body (GP) 1pc R0069- Clear Body (EP) 1pc 	R0070- Printed Body (GP) 1pc R0072- Printed Body (EP) 1pc 	R0071- Printed Body (GP) 1pc R0073- Printed Body (EP) 1pc 
R0074- Printed Body (EP) 1pc 	R0075-Buggy Tail Wing (Black) 1pc R0076-Buggy Tail Wing (Brown) 1pc R0077-Buggy Clear Tail Wing 1pc 	R0213- Printed Body (EP) 1pc 	R0213R- Printed Body (EP) 1pc 

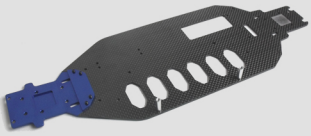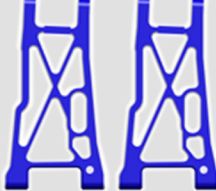Upgrade Parts List

10961 - Front Shock Plate (Carbon) 1Set 	10962 - Rear Shock Plate (Carbon) 1Set 	10905-Battery Cover (Carbon) 1set  RH1016/RH1017	10906-Body Post (AL) 2pc  RH1016/RH1017
10907-Front Shocks (AL) 2pc  RH1006/RH1007/RH1016/RH1017	10908-Rear Shocks (AL) 2pc  RH1006/RH1007/RH1016/RH1017	10911 - Steering Ackerman (AL) 1pc  RH1006/RH1007/RH1016/RH1017	10912 - Front Susp. Holders (AL) 1Set  RH1006/RH1007/RH1016/RH1017
10913 - Front & Rear Brace(AL) 1Set  RH1006/RH1007	10914 - Rear Susp. Holders (AL) 1Set  RH1006/RH1007/RH1016/RH1017	10915 - Rear Hub Carrier (AL) 2pc  RH1006/RH1007/RH1016/RH1017	10916-Front Top Plate (Carbon) 1pc  RH1006/RH1007
10917 - Steering Knuckle Arm (AL) 2Set  RH1006/RH1007/RH1016/RH1017	10918 - Wheel Hub (AL) 4pc  RH1006/RH1007/RH1016/RH1017	10919 - Upper Plate (AL) 1pc  RH1006/RH1007	10920 - Tuned Pipe (AL) 1Set  RH1006/RH1007
10921 - Chassis Brace mount (AL) 1pc  RH1006/RH1007	10960-Rear CVA drive Shaft 1set 	10923 - Alum Steering Arm 2pc  RH1006/RH1007/RH1016/RH1017	10924 - Alum Knuckle Arm 2pc  RH1006/RH1007/RH1016/RH1017
85265 - Heatsink 1pc  RH1016/RH1017			
10925-Chassis Plate (AL+Carbon) 1Set  RH1016/RH1017	10926-Upper Plate (Carbon) 1pc  RH1016/RH1017	10927-Front Lower Susp. Arm (AL) 2pc  RH1006/RH1007/RH1016/RH1017	10928-Rear Lower Susp. Arm (AL) 2pc  RH1006/RH1007/RH1016/RH1017