


FP7900 Android 10 POS USER GUIDE

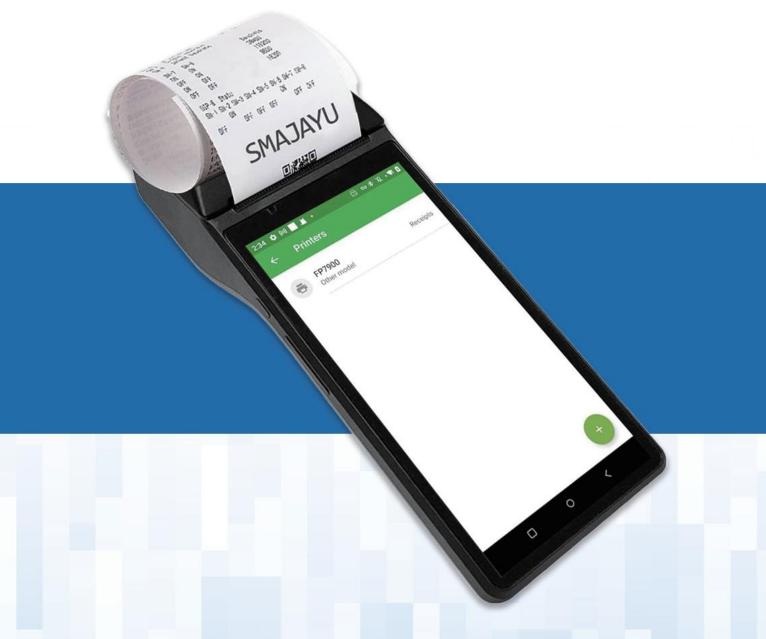

SZFP TECHNOLOGY LIMITED

Address:Room 213,Building 1,Mingliang Science Park,No.88,Zhuguang North Road,Taoyuan Street,Nanshan District,Shenzhen,China,518055. Eml:sales@szfptech.com.

Contents

1.0. Product instructions1	
2.0. Package List1	
2.2. Installation Guidance2	
2.2.1. Install the battery2	
2.2.2. Install SIM/SAM/TF card3	
2.2.3. Power ON/OFF the device3	
2.2.4. Install the printer paper4	
3.0. Operation5	
3.1. Bluetooth Printer5	
3.2. Web Print7	
3.3. Third-party APP9	
3.4. Barcode Scanner10	
3.5. NFC11	
4.0. Technical Specifications11	
5.0. FAQ12	
6.0. Cautions12	
7.0. Information to User13	

Productinstructions



Package List



- 1 * FP7900 POS Terminal
- 1 * Li-ion Battery
- 1 * Thermal Paper Roll
- 1 * Power Adapter
- 1* USB Cable



Installation Guidance

Install the battery

- ① Open the battery cover of the device
- ② Connect the cable of the battery to the battery connector on the machine and put the battery to its place.(Tag label on the battery upwards)
- ③ Close the battery cover

^{*}Please check the product video [How to Insertthe SIM Card]



Battery Usage Tips:

- Do not use the battery in direct sunlight or smoky and dusty environments.
- Prevent fierce vibration, strike or beat.
- If the battery is deformed or damaged, replace immediately.
- Charging time should not exceed 24 hours. Over-charging or over-discharging may damage the battery.



• If the product is not being used for an extended period, whether in storage or otherwise, make sure to recharge the battery at least every 6 months.


② Install SIM/SAM/TFcard

- ① Open the battery cover and remove the battery
- ② Insert SIM/SAM/TF cards into the card slot.

NOTE

- Confirm the machine is turned off when you install or uninstall the SIM/SAM card, or your card will be damaged.
- Do not paste any label on the SIM/SAM card to influence your card thickness, or it may result in loading or removing the card cannot be carried out smoothly.





SIM Card

3 Power ON/OFF the device

Power on

after installed battery/connect power adapter, press power bottom for 2s, screen on,device goes to working mode;

Power off

press power bottom for 2s,choose power off item,screen off, device goes to power off mode.



4 Install the printer paper

Open the printer cover, put the thermal paper roll correctly as shown, and close the cover.

NOTE

- When install thermal paper, we need the side coated with thermal media facing the printer heating plate, or you cannot print out the characters correctly.
- The temperature is high on the heating plate, please do not touch it without cooling.





Operation


Bluetooth Printer

1 If APP use bluetooth printing, set Bluetooth of POS terminal.

As following steps.

Setting->Connected Devices->Pair new device->FP7900 printer.

2 Select "FP7900 Printer".

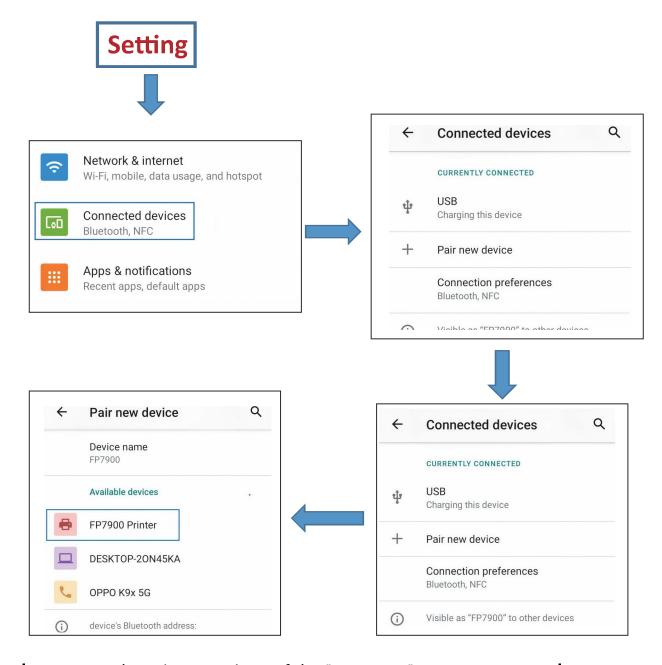


(Below we use the printer settings of the "Loyverse" App as an example)



Loyverse APP printer setting:

3 Setting as the below shown.

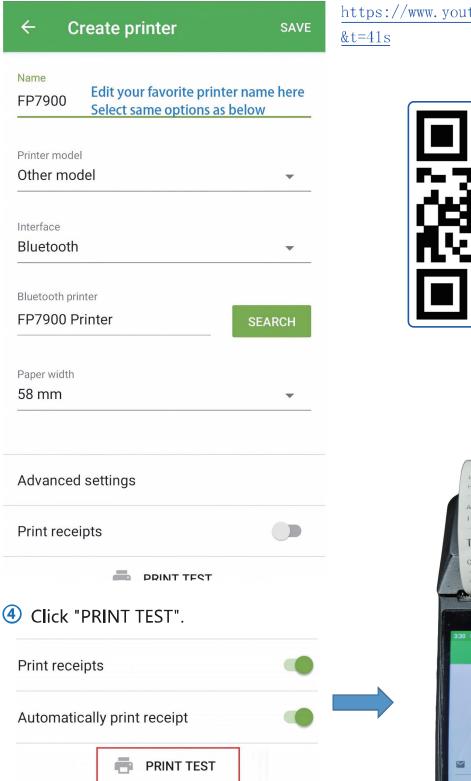

Operation video link (QR code):

https://www.youtube.com/watch?v=2LXsi0sdqtI &t=41s





(5) A Test receipt will pop up automatically that means Bluetooth printer is ready.




Web Print

If printing a receipt from website, Download printer service from link(QR code):


https://drive.google.com/drive/folders/1K2XabVjSIx9VKJpYWVveR6Q4SnGWkFmN

- 1 Install "Internal Printer.apk"
- 2 Open the web page you want to print in your browser.
- (3) Click "Share..".
- 4 Swipe left to find "Print" and click.
- **Select "Internal Printer"** from the drop-down menu in the upper left corner, then click the print button.




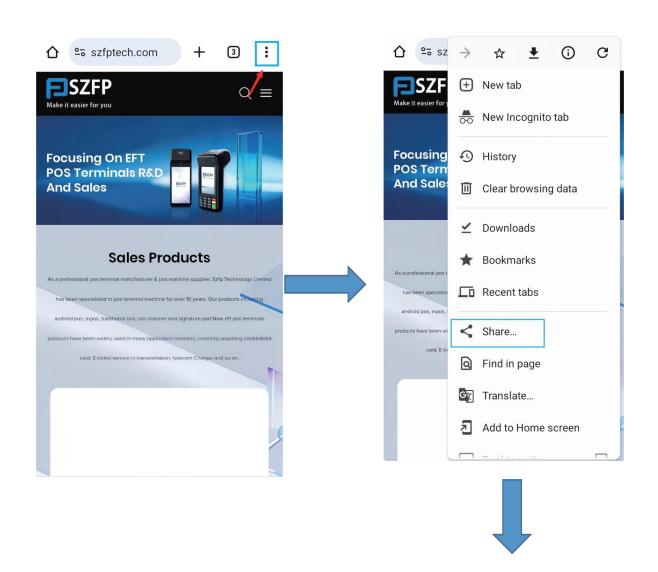



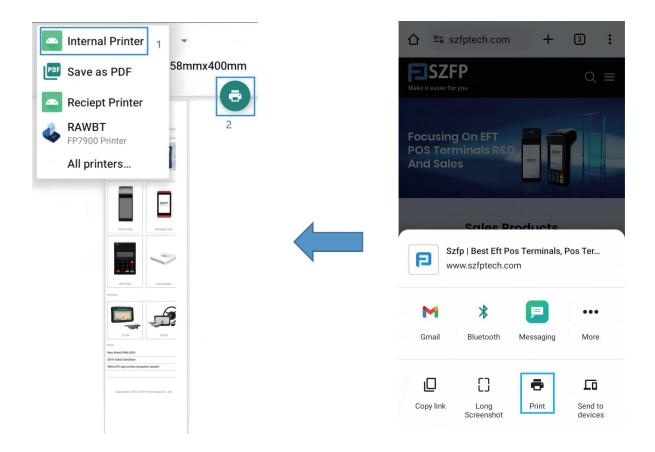

For the printing size of web pages, "Internal Printer" provides two options: 58mm*400mm/80mm*450mm. You can choose the most suitable size to print your web page.

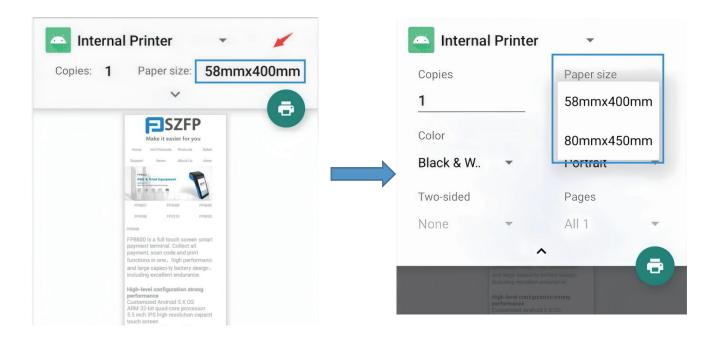



Third-party APP

The FP7900 supports some third-party applications to connect and use Bluetooth printer. If the printing part of this APP uses the ESC/POS command, then the FP7900 Bluetooth printer can be used.

we recommend:

Kyte: -Order Management


Loyverse: -Point of Sale and Inventory Control

Spice: -Restaurant & Retail Point of Sale System

Zobaze: -Inventory management, customer management,

store and restaurant accounting.

You can search and download them in the play store. You can also download other apps that can use ESC/POS commands, and use it to connect to the FP7900 Bluetooth printer for printing.

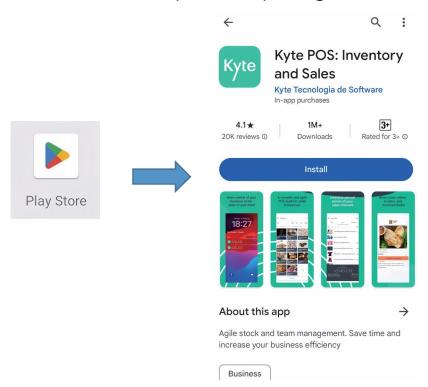


Tips: Before configuring the printer in the APP, please connect the "FP7900 Printer" via Bluetooth in the system settings. Please refer to page 6 for details.



Barcode Scanner

The standard FP7900 uses camera to scan. The Fast scan key temporarily unavailable. You can download a third-party scanning app on Google play to use the scanning function.

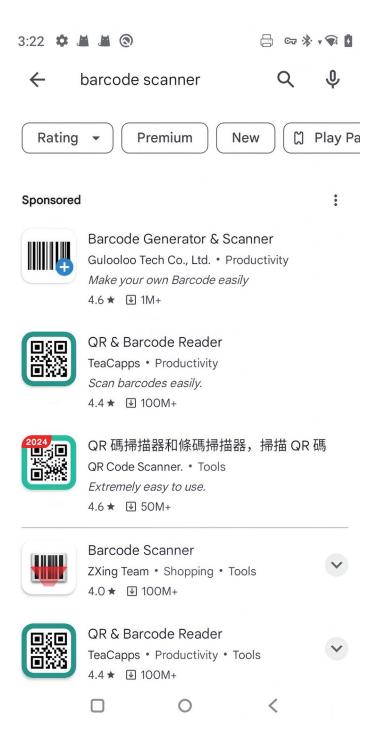



NFC

Just tap the NFC card on the NFC field area. The FP7900 supports standard Android NFC. You can also download NFC related apps from Google play to use the NFC function.

Please ensure the following two points before using NFC.

- 1.Make sure NFC is on in setting: "Setting->Connected devices->Connection preferences-> NFC (on)"
- 2. NFC card must support Android NFC which is the type can be read on phone for payment. FP7900 NFC payment is same way as Android phone NFC payment.

Technical Specifications

Model	FP7900	
OS	Safedroid OS (based on Android 10.0)	
CPU	Qualcomm Octa-Core ARM Cortex-A53 1.8GHz	
Memory	16GB ROM EMMC; 2GB RAM LPDDR3	
Display	ay 6.0 inch TFT IPS LCD, resolution 1440*720	
Panel	Ultra sensitive capacitive touch screen, can work with gloves and wet fingers	
Dimensions	ons 215mmX81mmX17mm (max 51mm)	
Weight	380g (Battery included)	
Keys	Physical keys: power on/off, Volume + /-, quick scan key	
Input	Chinese/English, and supports handwriting and soft keyboard	
WIFI	IEEE 802.11 a/b/g/n ,support 2.4GHz and 5GHz	
Bluetooth	BT 4.2 LE and earlier	
4G	European version(Default): FDD-LTE: B1/B2/B3/B4/B5/B7/B8/B20/B28; TDD-LTE: B38/B39/B40/B41 American version(Optional): FDD-LTE: B2/B4/B5/B12/B13/B17/B25/B26; TDD-LTE: B38/B40/B41	
3G	European version(Default): WCDMA: B1/B2/B5/B8; TD-SCDMA: B34/B39 American version(Optional): WCDMA: B2/B4/B5	
2G	GSM/GPRS/EDGE: 850/900/1800/1900MHz	
Printer	High-Speed Thermal Printer; 58mm printing paper; 40mm paper roll; Support bluetooth printer mode, support ECS mode	
Rear Camera	a 5MP AF Camera with LED flash	
Satellite Positioning	Support GPS(A-GPS)/ Bei-Dou/ Glonass or Galileo	
LEDS	3PCS for indication	
Audio	Speaker, Microphone	
NFC	13.56MHz, Supports 14443A/ 14443B (Android native NFC)	
Micro SD Card Slot	1 Pcs support up to 128GB	
SIM Card Slot	1 Pcs Micro SIM	
PSAM Card Slot	1 Pcs Conforms to ISO7816 standard	
USB Port	1 Pcs Type C USB	
Battery	ry Li-ion battery, 7.6V/2600mAh	
Charging Port	ng Port Type C USB Port, 5V DC/2A	
Operating Temperature	-10°C to 50°C	
Storage Temperature	-20°C to 70°C	
Humidity	5% to 95% Relative Humidity, Non-Condensing	
Electromagnetic	CE, Rohs, FCC	
Fingerprint (Optional)	Semiconductor capacitance,18mm x 12.8mm imaging area; 256 x 360 pixel array, Crossmatch FBI certified 508dpi	
Fiscal Module (Optional)	Russian Format	
Barcode Scanner (Optional)	Symbol 4710 2D Image Engine, Support 1D and 2D symbologies	



FAQ

Trouble Shooting and advised solution:

Fault phenomenon	Elimination methods
No display on screen	1. check if battery installed right
No display off screen	2. check if battery is enough for work
Cannot read card	1. check if card slot is clean
Cannot read card	2. check if card has enough magnet info
NEC card data road incorrectly	1. ensure card has NFC function
NFC card data read incorrectly	2. ensure read card in NFC area
	3. ensure card/mobile be placed smoothly and steady
	in NFC area
Camera failure	1. ensure camera not be covered
Camera failure	2. ensure if enough light for camera to work
Printer do not work	1. ensure paper is sealed correctly
Filliter do not work	2. check if it has right size paper, and installed right
	3. check If low battery
Communication failure	1. check if sim card inserted, if card contactor clean
Communication failure	2. ensure there is signal
	3. try to re-establish communication

Cautions

- Strictly observe the following instructions while install and connect the device. Connect to stable power socket, try to avoid charging it together with high-power machines like air-conditioner.
- Please try not to use the device during thunderstorm in case of lightening stroke, and power off as well as cut off its connection to host machine.
- This is electrical product, be sure not let anything like pin, thumbtack, wire or water slip into the device, or short circuit will be caused to destroy device.
- Be sure no heavy pressure on device or place anything on it.
- Prevent fierce vibration, strike or beat.
- Ensure good working condition, never use it in humid, high temperature, sunburn, dustiness or frost environment, never get close to strong electromagnetic field, never use device under flammable and explosive conditions.
- Avoid plug or swap any part or peripherals when power is on, or it may cause inner hardware damage. Shutoff device before cut power.



- This device is integrated with Lithium battery, change our original battery if needed. Other types battery may cause damage to device. Contact us or our distributor when you need to change battery.
- Cut off power and stop operation if device breakdown. DO NOT disassemble device yourself.
- Avoid sleet, solar exposure, mechanical shock or extrusion. Be careful when delivering.
- Device should be kept in original package temperature of warehouse should be 20°C~60°C, relative humidity should be 5%~95%. No noxious gas flammable, explosive or mordant chemicals are allowed to be together, ensure no mechanical shock, impact or high magnetic.

Information to User

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- —Reorient or relocate the receiving antenna.
- —Increase the separation between the equipment and receiver.
- —Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- —Consult the dealer or an experienced radio/TV technician for help.

Important: Change or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

Product Description

FP7900 Qualcomm Octa-Core ARM Cortex-A53 1.8GHz; Safedroid OS (based on Android 10.0); Massive memory: 2G RAM + 16G ROM; 6.0 inch TFT IPS LCD, resolution 1440*720; Full bands for global coverage: 4G/3G/2G, WLAN, Bluetooth, VPN; Camera for quickly QR code scan & Symbol 2D scanner as option; The grand 7.6V/2600mAh battery + extraordinary power management design ensures a full day duration; Super NFC for full scenarios such as transportation, logistic, and ID control; 58mm thermal receipt printing.

Widely used in all applications such as food trucks, cafes, beverages and food, pizza, bakeries, restaurants, grocery stores, fashion and boutiques, convenience stores, jewelry, car washes and more. Recommanded software app such as yelo, Kyte and LOYVERSE.



+86-13823325452



www.szfptech.com



sales@szfptech.com