

Mirror introduction

Bathroom mirror with Light



Usage Method:

1. short press the light button, turn the light on/off, and quickly touch and turn it off within three seconds. Change the color temperature, press and hold to adjust the brightness and darkness
2. Short press the anti-fog button to turn on/off the anti-fog
3. In standby mode, press and hold the anti-fog button to enter the setting mode, and lightly press the anti-fog button ,Key increase/decrease, press and hold to save settings

InstallationInstruction

Before Installation	* Please make sure that the installed wall is a load bearing wall. * Please check to avoid wires or water pipes when drilling.
---------------------	--

Wiring Instructions




Screw*2
Expansion screw*2


Power Cord

Reserved Lamp Line

Option A

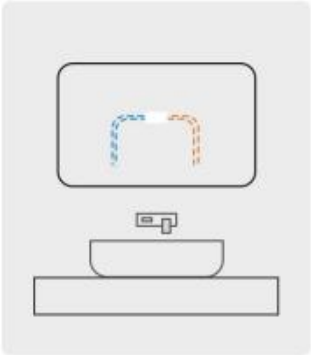

Option B

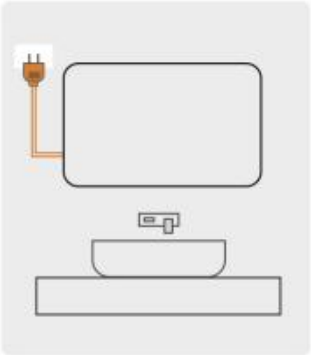

Cut out the plug and the reserved wire connection port, which can be hidden on the back of the mirror

The mirror plug is directly plugged into the wall socket for use (the socket cannot be on the back of the mirror)

Tools Needs (not included in the package)



Pencil



Electric Drill



Hammer




Tape Measure




Level Ruler



Screwdriver

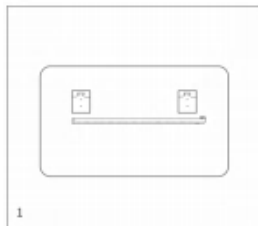


1

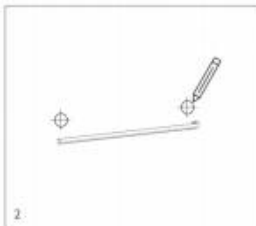

2



3

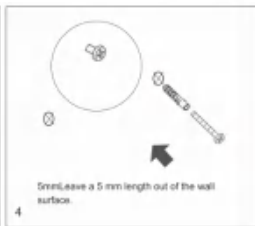

4

1. Measure the hanger spacing Measure the distance between 2 hangers with a tape measure
2. Mark drilling locations Determine the specific locations of drilling with a tape measure, and mark it out with a pencil.
3. Drill holes with a percussion drill Drill 6-8 mm holes in the wall at marked locations with a percussion drill.
4. Put an expansion tube into each hole and put a screw into each tube Strike expansion tubes into drill holes with a hammer and put screws into expansion tubes with a screwdriver. Leave a 5 mm length out of the wall surface

More attention:

1. Please take care to ensure that all metal parts are kept away from electricity
2. For indoor use only.



Fragile Handle with care

Note:

The product is fragile. Be careful during unpacking and installation.

The product works from -45°C to $+35^{\circ}\text{C}$.
The product should be cleaned by standard detergents and soft cotton cloth.